

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [TELESIN](#) /

› [TELESIN Floating Hand Grip for GoPro Hero 13 12 11 10 9 8 7+ Series, DJI, Insta360 Most Action Cameras, Underwater Selfie Stick Suitable for Surfing, Snorkeling, Underwater Shooting](#)

TELESIN GP-MNP-300-YL

TELESIN Floating Hand Grip Instruction Manual

Model: GP-MNP-300-YL

INTRODUCTION

The TELESIN Floating Hand Grip is designed to enhance your action camera experience, especially in aquatic environments. This versatile accessory provides a secure grip and ensures your camera remains buoyant, preventing loss during water-based activities such as surfing, snorkeling, and general underwater shooting.



Image: The TELESIN Floating Hand Grip, shown with an action camera mounted, highlighting its ergonomic design and bright yellow accents.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Floating Hand Grip
- Anti-slip Lanyard
- Swivel 1/4" Screw

SETUP

1. Attaching Your Action Camera:

Align your action camera's mounting bracket with the universal mount on the top of the floating hand grip. Secure it using the provided thumb screw. For cameras requiring a 1/4" screw mount, use the included Swivel 1/4" Screw adapter.

Extensive Compatibility

Fits all for gopro models and other cameras



Image: The hand grip demonstrating compatibility with different action cameras and smartphones (with adapter, not included).

2. Attaching the Anti-slip Lanyard:

Thread the anti-slip lanyard through the designated loop at the bottom of the hand grip. Ensure it is securely fastened to prevent accidental drops, especially in water.


Non-slip Construction For Secure Grip

Provides handheld support & Comfortable grip

Weight
80 Gram



Hand Grip Height
7-inches

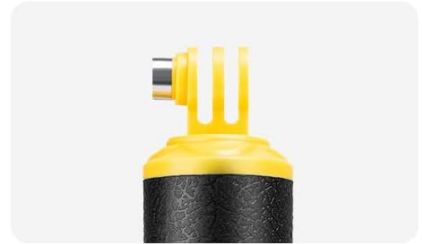

Adaptive mounting head



Silicone non-slip handle



Easily identifiable colors

Image: Detailed view of the hand grip's non-slip texture and the secure lanyard attachment point at the base.

OPERATING INSTRUCTIONS

General Use

Hold the hand grip firmly by its non-slip rubberized handle. The ergonomic design provides a comfortable and secure grip for extended shooting sessions on land or in water.

Take It to Shoot More Shots



Image: The floating hand grip and accessories neatly packed inside a backpack, demonstrating its portability.

Underwater Shooting

The primary function of this hand grip is to provide buoyancy for your action camera in water. Its bright yellow base enhances visibility, making it easy to spot your camera if it detaches or is dropped. Always ensure the lanyard is secured to your wrist for added safety.

FLoats Your GoPro



Image: A child in a swimming pool using the TELESIN Floating Hand Grip with a GoPro, illustrating its use in water.

Action Camera Floating Hand Grip



Image: A person holding the TELESIN Floating Hand Grip with an action camera in a swimming pool, capturing moments.

Internal Storage Compartment

The hollow design of the handle allows for a small, waterproof storage compartment. To access it, unscrew the yellow cap at the bottom of the grip. This space is suitable for storing small, lightweight valuables like keys or cash. *Note: Overloading the compartment with heavy items may compromise the grip's buoyancy.*

Extra Security

Double protection against loss



Image: The hand grip's base unscrewed to reveal the internal storage compartment, with a key and lipstick for scale.

MAINTENANCE

- After each use in saltwater or chlorinated water, rinse the hand grip thoroughly with fresh water.
- Allow the grip to air dry completely before storing.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Periodically check the integrity of the silicone seal on the storage compartment cap to ensure continued waterproofing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Hand grip does not float or sinks slowly.	<p>Camera attached is too heavy.</p> <p>Storage compartment is overloaded with heavy items.</p> <p>Air trapped inside the handle is insufficient.</p>	<p>Ensure your camera's weight is within the recommended limit (Max 400 Grams).</p> <p>Remove heavy items from the storage compartment. Only store lightweight items like cash or small keys.</p> <p>Ensure the handle is sealed properly to maintain air buoyancy.</p>
Water inside the storage compartment.	<p>Cap not securely tightened.</p> <p>Seal is damaged or dirty.</p>	<p>Tighten the yellow cap firmly before water use.</p> <p>Inspect the silicone seal for any debris or damage. Clean or replace if necessary.</p>

For further assistance, please contact TELESIN customer support.

SPECIFICATIONS

Brand	TELESIN
Model Number	GP-MNP-300-YL
Item Weight	2.82 ounces (80 Grams)
Maximum Weight Recommendation	400 Grams
Package Dimensions	9.49 x 5.91 x 1.61 inches
Compatible Devices	GoPro Hero 11, Hero 10, Hero 9, Hero 8, Hero 7, Hero 6, Hero 5, Hero (2018) 4 3 Hero Session Max, DJI Osmos Action, Geekpro, YI Action Cameras, and other action cameras.
Color	Silver, Yellow, Black (handle)

WARRANTY AND SUPPORT

TELESIN offers 24-hour after-sales service and 2 years of premium support for this product. For any inquiries or assistance, please refer to the contact information provided on the official TELESIN website or your purchase documentation.