

Decathlon 8648382

Decathlon Air Seconds 4.1 Inflatable Fresh And Black Family Tent User Manual

Model: 8648382 | Brand: Decathlon

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Decathlon Air Seconds 4.1 Inflatable Fresh And Black Family Tent. Designed for ease of use and comfort, this 4-person tent features an inflatable structure for quick pitching and a Fresh & Black fabric for improved light and heat management. Please read this manual thoroughly before using your tent to ensure a safe and enjoyable camping experience.



Image: The Decathlon Air Seconds 4.1 tent fully pitched, showcasing its spacious design and integrated bedroom.



Image: The tent neatly packed into its carry bag, highlighting its portability.

SPECIFICATIONS

Key Product Specifications

Feature	Detail
Model Number	8648382
Capacity	4 Person
Bedroom Dimensions	280 x 210 cm (110" x 82")
Living Room Area	6.5 m ² (70 sq ft)
Floor Mat	Integrated with zip

Feature	Detail
Material Type	Polyurethane (Waterproof)
Season Rating	4 Season
Packed Dimensions	80 x 30 x 28 cm
Weight	18.5 kg (33 lbs 1.11 oz)
Color	Sand / Cappuccino

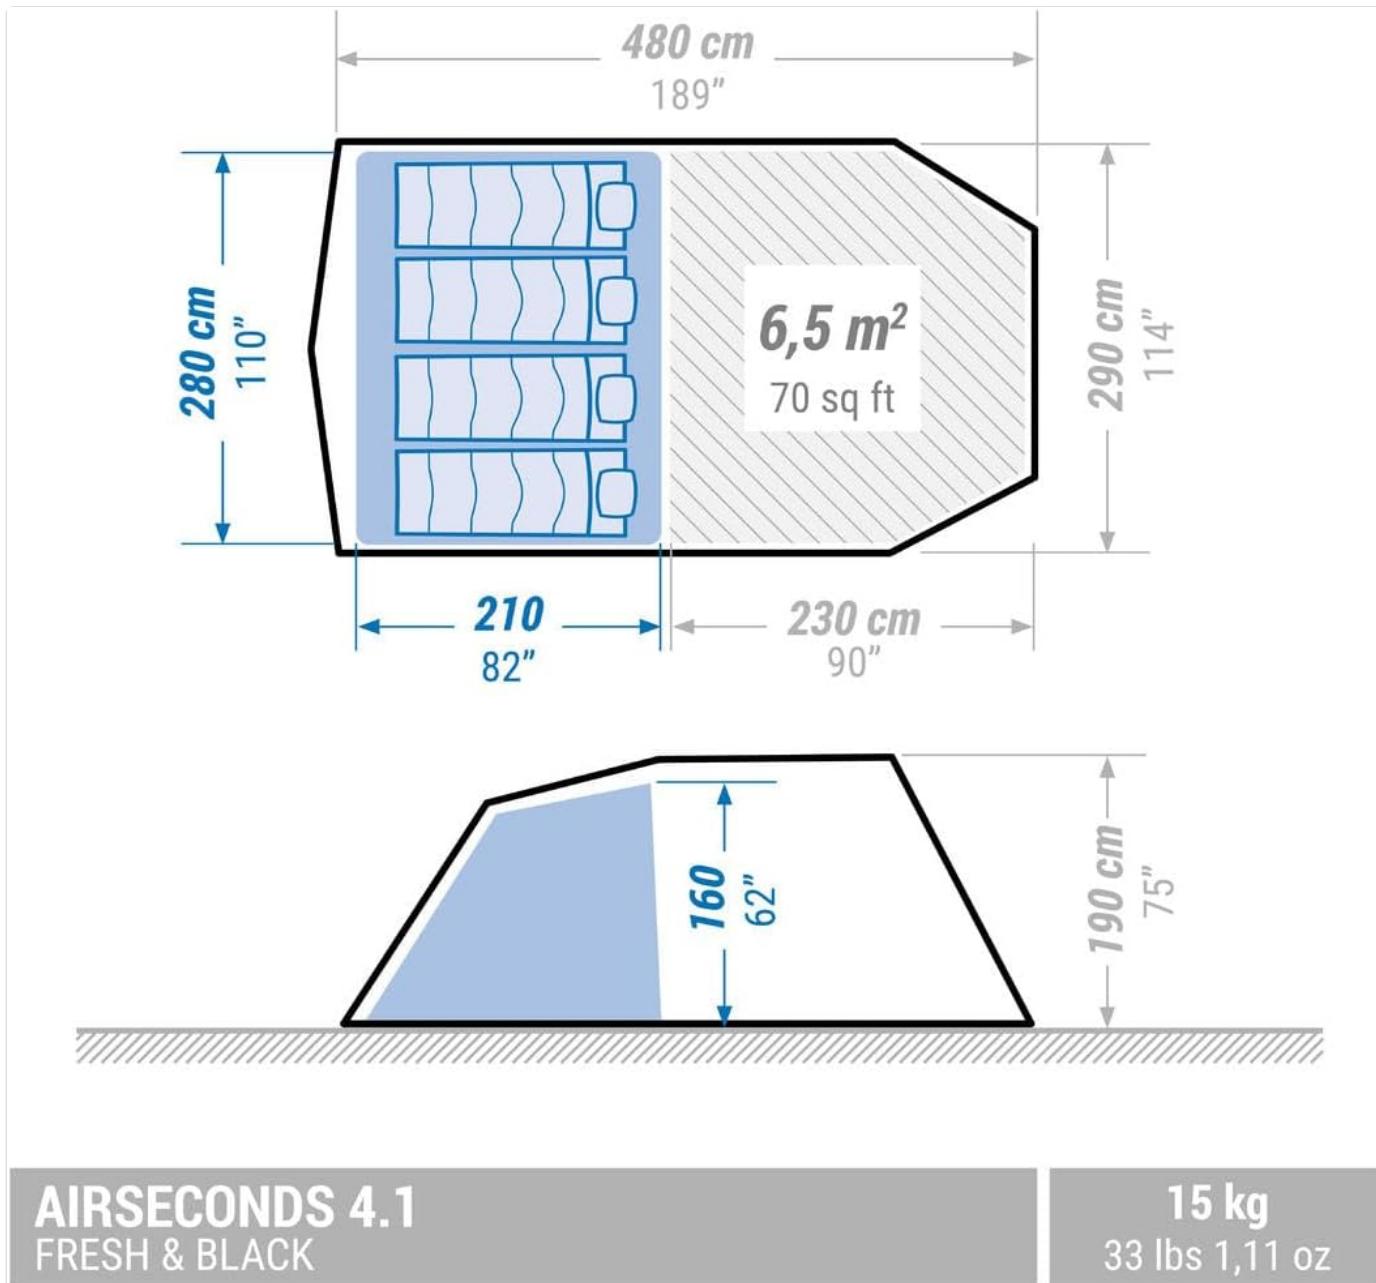


Image: Detailed diagram illustrating the internal and external dimensions of the tent, including bedroom and living area sizes.

SETUP INSTRUCTIONS

Follow these steps to correctly set up your inflatable tent. It is recommended to practice pitching the tent in a familiar environment before your first trip.

- 1. Unpack and Lay Out:** Remove the tent from its carry bag and lay it flat on the ground in your desired pitching location. Ensure

the ground is clear of sharp objects.



Image: The tent body laid out flat on the ground, ready for inflation.

2. **Connect the Pump:** Locate the inflation valves on the tent's inflatable beams. Connect a compatible pump (not included) to the valve.



Image: Close-up of the tent's inflation valve with a pump nozzle inserted, ready for inflation.

- 3. Inflate the Beams:** Begin inflating the air beams. The tent will start to take shape as the beams fill with air. Inflate until the beams are firm but not over-inflated. Refer to the recommended pressure if indicated on the tent or pump.



Image: The tent partially inflated, showing the air beams beginning to form the tent's structure.

- 4. Secure with Pegs:** Once the tent is fully inflated and standing, secure all guylines and pegging points to the ground using the provided pegs. This ensures stability, especially in windy conditions.
- 5. Attach Bedroom (if separate):** If the inner bedroom is not pre-attached, clip it into place inside the main tent structure.
- 6. Adjust Guylines:** Adjust the tension of the guylines to ensure the tent is taut and stable.

OPERATING YOUR TENT

Living Space and Entry

The tent features a spacious living area for comfort and utility. The main entrance can be rolled up or propped open for ventilation and easy access.



Image: The interior living space of the tent, showing ample room for camping furniture and gear.

Bedroom Area

The integrated Fresh & Black bedroom is designed to keep the sleeping area dark and cool, even in bright sunlight. It can comfortably accommodate up to four people.



Image: The interior of the Fresh & Black bedroom, showing space for sleeping bags or air mattresses.

Ventilation and Windows

The tent is equipped with multiple ventilation points and windows to ensure good airflow and reduce condensation. Open the vents and windows as needed for comfort.

- **Windows:** Clear windows allow light into the living area. They can be covered with internal blinds for privacy.



Image: A clear window panel on the tent, providing natural light.

- **Ventilation Flaps:** Strategically placed ventilation flaps, often with mesh, help circulate air and prevent stuffiness.



Image: An internal view of a ventilation flap, showing its design for airflow.

Internal Storage

The tent includes internal pockets for organizing small items and keeping your living space tidy.



Image: Built-in mesh pockets inside the tent for convenient storage of small personal items.

MAINTENANCE

Proper maintenance will extend the life of your tent and ensure its performance.

- **Cleaning:** Clean the tent with a soft brush and water only. Do not use detergents or harsh chemicals, as they can damage the fabric's waterproofing.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odors. If you must pack it wet, unpack and dry it as soon as possible.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Repair:** For small punctures or tears, use a tent repair kit. For larger damage, contact Decathlon customer service or a professional repair service.
- **Groundsheet Care:** The integrated groundsheet is durable but can be damaged by sharp objects. Ensure the pitching area is clear.



Image: Detail of the tent's integrated groundsheet, showing its robust construction and attachment points.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Tent not standing firm after inflation	Insufficient inflation or loose guylines/pegs.	Ensure air beams are fully inflated to recommended pressure. Check and tighten all guylines and re-peg if necessary.
Condensation inside the tent	Poor ventilation, high humidity, or temperature difference.	Increase ventilation by opening vents and windows. Ensure adequate airflow.
Water leaking through fabric	Damage to waterproofing or seam tape.	Inspect for tears or worn areas. Apply seam sealer or repair patch. Ensure all zippers are fully closed.

Problem	Possible Cause	Solution
Difficulty packing the tent	Air not fully expelled, or not folded correctly.	Ensure all valves are open and air is fully squeezed out. Fold the tent systematically to match the original packed size.

WARRANTY AND SUPPORT

Your Decathlon Air Seconds 4.1 Inflatable Fresh And Black Family Tent comes with a **2-year warranty** covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For product support, warranty claims, or to purchase spare parts, please contact Decathlon customer service or visit their official website. You can find more information and contact details on the [Decathlon Australia Store on Amazon](#).

- **Returns Policy:** 30-day return policy for refund/replacement (seller: Amazon).
- **Free Delivery:** Available for eligible purchases.
- **Secure Transaction:** All purchases are secure.

© 2024 Decathlon. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.