

SWOFY M8

SWOFY HiFi MP3 Player M8 Instruction Manual

Lossless DSD High Resolution Digital Audio Music Player

INTRODUCTION

Thank you for purchasing the SWOFY HiFi MP3 Player M8. This portable high-definition audio player is designed to deliver exceptional lossless sound quality, supporting a wide range of audio formats. This manual provides essential information for setting up, operating, and maintaining your device to ensure optimal performance and longevity.

WHAT'S IN THE Box

- 1 x SWOFY HiFi Music Player M8
- 1 x 128GB Memory Card (pre-installed or separate)
- 1 x USB Cable
- 1 x User Manual (this document)


PRODUCT OVERVIEW

The SWOFY M8 features a robust design with intuitive controls for seamless music playback and navigation.

Device Layout



Figure 1: Front View of SWOFY M8 MP3 Player. Features a central screen, a large mechanical scroll wheel on the left, and control buttons (play/pause, next/previous, menu, back) on the right.

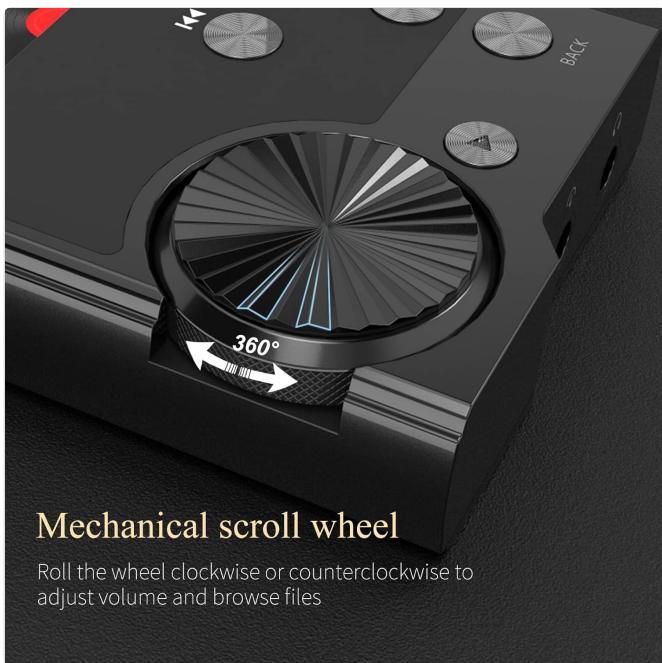

Mechanical scroll wheel

Roll the wheel clockwise or counterclockwise to adjust volume and browse files

Figure 2: Side View of SWOFY M8 MP3 Player. Shows the volume up/down buttons, a reset button, the USB charging/data transfer port, and the TF (microSD) card slot.



Figure 3: Mechanical Scroll Wheel. Roll the wheel clockwise or counter-clockwise to adjust volume and browse files.



Figure 4: Dual 3.5mm Balanced Outputs. The M8 provides a balanced output of 500 MW per channel for easy linking with headphones, audio equipment, or car audio systems.

SETUP

1. Charging the Device

Before first use, fully charge your SWOFY M8. Connect the provided USB cable to the device's USB port and the other end to a computer or a compatible USB wall adapter. The device screen will indicate charging status.

2. Inserting the Memory Card

The SWOFY M8 comes with a 128GB microSD card. Locate the TF card slot on the side of the device (refer to Figure 2). Gently insert the microSD card into the slot until it clicks into place. The device supports up to 256GB microSD cards for expanded storage.

3. Powering On/Off

To power on the device, press and hold the power button located on the top of the player until the screen illuminates. To power off, press and hold the same button until the screen turns off.

OPERATING INSTRUCTIONS

1. Navigating the Menu

Use the mechanical scroll wheel (Figure 3) to navigate through menu options. Press the center button of the scroll wheel or the 'Menu' button to select an option. Use the 'Back' button to return to the previous screen.

2. Transferring Music Files

To transfer music to your SWOFY M8, connect the device to your computer using the provided USB cable. The player will display "USB Connected" on its screen. Your computer will recognize the device as a removable storage drive (e.g., "SWOFY M8"). You can then drag and drop your audio files directly into the device's storage or the inserted microSD card.

Your browser does not support the video tag. This video demonstrates how to transfer music files to the SWOFY M8 MP3 Player by connecting it to a computer via USB and dragging and dropping files. It also shows the device's menu navigation and file playback.

Video 1: MP3 Player Digital Audio Player 128GB - Demonstrates file transfer and basic operation.


3. Playing Music

From the main menu, select 'Music'. You can browse by 'All Songs', 'Artists', 'Albums', 'Genres', or 'Folders'. Select a song using the scroll wheel and press the 'Play/Pause' button to begin playback. Use the 'Next' and 'Previous' buttons to skip tracks. Adjust volume using the dedicated volume buttons on the side of the device.

AUDIO FEATURES

Equalizer Settings

The SWOFY M8 features an 8-band professional tuning equalizer. From the main menu, navigate to 'Equalizer' to select from preset modes (Rock, Pop, Soft, Jazz, Classical, Techno) or customize your own sound profile.

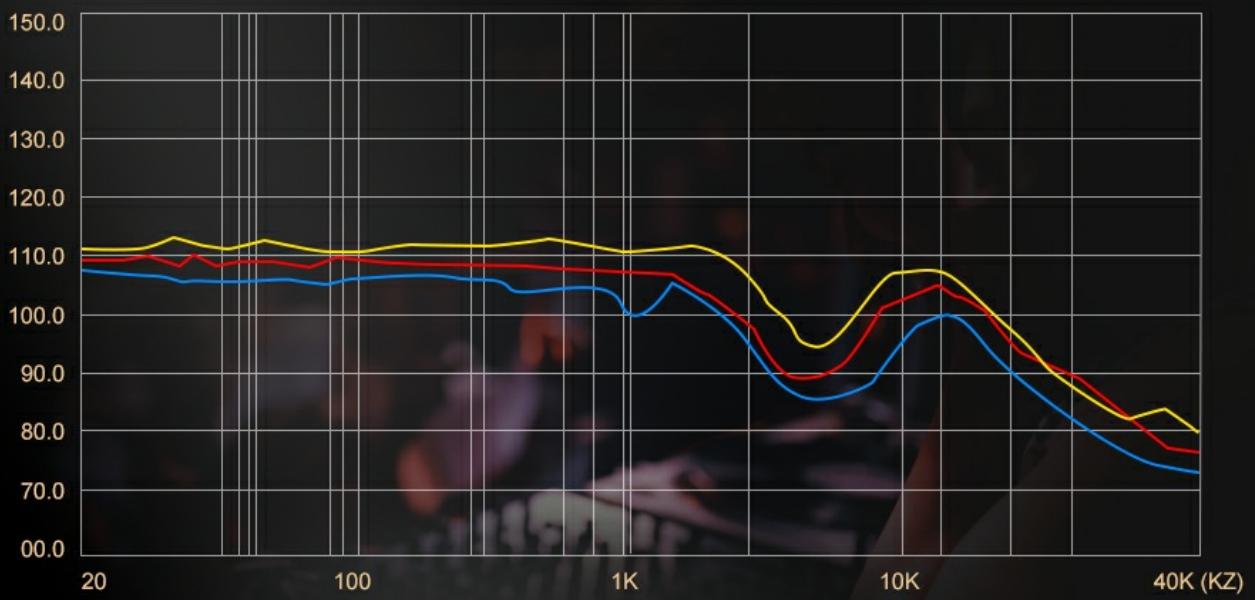

Treble: High pitch and clear sound with no sharp

Bass Drops: Deep and steady bass

Sound-stage: Enjoy your live concert with a sufficient sense of space

Figure 5: EQ Equaliser - 8-band professional tuning interface.

Supported File Formats

The M8 supports playback of a large number of HD native file formats, ensuring high-fidelity audio reproduction.

Supported formats include:

- MP1, MP2, MP3, AAC
- APE, ALAC, FLAC, WAV/PCM
- WMA, AIFF, DSF/DFF, OGG
- IMA/MS-ADPCM

Supported File Formats

MP1	MP2	MP3	AAC
APE	ALAC	FLAC	WAV/PCM
WMA	AIFF	DSF/DFF	OGG
IMA/MS-ADPCM			

M8 supports playback of a large number of HD native file formats, including MP3.WMA.ACC.OGG.WAVAPE.FLACAIFFDSD and so on. Gapless playback of popular formats is fully supported. Simply insert the complimentary microSD card.



Figure 6: Supported File Formats for SWOFY M8.

SPECIFICATIONS

Feature	Detail
Brand	SWOFY
Model Number	M8
Product Dimensions	3.5 x 2.4 x 0.82 inches
Item Weight	8.8 ounces
Memory Storage Capacity	128 GB (expandable up to 256 GB via microSD)
Screen Size	2 Inches
Color	Black
Connectivity Technology	USB
Special Feature	Hi-Res Audio, Portable
Compatible Devices	Laptop, Headphone, Personal Computer, Earphone
Media Type	SD Card
Battery Life	Approximately 12 hours of continuous play (based on typical usage)

TROUBLESHOOTING

Device Not Powering On

Ensure the device is fully charged. If the issue persists, try performing a reset using the reset button (refer to Figure 2) with a small pin or paperclip.

Music Files Not Appearing

Verify that the music files are in a supported format (refer to Supported File Formats). Ensure the files were correctly transferred to the device's internal storage or the microSD card. Disconnect and reconnect the device to your computer, or restart the MP3 player.

No Sound Output

Check that your headphones or audio equipment are properly connected to one of the 3.5mm output jacks. Increase the volume level using the volume buttons. Ensure the audio file is not corrupted.

Device Disconnects from Computer

Try a different USB port on your computer or a different USB cable. Ensure the cable is securely connected to both the device and the computer. Restart both the device and the computer.

MAINTENANCE

To ensure the longevity and optimal performance of your SWOFY M8 MP3 Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device's exterior. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Battery Care:** For long-term storage, charge the battery to about 50% every few months to prevent deep discharge.
- **Avoid Impacts:** Protect the device from drops and impacts, which can damage internal components or the screen.

WARRANTY AND SUPPORT

The SWOFY M8 HiFi MP3 Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact SWOFY customer service through their official website or the retailer where you purchased the product.

For more information, visit the [SWOFY Store on Amazon](#).