

[Manuals.plus](#) /

› [Hisense](#) /

› Hisense HP110 Party Rocker One Plus User Manual

## Hisense Party Rocker One Plus

# Hisense HP110 Party Rocker One Plus User Manual

Model: Party Rocker One Plus

## INTRODUCTION

---

The Hisense HP110 Party Rocker One Plus is a powerful portable party speaker designed to deliver high-quality audio and an immersive entertainment experience. Featuring 300W output, 15 hours of battery life, and versatile connectivity options, it's perfect for any gathering. This manual provides essential information for safe and effective use of your device.

## SAFETY INFORMATION

---

Please read all safety warnings and instructions before using this product to prevent injury or damage. Keep this manual for future reference.

- Do not expose the device to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble, repair, or modify the unit. Refer all servicing to qualified personnel.
- Keep away from water and liquids. The device has an IPX4 rating, meaning it is resistant to splashing water, but not submersion.
- Use only the specified power adapter and cables.
- Ensure proper ventilation around the speaker during operation.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Hisense HP110 Party Rocker One Plus Speaker
- Two Microphones
- Power Adapter
- User Manual (this document)
- Quick Start Guide
- Warranty Card

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Party Rocker One Plus speaker.



Figure 1: Hisense HP110 Party Rocker One Plus speaker and included microphones. The speaker features a black casing with illuminated speaker grilles, and the microphones are black with teal accents.

### Front Panel

- **Speaker Grilles:** Protects the drivers and features dynamic light effects.
- **Control Panel:** Located on the top, provides access to power, volume, mode selection, and other functions.

### Rear Panel / Ports

- **Power Input:** For connecting the power adapter.
- **USB Port:** For charging external devices or playing media.
- **Microphone Inputs:** Two inputs for the included microphones.
- **Guitar Input:** For connecting a guitar.

## SETUP

---

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the power adapter to the speaker's power input and then to a wall outlet. The charging indicator will show the charging status. A full charge provides up to 15 hours of playback. The speaker also supports car charging, reaching 0-100% in approximately three hours.

## 2. Connecting Microphones

Insert the microphone cables into the designated microphone input jacks on the speaker. The speaker supports two microphones for solo or duet karaoke.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press and hold the Power button on the control panel to turn the speaker on or off.

### 2. Bluetooth Pairing

1. Turn on the Party Rocker One Plus speaker.
2. The speaker will automatically enter Bluetooth pairing mode. The Bluetooth indicator light will flash.
3. On your mobile device (e.g., smartphone, tablet), enable Bluetooth and search for available devices.
4. Select "Hisense Party Rocker One Plus" from the list.
5. Once paired, the Bluetooth indicator light will become solid, and you will hear a confirmation sound.

### 3. Karaoke Mode

Connect the two microphones to the speaker. Activate Karaoke Mode via the control panel. You can sing solo or with a partner. Adjust microphone volume and echo effects as desired.

### 4. Light Effects

The speaker features 5 different light effects that synchronize with the music. Use the Light Effect button on the control panel to cycle through the available modes and enhance your party atmosphere.

### 5. TWS (True Wireless Stereo) Mode

For an enhanced stereo sound experience, you can connect two Party Rocker One Plus speakers wirelessly:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button until you hear a confirmation sound.
3. The primary speaker will search for the secondary speaker. Once connected, both speakers will play audio in stereo.
4. Connect your mobile device to the primary speaker via Bluetooth as described in step 2.

### 6. Wireless Charging

The speaker includes a wireless charging pad on its top surface. Place your compatible smartphone on the designated area to charge it wirelessly.

### 7. Guitar Input

Connect your guitar to the dedicated guitar input jack on the speaker. The Party Rocker One Plus can function as an amplifier, allowing you to play along with your music or perform live.

## MAINTENANCE

---

To ensure the longevity and optimal performance of your speaker:

- **Cleaning:** Wipe the speaker's surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight when not in use for extended periods.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected properly.	Charge the speaker; Ensure power adapter is securely connected.
No sound	Volume too low; Device not paired; Incorrect input source.	Increase volume; Re-pair Bluetooth device; Select correct input mode.
Bluetooth connection unstable	Device too far; Interference.	Move device closer to speaker; Avoid obstacles; Turn off other Bluetooth devices.
Microphones not working	Microphones not connected; Microphone volume too low.	Ensure microphones are securely plugged in; Increase microphone volume.

## SPECIFICATIONS

Feature	Detail
Model Name	PARTY ROCKER ONE PLUS
Brand	Hisense
Speaker Output Power	300 Watts
Battery Life	Up to 15 hours
Battery Composition	Lithium-ion
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Product Dimensions (LxWxH)	29.5 x 25.7 x 55 cm (approx. 11.6 x 10.1 x 21.7 inches)
Item Weight	10.2 Kilograms (approx. 22.5 lbs)
Controller Type	Touchpad
Special Features	Portable Bluetooth Speaker, Karaoke Mode (2 mics included), 5 Light Effects, TWS Mode, Wireless Charging, Guitar Input, IPX4 Splash Resistance
Compatible Devices	iPhone (and other Bluetooth-enabled smartphones/tablets)
USB Ports	1

## WARRANTY AND SUPPORT

---

This product comes with a manufacturer's warranty. Please refer to the included warranty card for details regarding coverage, terms, and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Hisense customer service or visit the official Hisense website. Keep your proof of purchase for warranty validation.

Software updates are guaranteed until November 22, 2030.

For more information, visit: [www.hisense.com](http://www.hisense.com)