

Timberland TDWGF2200901

TIMBERLAND Fairhill Men's Watch Instruction Manual

Model: TDWGF2200901

INTRODUCTION

This instruction manual provides essential information for the proper use, setup, operation, and maintenance of your TIMBERLAND Fairhill Men's Watch. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity. Keep this manual for future reference.

PRODUCT OVERVIEW

The TIMBERLAND Fairhill Men's Watch is designed for durability and functionality, featuring a multi-function dial and a genuine leather strap. Familiarize yourself with the key components of your watch.





Figure 1: Front View of the Fairhill Watch. This image displays the watch face, highlighting the black dial with luminous silver-tone indexes, the two precision-engineered subdials, and the Timberland logo. The black leather strap is also visible.



Figure 2: Side View of the Fairhill Watch. This image shows the watch from a side angle, emphasizing the durable 44MM black-tone stainless steel case and the textured top ring. The crown for setting the time is clearly visible.



Figure 3: Back View of the Fairhill Watch. This image provides a view of the watch's stainless steel case back, which is engraved with the Timberland logo, water resistance rating (5ATM), and other product details. The underside of the black leather strap is also visible.



Figure 4: Timberland Watch Packaging. This image shows the grey box in which the Timberland Fairhill watch is typically packaged, featuring the brand's tree logo on the lid.

Official Product Video

Your browser does not support the video tag.

Video 1: Timberland Collection Overview. This video provides a general overview of the Timberland watch collection, showcasing various models and highlighting key design elements and brand philosophy. It offers a dynamic perspective on the watches' aesthetic and craftsmanship.

SETUP

Setting the Time and Date

- Pull out the Crown:** Gently pull the crown (the knob on the side of the watch) to the outermost position. You may feel a slight click.
- Set the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time. Ensure you set the correct AM/PM for the date change mechanism.

- Set the Date:** For watches with a date function, push the crown in one click from the outermost position (if applicable, consult specific movement instructions if your watch has multiple crown positions). Rotate the crown to adjust the date. If your watch has subdials for date, these may be adjusted via specific pushers or crown positions.
- Push in the Crown:** Once the time and date are set, push the crown back into its normal operating position. This will start the watch movement.

Note: Avoid setting the date between 9 PM and 3 AM, as this can interfere with the date change mechanism and potentially damage the movement.

OPERATING INSTRUCTIONS

Wearing Your Watch

- Ensure the watch strap is comfortably snug on your wrist, allowing for slight movement without being too loose or too tight.
- The genuine leather strap will conform to your wrist over time, providing a personalized and comfortable fit.

Water Resistance

Your TIMBERLAND Fairhill watch is rated 5 ATM water resistant. This means it is suitable for everyday use, including splashes, rain, and brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid operating the crown or pushers when the watch is wet.

MAINTENANCE

Cleaning Your Watch

- Case and Crystal:** Wipe the watch case and crystal with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the watch.
- Leather Strap:** Avoid prolonged exposure of the leather strap to water, direct sunlight, and extreme temperatures. Clean the leather strap with a soft, dry cloth. Specialized leather cleaners can be used sparingly if needed, following the product's instructions.

Battery Replacement

The watch is powered by a nonstandard battery (included). When the watch stops or the second hand begins to jump erratically (if applicable), it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance integrity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Dead battery; Crown pulled out	Replace battery (professional service recommended); Push crown fully in
Time/Date not setting	Crown not in correct position; Damaged movement	Ensure crown is pulled out to the correct setting position; Seek professional repair
Condensation under crystal	Moisture ingress; Sudden temperature change	Seek professional service immediately to prevent damage; Allow watch to acclimate to temperature

Problem	Possible Cause	Solution
Strap discomfort/irritation	Strap too tight; Allergic reaction; Dirt buildup	Adjust strap for comfortable fit; Consult a doctor if irritation persists; Clean strap regularly

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.15 x 3.15 x 3.94 inches; 7.05 ounces
Item Model Number	TDWGF2200901
Department	mens
Batteries	1 Nonstandard Battery batteries required. (included)
Date First Available	April 1, 2022
Manufacturer	Geneva Watch Group
ASIN	B09SGY62GJ
Item Width	8 centimeters
Clasp Type	Buckle
Item Type Name	Watch

WARRANTY AND SUPPORT

Your TIMBERLAND Fairhill Men's Watch is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Timberland website. For technical support, service, or inquiries regarding your watch, please contact Timberland customer service or the authorized service center. You can find more information on the official Timberland website: www.timberland.com. Protection plans may also be available for extended coverage. Please check with your retailer for details on available protection plans.

© 2023 Timberland. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.