

[Manuals.plus](#) /

› [KLARSTEIN](#) /

› Klarstein Mini Dishwasher DSM-Havasia-Secret-6 Instruction Manual

KLARSTEIN DSM-Havasia-Secret-6

Klarstein Mini Dishwasher DSM-Havasia-Secret-6 Instruction Manual

Model: DSM-Havasia-Secret-6 | Brand: KLARSTEIN

1. PRODUCT OVERVIEW

The Klarstein Mini Dishwasher is a compact and efficient appliance designed to simplify your daily dishwashing routine. Ideal for apartments, small kitchens, or spaces where traditional dishwashers are not feasible, this model offers powerful cleaning in a small footprint. It features a built-in UV lamp for enhanced hygiene and multiple wash programs to suit various needs.



**POUR LES
ASSIETTES
COURANTES DE
MAX. 27 CM Ø**



**PROPRETÉ
HYGIÉNIQUE : NETTOIE
AVEC LA LUMIÈRE UV**



**DRY: DOOR
OPENS
AUTOMATICALLY
AT THE END OF**



**NIVEAU SONORE
AGRÉABLE :
49 DB**



**INTUITIF AVEC
ÉCRAN TACTILE
INTUITIF**



**AVEC AQUASTOP:
LAVAGE SÛR
SANS
DÉBORDEMENT**



ÉCONOMIQUE & COMPACT

Une vaisselle impeccable pour une faible consommation

Figure 1: Front view of the Klarstein Mini Dishwasher, showcasing its compact design.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove the dishwasher from its packaging. Retain all packaging materials for future transport or service needs. Inspect the appliance for any signs of damage during transit.

2.2 Placement

This dishwasher is designed for built-in installation. Ensure the chosen location has sufficient space and access to water supply and drainage. Refer to the dimensions below for proper cabinet fitting.



Figure 2: Illustration of the dishwasher's dimensions and typical built-in installation within a kitchen cabinet.

2.3 Water Connection

Connect the dishwasher directly to your water tap. Ensure all connections are secure to prevent leaks. The appliance requires both a water inlet and a drainage connection.

2.4 Power Connection

Plug the power cord into a grounded electrical outlet (220 Volts). Ensure the power cord is not pinched or damaged during installation.

3. OPERATING INSTRUCTIONS

3.1 Loading the Dishwasher

Load dishes into the basket, ensuring they do not obstruct the spray arms. The dishwasher can accommodate up to 6 place settings, with plates up to 27 cm in diameter. Place cutlery in the designated cutlery basket.



6 PROGRAMMES POUR UNE PROPRETÉ PARFAITE

Intensif, Normal, ECO,
Verre, 90 Min. et Rapide



ANTIBACTÉRIEN

Lumière UV pour
éliminer les microbes

Figure 3: View of the dishwasher interior showing optimal loading of plates, glasses, and cutlery.

3.2 Adding Detergent

Add the appropriate amount of dishwasher detergent to the dispenser. Use only detergents specifically designed for automatic dishwashers.

3.3 Selecting a Program

The dishwasher features 6 wash programs. Use the intuitive control panel to select the desired program:

- **Intensive:** For heavily soiled dishes.
- **Universal:** Standard program for daily use.
- **ECO:** Energy-saving program for normally soiled dishes.
- **Glass:** Gentle program for delicate glassware.
- **90 min:** For lightly soiled dishes requiring a quicker wash.
- **Rapid:** The quickest cycle for very lightly soiled items.



COMMANDE FACILE ET RAPIDE

Panneau de commande intuitif avec écran LED ou application

Figure 4: Close-up of the intuitive control panel, showing program options and digital display.

3.4 Starting a Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected wash cycle. The UV lamp activates after each program for additional hygiene.



INSTALLATION SIMPLE

Raccordement direct au réseau d'eau

Figure 5: The dishwasher interior with the UV lamp active, ensuring hygienic cleaning.

3.5 Automatic Door Opening

The dishwasher door opens automatically at the end of the cycle. This feature aids in drying and reduces energy consumption.

4. MAINTENANCE

4.1 Cleaning the Filters

Regularly clean the dishwasher filters to ensure optimal performance. Remove the filter assembly, rinse it under running water, and remove any food debris. Reinstall the filters securely.

4.2 Cleaning the Spray Arms

Check the spray arms for any clogged nozzles. Use a thin wire or toothpick to clear any blockages. Ensure the spray arms can rotate freely.

4.3 Exterior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

5. TROUBLESHOOTING

If you encounter issues with your dishwasher, consult the following common troubleshooting tips before contacting customer support:

- **Dishwasher not starting:** Check if the power cord is securely plugged in and the door is fully closed. Ensure a program has been selected.
- **Dishes not clean:** Verify that dishes are loaded correctly and not blocking spray arms. Check detergent levels and ensure filters are clean.
- **Water not draining:** Inspect the drain hose for kinks or blockages. Clean the filters.
- **Unusual noises:** Check for any foreign objects inside the dishwasher that might be interfering with the spray arms or pump.

6. SPECIFICATIONS

Feature	Value
Model Name	Havasia UV 6 Secret
Manufacturer Reference	DSM-Havasia-Secret-6
Form Factor	Built-in
Item Weight	26.5 Kilograms
Voltage	220 Volts
Style	Built-in 6 Place Setting
Cable Length	150 Centimeters
Display Type	LCD or LED
Number of Place Settings	6
Number of Cycles	6
Special Features	Quick Wash, Space Saver
Installation Type	Built-in
Product Dimensions	52P x 55W x 45H Centimeters
Capacity	6 Place Setting
Color	Brown
Control Type	Push Button
Material	Stainless Steel

Noise Level	49 Decibels
Water Consumption (per cycle)	6.5 Liters
Energy Efficiency Rating	E

For detailed energy information, please refer to the EPREL database: <https://eprel.ec.europa.eu/qr/1254323>



Figure 6: Energy label providing efficiency and consumption details.

7. WHAT'S IN THE BOX

- Klarstein Mini Dishwasher
- Cutlery Basket
- Drying System
- Multilingual User Guide

8. WARRANTY AND SUPPORT

This product is sold by Klarstein France. You are entitled to a 30-day return period and legal guarantees. For any product-related inquiries, technical assistance, or warranty claims, please contact Klarstein France customer support. Refer to the multilingual user guide for specific contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BN462N4Q>

More documents and user manuals: <https://manuals.plus/>