

Gioteck SC3

Gioteck SC3 Wireless Pro Controller User Manual

For Nintendo Switch, PC, and Mobile Devices

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Gioteck SC3 Wireless Pro Controller. Designed for use with Nintendo Switch, PC, and mobile devices, this controller features programmable back buttons, customizable RGB lighting, and changeable magnetic thumb sticks for an enhanced gaming experience.

1. SETUP

1.1 Package Contents

- Gioteck SC3 Wireless Pro Controller
- USB Charging Cable
- Additional Magnetic Thumb Sticks (if included)
- User Manual (this document)

1.2 Charging the Controller

Before initial use, fully charge the controller. Connect the supplied USB charging cable to the controller's charging port and the other end to a USB power source (e.g., Nintendo Switch dock, PC USB port, or USB wall adapter).

- The LED indicator will show charging status.
- A full charge typically takes approximately 2-3 hours.



Image: Bottom view of the Gioteck SC3 controller, highlighting the USB-C charging port located between the two textured grips.

1.3 Pairing with Nintendo Switch

1. From the Nintendo Switch HOME Menu, select **Controllers**, then **Change Grip/Order**.
2. On the SC3 controller, press and hold the **Pairing Button** (usually a small button on the top or back) for a few seconds until the LED indicators begin to flash rapidly.
3. Once the controller is recognized by the Switch, the player LED(s) on the controller will illuminate solid, indicating successful pairing.
4. Press the **A button** to confirm.

Note: For subsequent uses, the controller should automatically reconnect to the last paired Switch console when powered on.

1.4 Connecting to PC/Mobile (Bluetooth)

1. Ensure Bluetooth is enabled on your PC or mobile device.
2. On the SC3 controller, press and hold the **Pairing Button** for a few seconds until the LED indicators flash rapidly.
3. On your PC/mobile device, navigate to Bluetooth settings and search for new devices.
4. Select "Gioteck SC3" or similar from the list of available devices to pair.
5. The controller's LED will become solid upon successful connection.

1.5 Installing Magnetic Thumb Sticks

The SC3 controller features changeable magnetic thumb sticks. To replace them:

1. Gently pull the existing thumb stick straight up to remove it.

2. Align the desired magnetic thumb stick with the base and gently push it down until it snaps into place.



Image: Front view of the Gioteck SC3 controller, showcasing the magnetic thumb sticks and button layout.

2. OPERATING INSTRUCTIONS

2.1 Button Layout

The SC3 controller features a traditional button layout. Refer to the image below for button identification.



Image: Angled front view of the Gioteck SC3 controller, displaying the full button layout including face buttons, D-pad, analog sticks, and shoulder buttons.

- **Left/Right Analog Sticks:** For movement and camera control.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R/ZL/ZR Buttons:** Shoulder and trigger buttons.
- **+/- Buttons:** Start/Select equivalents.
- **Home Button:** Returns to the console's home menu.
- **Capture Button:** Takes screenshots.

2.2 Programmable Back Buttons

The SC3 controller includes programmable back buttons (M1, M2, M3, M4) for custom assignments.



Image: Rear view of the Gioteck SC3 controller, clearly showing the four programmable back buttons (M1, M2, M3, M4) and textured grips.

Programming Steps:

1. Press and hold the **Program Button** (refer to diagram if available, usually a small button on the back) until the LED indicator flashes.
2. Press the **Back Button** (M1, M2, M3, or M4) you wish to program. The LED will flash slowly.
3. Press the **Input Button** (e.g., A, B, X, Y, L, R, ZL, ZR, D-pad direction) you want to assign to the back button.
4. Press the **Program Button** again to save the assignment. The LED will stop flashing.
5. Repeat for other back buttons as desired.

To clear a programmed button, follow steps 1-2, then press the Program Button again without pressing an input button.

2.3 RGB Lighting Customization

The controller features customizable RGB lighting. Specific instructions for changing colors or effects are typically found in the product's quick start guide or by pressing a dedicated button combination (e.g., Function + R3).

Consult the quick start guide included with your controller for precise button combinations to adjust RGB lighting.

2.4 Motion Controls

The SC3 controller supports motion controls, allowing for immersive gameplay in compatible Nintendo Switch titles. No special setup is usually required; motion controls activate automatically when supported by the game.

2.5 Audio Headset Jack

A 3.5mm audio headset jack is located on the controller for connecting compatible headsets. It includes dedicated mute and volume control buttons.

- **Volume Up/Down:** Adjust audio output.
- **Mute Button:** Mute/unmute microphone input.



Image: Top view of the Gioteck SC3 controller, highlighting the 3.5mm audio jack, volume controls, and mute button.

3. MAINTENANCE

3.1 Cleaning

To clean your controller, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's finish and internal components.

- Do not immerse the controller in water or any other liquid.
- Ensure all ports are dry before charging or connecting devices.

3.2 Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy objects

on the controller to prevent damage.

3.3 Battery Care

The controller contains a rechargeable battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Charge the controller regularly, even if not in use for extended periods (e.g., once every 3-6 months).
- Do not expose the controller to temperatures above 60°C (140°F).

4. TROUBLESHOOTING

4.1 Controller Not Connecting/Pairing

- **Check Battery:** Ensure the controller is sufficiently charged.
- **Re-pair:** Follow the pairing instructions in Section 1.3 or 1.4.
- **Interference:** Move closer to the console/device and away from potential sources of wireless interference (e.g., Wi-Fi routers, other Bluetooth devices).
- **Reset Controller:** Locate a small reset button (often a pinhole) on the back of the controller. Use a paperclip to press and hold it for a few seconds. Then attempt to re-pair.
- **Update Console/Device Software:** Ensure your Nintendo Switch, PC, or mobile device's operating system is up to date.

4.2 Buttons/Sticks Not Responding

- **Re-sync:** Disconnect and reconnect the controller.
- **Clean:** Ensure no debris is lodged around the buttons or sticks.
- **Test in another game/menu:** Determine if the issue is specific to a game or system-wide.
- **Reset Controller:** Perform a hard reset as described above.

4.3 Motion Controls Not Working

- **Game Compatibility:** Verify that the game you are playing supports motion controls.
- **Recalibrate:** On Nintendo Switch, you can recalibrate motion controls in the system settings.
- **Reset Controller:** Perform a hard reset.

5. SPECIFICATIONS

Model:	Gioteck SC3 Wireless Pro Controller
Compatibility:	Nintendo Switch (Original, Lite, OLED), PC, Mobile Devices
Connectivity:	Bluetooth Wireless
Dimensions (approx.):	2.87 x 5.35 x 6.34 inches (7.29 x 13.59 x 16.1 cm)
Weight (approx.):	10.6 ounces (300 grams)
Audio Jack:	3.5mm with mute and volume controls
Special Features:	Programmable back buttons, Magnetic thumb sticks, RGB lighting, Motion controls

6. WARRANTY INFORMATION

The Gioteck SC3 Wireless Pro Controller comes with a manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the warranty card included with your product or visit the official Gioteck website.

Please retain your proof of purchase for warranty purposes.

7. CUSTOMER SUPPORT







If you encounter any issues or have questions not covered in this manual, please contact Gioteck customer support. Contact information can typically be found on the product packaging or the official Gioteck website.

Gioteck Official Website: www.gioteck.com



© 2023 Gioteck. All rights reserved.

Related Documents - SC3

	<p>Gioteck TX70 Wireless RF Stereo Gaming Headset - Quickstart Guide</p> <p>Gioteck TX70 Wireless RF Stereo Gaming Headset Quickstart Guide. Learn how to set up and use your TX70 headset with PlayStation, Xbox, Nintendo Switch, PC, and mobile devices. Features wireless connectivity and stereo sound.</p>
	<p>Gioteck VX4 Wireless Controller Quickstart Guide</p> <p>A quickstart guide for the Gioteck VX4 Wireless Controller, covering button mapping, basic operations, touch pad gestures, setup for PS4 and PC (wired and Bluetooth), and troubleshooting.</p>
	<p>Gioteck WX-4 Wireless Controller User Manual</p> <p>Comprehensive user manual for the Gioteck WX-4 wireless controller, detailing setup, features, and compatibility for Nintendo Switch and Windows PC.</p>
	<p>Gioteck WX4+ Wireless RGB Controller Quickstart Guide</p> <p>A comprehensive quickstart guide for the Gioteck WX4+ Wireless RGB Controller, detailing setup for Nintendo Switch and Windows PC via Bluetooth and USB, button mapping, and troubleshooting.</p>
	<p>Gioteck VX4+ Wireless RGB Controller Quickstart Guide</p> <p>Get started quickly with the Gioteck VX4+ Wireless RGB Controller. This guide provides essential information on button mapping, setup for PS4 and PC, and basic operations for an enhanced gaming experience.</p>
	<p>Gioteck Smart TV+ Duo Wireless Controller Quickstart Guide</p> <p>Get started with your Gioteck Smart TV+ Duo Wireless Controller. This guide provides essential information for setup, connection methods (USB, 2.4GHz, Bluetooth), basic operation, features like Turbo mode and LED customization, technical specifications, customer support, warranty, and safety guidelines.</p>

