

i-box 79314PI/17

i-box Tone Portable AM/FM Radio

INSTRUCTION MANUAL

Model: 79314PI/17

INTRODUCTION

The i-box Tone is a compact and portable AM/FM radio designed for clear reception and powerful sound. Its intuitive analogue dial and rotary tuner make station selection straightforward. Enjoy your favorite radio stations at home or on the go with its convenient carry handle and flexible power options.



Image: Front view of the i-box Tone Portable AM/FM Radio, showcasing its black finish, analogue tuning dial, and controls.

WHAT'S IN THE BOX

Upon opening your i-box Tone package, please ensure all the following items are present:

- i-box Tone Portable AM/FM Radio
- Owner's Manual

PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your i-box Tone radio:



AM & FM
Radio Tuner



Analogue Dial
with Rotary Tuner



Low/High
Tone Switch



Battery Powered
for Portability



Headphone
Socket



Carry
Handle

Image: Diagram showing the labeled components of the i-box Tone radio, including the carry handle, aerial, battery compartment, AM/FM radio tuner, AM/FM tuning dial, volume dial, headphone socket, power input, tone dial, and power/AM/FM switch.

- **Carry Handle:** For easy portability.
- **Aerial (Antenna):** Extendable for optimal FM reception.
- **Battery Compartment:** Located at the rear for 4x AA batteries.
- **AM/FM Radio Tuner:** Displays the frequency range for both bands.
- **AM/FM Tuning Dial:** Used to select your desired radio frequency.
- **Volume Dial:** Adjusts the audio output level.
- **Headphone Socket:** 3.5mm jack for private listening.
- **Power Input (DC 6V):** For connecting to mains power.
- **Tone Dial:** Adjusts the audio tone between Low and High.
- **Power/AM/FM Switch:** Turns the radio on/off and selects the radio band.

SETUP

Powering Your Radio

The i-box Tone radio can be powered by either mains electricity or batteries for portability.

Mains Power

Connect the provided DC 6V power adapter to the 'DC 6V' input socket on the side of the radio and plug the adapter into a standard wall outlet.

Battery Power

For portable use, the radio requires 4 x AA batteries (not included). To install batteries:

1. Open the battery compartment cover located on the rear of the radio.
2. Insert 4 x AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.



Image: Rear view of the i-box Tone radio with the battery compartment open, showing four AA batteries inserted.

Antenna Setup

For optimal FM reception, fully extend the telescopic aerial. For AM reception, the radio has a built-in ferrite bar antenna, so no external adjustment is needed, though rotating the radio may improve reception.



Image: The i-box Tone radio positioned outdoors with its telescopic antenna fully extended.

OPERATING THE RADIO

Turning On and Selecting Band

Use the Power/AM/FM switch to turn the radio on and select your desired band (AM or FM).

Tuning to a Station

To tune to a radio station, follow these steps:

1. **Step 1:** Fully extend the telescopic antenna for FM reception.
2. **Step 2:** Switch the Power/AM/FM switch to either 'AM' or 'FM' to turn the radio on and select the desired band.
3. **Step 3:** Slowly rotate the 'Tune' dial until you find your desired radio station. The analogue dial will indicate the frequency.



Image: A three-step diagram illustrating how to tune the i-box Tone radio: extend antenna, select AM or FM, and adjust the tuning dial.



Image: The i-box Tone radio on a kitchen counter, highlighting its AM and FM tuning capabilities.

Adjusting Volume

Rotate the 'Volume' dial clockwise to increase the volume and counter-clockwise to decrease it.

Adjusting Tone

The 'Tone' dial allows you to adjust the audio output between a 'Low' (bass-heavy) and 'High' (treble-heavy) setting. Rotate the dial to suit your listening preference for music or speech.



Tune for Music or Speech

Use the large dials to select a low or high tone for optimal sound quality

Image: The i-box Tone radio on a wooden surface, emphasizing the tone control dial for optimizing sound quality for music or speech.

Using Headphones

For private listening, plug any standard 3.5mm headphones into the headphone socket located on the side of the radio. The internal speaker will automatically mute when headphones are connected.

MAINTENANCE

- **Cleaning:** Wipe the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** If the radio will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- **Antenna:** Handle the telescopic antenna gently to avoid bending or breaking. Retract it when not in use or when transporting the radio.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; Mains adapter not connected or faulty.	Replace batteries, ensuring correct polarity. Check mains adapter connection and try a different outlet.
Poor radio reception (FM)	Antenna not extended; Weak signal in the area.	Fully extend the telescopic antenna. Try repositioning the radio or moving closer to a window.
Poor radio reception (AM)	Interference; Radio orientation.	Rotate the radio to find the best reception. Move away from electronic devices that may cause interference.
No sound from speaker	Volume too low; Headphones connected.	Increase the volume. Disconnect headphones if not desired.

SPECIFICATIONS



Image: The i-box Tone radio with its dimensions labeled: 9.9 inches length, 2.5 inches width, and 6.1 inches height.

Feature	Detail
Product Dimensions	9.9 x 2.5 x 6.1 inches
Item Weight	1.16 pounds
Model Number	79314PI/17
Batteries Required	4 AA batteries (not included)
Power Source	Battery Powered or Mains Powered (DC 6V)
Radio Bands Supported	AM, FM
Connectivity Technology	Auxiliary (Headphone Jack)
Color	Black
Manufacturer	Philex Electronic Ltd.

WARRANTY AND SUPPORT

i-box is a British brand committed to quality. All products are designed and developed within the UK.

Warranty Information


This product comes with a 3-year warranty. Please retain your proof of purchase for warranty claims.

Customer Service

For any questions, technical support, or warranty inquiries, please contact the i-box customer service team. Refer to the contact information provided on the product packaging or the official i-box website for the most up-to-date support details.

© 2023 i-box. All rights reserved.

Related Documents

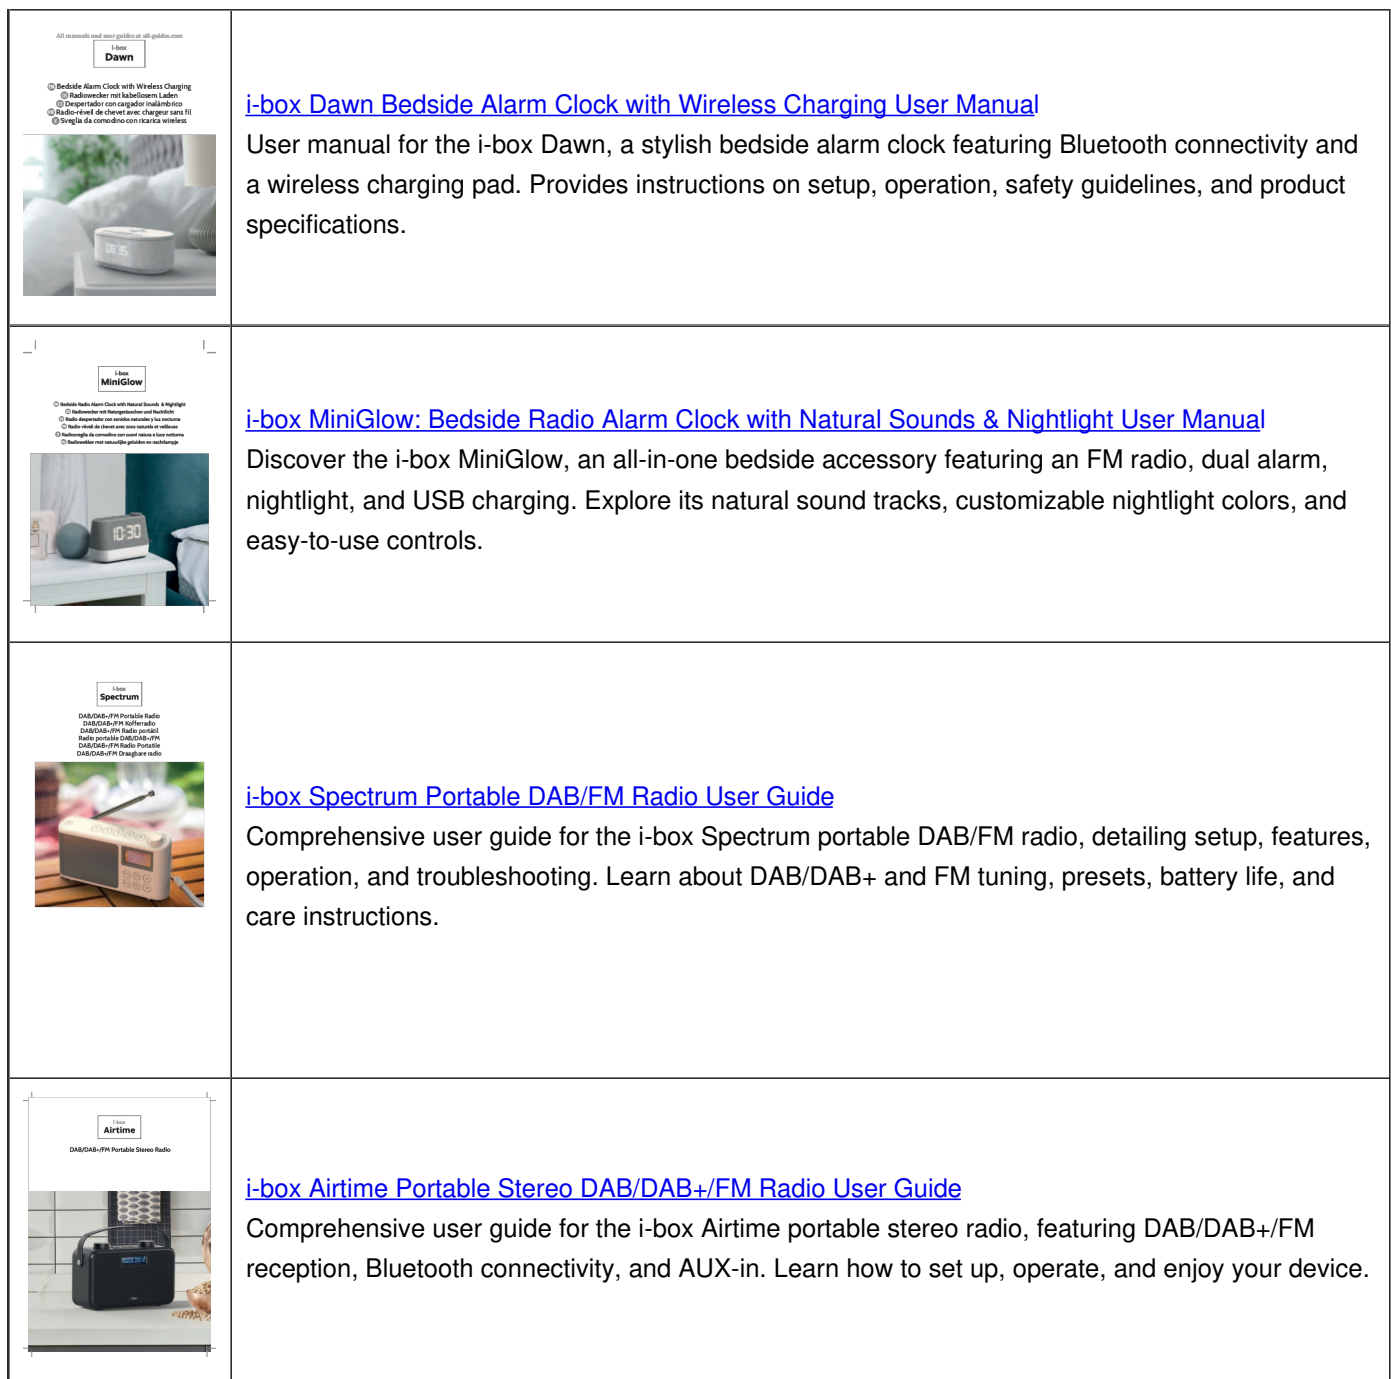

Documents - i-box – 79314PI/17



Tone

Analogue FM/AM Radio



Features & Benefits

- Introducing the latest Tone - a classic AM/FM radio that captures the essence of simplicity. With its analogue dial, the portable radio is straightforward to use, making it perfect for home use or, if you're looking for those who appreciate the basics, want to tune into their favourite AM/FM stations, and love the tactile feeling of using a dial, that will make adjustments.
- To the analogue dial stations with a reliable AM/FM tuner.
- Tune in to your favourite radio stations with ease using the turn to listen stations.
- Tone's straightforward design makes it user-friendly and ideal for all ages.
- Comes with a convenient carry handle and optional battery pack, making it easy to take your tunes wherever you go.



Product Specifications	
Product Size	78x141x77
Barcode/EAN	5097707075752
Dimensions	112 x 72 x 76.5 mm
Gross Weight	1.73kg
Power supply	4x D-BATTERY
SPK Input	100-240V
SPK Output	60-120W/VA
SPK Adapter Jack	60
Powering via Batteries	As A.R. Advice
Regulation	Standard CE Directive
Speaker Output	
Sound Enhancement	Bass Radiator
Radio Band	AM / FM Radio
Radio Dial	Analogue
Tone Switch	Low/High
Headphone Port	3.5mm



01454 26 37 37

support@i-bbox.com

www.i-bbox.com

[\[pdf\]](#) Specifications Datasheet Dimension Guide

[View datasheet i box Tone Portable AM FM Radio 79314PI 17 DS assets iboxstyle Datasheets |||](#)

79314PI/17 Tone Analogue FM/AM Radio Features Benefits Introducing the i-box Tone, a classic AM/FM radio that captures the essence of simplicity. With its analogue dial, this portable radio is straightforward to use, making it perfect for home use or on the go. It s designed for those who apprec...

lang:en score:34 filesize: 652.71 K page count: 1 document date: 2023-09-05



[\[pdf\]](#) User Manual

i box Tone Portable AM FM Radio Manuals 79314PI 17 IM assets iboxstyle IMs View users manual |||

EN Analogue FM/AM Radio ES Radio FM/AM analgica FR Radio analogique FM/AM

EN Introduction The Tone analogue radio is simple and easy to use anywhere around the house. Select your favourite FM/AM station and adjust volume using the large dials on the side. Digital tuner FM/AM bands Headphone por...

lang:en score:30 filesize: 13.32 M page_count: 18 document date: 2022-07-21