

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [THOMAS & FRIENDS](#) /

› THOMAS & FRIENDS Motorized Talking Cranky Delivery Train Set (Model HTK90)

## THOMAS & FRIENDS HTK90

# THOMAS & FRIENDS Motorized Talking Cranky Delivery Train Set

MODEL: HTK90

Brand: THOMAS & FRIENDS

## INTRODUCTION

---

Welcome to the world of Thomas & Friends! This interactive train set brings Brendam Docks to life with a motorized Thomas engine, Cranky the Crane, and a Troublesome Truck. Designed for preschool children aged 3 and up, this set features characters that recognize and talk to each other on the track, along with over 325 unique songs, sounds, and phrases to enhance imaginative play. The set includes 14.5 feet of track, a kid-powered hopper, and 3 cargo pieces for engaging loading and unloading action.

## SAFETY INFORMATION

---

**WARNING:** Not suitable for children under 3 years due to small parts that may pose a choking hazard. Adult supervision is recommended during play.

## WHAT'S INCLUDED

---

Your Thomas & Friends Motorized Talking Cranky Delivery Train Set includes the following components:

- 1 Motorized Thomas Engine
- 1 Troublesome Truck (cargo car)
- 1 Cranky the Crane with dock
- 17 Track Pieces (various shapes and sizes)
- 7 Play Pieces (including 3 cargo pieces and a kid-powered hopper)



## 27-piece set including motorized Thomas & 14.5 feet of track

*Image: All components of the 27-piece train set, including the motorized Thomas engine, Cranky the Crane, and various track and play pieces.*

### SETUP

#### 1. Track Assembly

Carefully connect all 17 track pieces to form the complete layout as shown in the instruction diagrams. Ensure each piece clicks securely into place for stable operation. The track features grooves designed to guide the motorized Thomas engine.

#### 2. Crane and Dock Placement

Position Cranky the Crane and its dock assembly within the track layout as indicated in the setup guide. Ensure the crane base is stable.

#### 3. Battery Installation (Thomas Engine)

The motorized Thomas engine requires 2 AAA batteries (included). Locate the battery compartment on the underside of the engine. Use a small Phillips head screwdriver to open the compartment, insert the batteries with correct polarity (+/-), and then securely close the compartment. Ensure the screws are tightened to prevent accidental opening during play.



*Image: The complete Thomas & Friends train set assembled and ready for play.*

## OPERATING INSTRUCTIONS

---

### 1. Activating Thomas

Place the motorized Thomas engine on the track. Press the button located on the top of Thomas to activate his motor and initiate movement. Thomas will begin to travel along the track, interacting with other characters and track features.

### 2. Interactive Sounds and Phrases

The set features over 325 unique songs, sounds, and phrases. Thomas, Cranky the Crane, and the Troublesome Truck are designed to recognize and talk to each other when they are in proximity on the track, creating an immersive play experience.



**Press for 325+ songs,  
sounds & real character phrases**

*Image: Pressing the central button on the track activates over 325 songs, sounds, and character phrases.*

### **3. Operating Cranky the Crane**

Cranky the Crane can spin 360 degrees. Use the crane's claw to pick up and drop the included cargo pieces. Position Thomas or the Troublesome Truck near Cranky for interactive loading and unloading scenarios.



## Spin, lift and load with working Cranky the Crane™

*Image: Cranky the Crane can be spun 360 degrees to lift and load cargo pieces.*

### 4. Using Track Switches and Features

The track set includes various switches and features that allow you to change the direction of Thomas's travel or activate specific actions. Manipulate these levers and mechanisms to create different routes and play scenarios.

### FEATURES OVERVIEW

- **Motorized Thomas Engine:** Powers itself along the track, interacting with the environment.
- **Talking Characters:** Thomas, Cranky, and Troublesome Truck recognize and speak to each other.
- **Extensive Sound Library:** Over 325 songs, sounds, and phrases from the Thomas & Friends: All Engines Go series.
- **Cranky the Crane:** Features 360-degree rotation and a working claw for cargo handling.
- **Kid-Powered Hopper:** Allows children to engage in manual loading and unloading of cargo.
- **Expandable Track:** Connects to other Thomas & Friends plastic track sets (sold separately) for larger layouts.
- **Developmental Benefits:** Strengthens fine motor skills and encourages imaginative storytelling play.



The Docks come to life with songs, sounds & phrases!

AGES  
3Y+

*Image: The interactive features of the set, including talking characters and sounds, designed for children aged 3 and up.*

## COMPATIBILITY

This Thomas & Friends Motorized Talking Cranky Delivery Train Set is designed to connect with other Thomas & Friends plastic track sets. This allows for expansion and customization of your railway adventures. Please note that this set is not compatible with wooden Thomas & Friends track systems.

## MAINTENANCE

### 1. Cleaning

To clean the train set, wipe surfaces with a damp cloth. Do not immerse electronic components (Thomas engine, sound base) in water. Avoid using harsh chemicals or abrasive cleaners.

### 2. Battery Care

Always use fresh, high-quality AAA batteries. Remove batteries from the Thomas engine if the toy will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly according to local regulations.

## TROUBLESHOOTING

---

- **Thomas Engine Not Moving:** Check battery installation and ensure batteries are fresh. Verify the power button on Thomas is pressed. Ensure Thomas is correctly seated on the track.
- **No Sounds/Phrases:** Check batteries in Thomas and the main track base (if applicable). Ensure connections are secure.
- **Track Pieces Not Connecting:** Ensure pieces are aligned correctly and apply gentle pressure until they click into place. Avoid forcing connections.

## SPECIFICATIONS

---

- **Product Dimensions:** 27.28 x 52.24 x 19.88 inches
- **Item Weight:** 1.92 pounds
- **Item Model Number:** HTK90
- **Manufacturer Recommended Age:** 3 years and up
- **Batteries:** 2 AAA batteries required (included for Thomas engine)
- **Release Date:** November 15, 2025
- **Manufacturer:** Fisher-Price

## WARRANTY & SUPPORT

---

For product support, troubleshooting assistance, or information regarding potential protection plans, please contact Fisher-Price customer service. Refer to the product packaging for specific contact details or visit the official Fisher-Price website.