

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [TOUCHBeauty](#) /
- › [TOUCHBeauty Electric Nail Drill User Manual](#)

TOUCHBeauty AG-2236

TOUCHBeauty Electric Nail Drill User Manual

Model: AG-2236

INTRODUCTION

The TOUCHBeauty Electric Nail Drill is a professional, cordless, and rechargeable manicure and pedicure kit designed for comprehensive nail care. Its lightweight, pen-shaped design ensures comfortable handling for both beginners and experienced users. This versatile tool is equipped with a powerful motor and multiple attachments to effectively shape, polish, and remove various nail types, including acrylic, gel, and thick nails, as well as to manage cuticles.



Figure 1: TOUCHBeauty Electric Nail Drill with included accessories.

WHAT'S IN THE BOX

Your TOUCHBeauty Electric Nail Drill package includes the following components:

- 1 x Electric Nail Drill Machine (Model AG-2236)
- 12 x High-Quality Drill Bits (various shapes for different functions)
- 25 x Sanding Bands
- 1 x USB Type-C Charging Cable
- 1 x Nano Polish Glass File
- 1 x User Manual




Figure 2: All components included in the package.

SETUP

Charging the Device

Before first use, fully charge the nail drill. The device features a USB Type-C charging port for convenience.

1. Connect the provided USB Type-C cable to the charging port on the nail drill.
2. Connect the other end of the USB cable to a power source such as a power bank, PC, AC adapter, or car charger.
3. The battery indicator lights will illuminate during charging. A full charge typically takes approximately 1.5 hours, providing 3.5-4 hours of continuous working time.

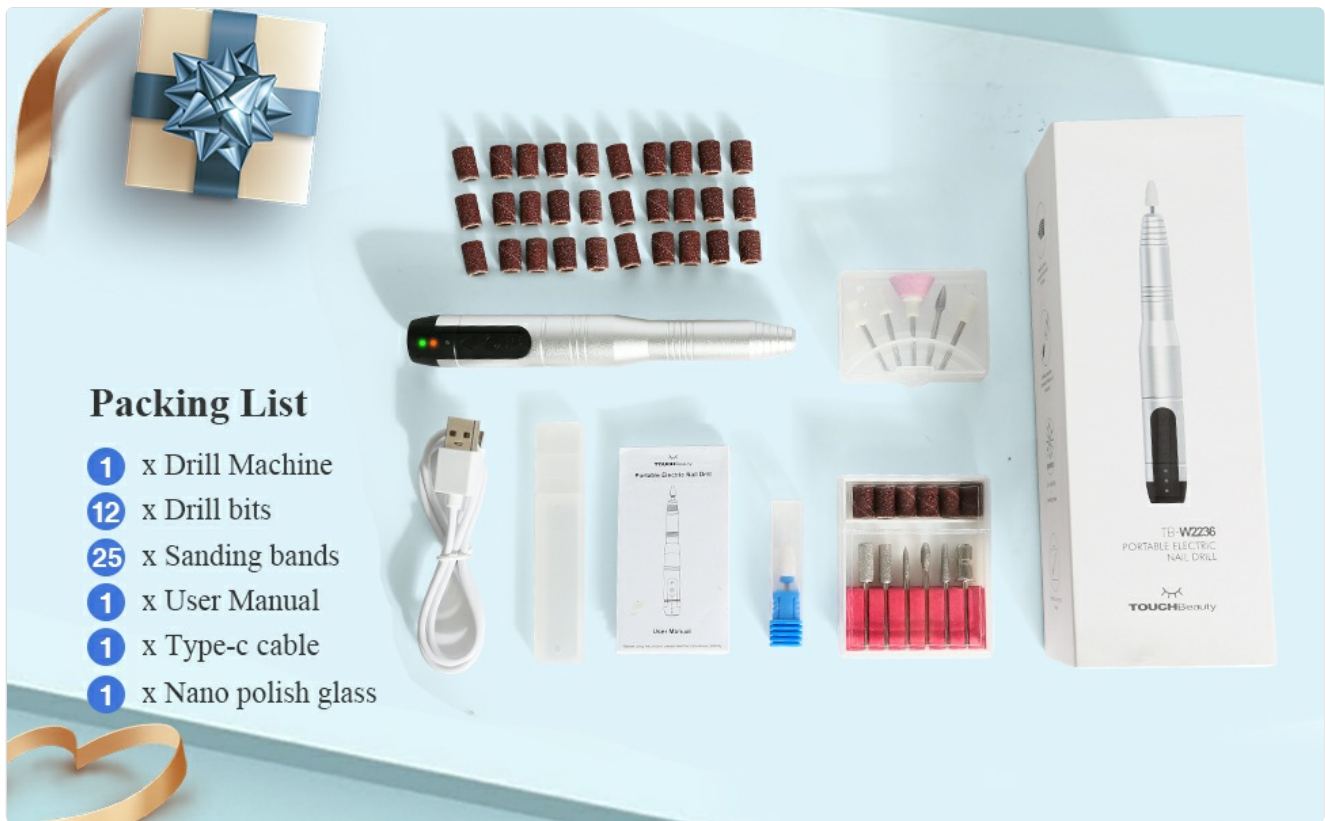

Packing List

- 1 x Drill Machine
- 12 x Drill bits
- 25 x Sanding bands
- 1 x User Manual
- 1 x Type-c cable
- 1 x Nano polish glass

Figure 3: Charging the nail drill via USB Type-C.

Installing/Changing Drill Bits

Ensure the device is turned off before installing or changing any drill bits.

1. Gently pull out the current bit from the chuck.
2. Insert the desired drill bit firmly into the chuck until it clicks into place. Ensure it is securely seated to prevent dislodging during operation.

2 Useful Nail Tool



Figure 4: Instructions for inserting and removing drill bits.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the device, long press the power button for 2 seconds. The indicator lights will illuminate.
- To turn off the device, long press the power button again.

Adjusting Speed

The nail drill offers 3 adjustable speed settings (8000 RPM, 10000 RPM, 12000 RPM) to suit different nail care needs.

- Short press the "+" button to increase the speed.
- Short press the "-" button to decrease the speed.

12 High-quality attachments +25 sanding bands



Ceramic Drill Bit
Remove nail polish and acrylic nails



Needle Bit
Polish the nail edges



Bullet Bit
Nail surface carving and edge grinding



Tapered Bit
Polish the nail head to be smooth and flat



Small Cylinder Bit
Grinding surface to remove callus



Big Cylinder Bit
Grinding surface to make it smoother



Sandpaper Bit
Use with sanding bands to polish hard and rough nails



Coarse Disc Bit
Grind nails and exfoliate



Cone Bit
Remove cuticles



Barrel Bit
Smooth and polish surface



Umbrella Top bit
Reach tight areas such as sidewalls and cuticles



Felted Wool Bit
Polish and clean nail surface debris

Figure 5: Speed adjustment controls.

Changing Rotation Direction (F/R)

The drill supports dual rotation (forward/reverse) making it suitable for both right-handed and left-handed users.

- Double-click the power button to switch the rotation direction. An orange LED light indicates the F/R direction.

2 Useful Nail Tool

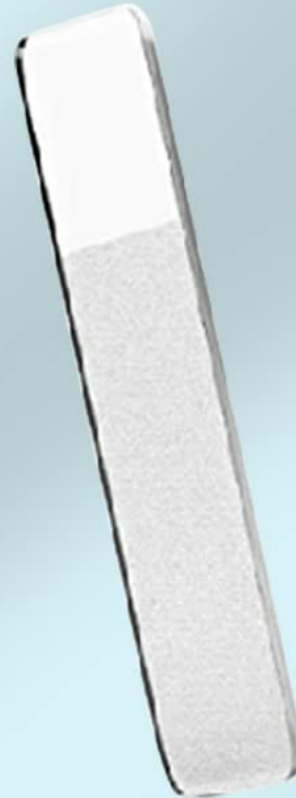


Figure 6: Dual rotation feature for versatile use.

Using the Drill Bits

The kit includes 12 types of drill bits and 25 sandpaper bands for various applications:

| Bit Type | Primary Function |
|--------------------|--|
| Ceramic Drill Bit | Remove nail polish and acrylic nails. |
| Needle Bit | Polish the nail edges. |
| Bullet Bit | Nail surface carving and edge grinding. |
| Tapered Bit | Polish the nail head to be smooth and flat. |
| Small Cylinder Bit | Grinding surface to remove callus. |
| Big Cylinder Bit | Grinding surface to make it smoother. |
| Sandpaper Bit | Use with sanding bands to polish hard and rough nails. |
| Coarse Disc Bit | Grind nails and exfoliate. |

| Bit Type | Primary Function |
|------------------|---|
| Cone Bit | Remove cuticles. |
| Barrel Bit | Smooth and polish surface. |
| Umbrella Top Bit | Reach tight areas such as sidewalls and cuticles. |
| Felted Wool Bit | Polish and clean nail surface debris. |

Dual Rotation

Makes it easier for both right- and left-handed people to use the nail drill

Double Click to change rotation direction

Figure 7: Overview of the 12 high-quality attachments and their uses.

Product in Use

Your browser does not support the video tag.

Video 1: Demonstration of the TOUCHBeauty Nail Drill Cordless in operation, showcasing its ease of use and various functions for nail care.

MAINTENANCE

Cleaning the Device and Bits

- After each use, gently wipe the nail drill machine with a soft, dry cloth to remove any dust or debris.
- Clean the drill bits thoroughly after each use. You can use a small brush or an ultrasonic cleaner for effective removal of nail dust and residue.
- Ensure all components are completely dry before storing.

Storage

- Store the nail drill and its accessories in a cool, dry place, away from direct sunlight and moisture.
- Keep the drill bits in their designated cases to prevent damage and loss.

TROUBLESHOOTING

If you encounter any issues with your TOUCHBeauty Electric Nail Drill, please refer to the following common troubleshooting steps:

| Problem | Possible Cause | Solution |
|--|---|---|
| Device does not turn on. | Low battery or not charged. | Ensure the device is fully charged. Check the battery indicator lights. |
| Drill bit not spinning or spinning inconsistently. | Bit not properly installed or internal obstruction. | Ensure the drill bit is securely inserted into the chuck. Turn off the device, remove the bit, and check for any debris or obstruction in the chuck before reinserting. |
| Excessive vibration or noise during operation. | Loose drill bit or damaged bit. | Check if the drill bit is securely fastened. Replace the drill bit if it appears bent or damaged. |
| Device stops unexpectedly during use. | Overload protection or low battery. | Reduce pressure during use. Recharge the device if the battery is low. |

If the problem persists after attempting these solutions, please contact TOUCHBeauty customer support for further assistance.

SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Model Number | AG-2236 |
| Brand | TOUCHBeauty |
| Product Dimensions | 5.91 x 0.59 x 0.59 inches |
| Item Weight | 0.16 Kilograms (5.61 ounces) |
| Power Source | Battery Powered (1 Lithium Ion battery included) |
| Motor Speed | Up to 12,000 RPM (3 adjustable speeds) |
| Charging Time | Approx. 1.5 hours |
| Working Time | Approx. 3.5-4 hours (fully charged) |
| Material | Metal (High quality aluminum alloy) |
| Noise Level | Less than 40 decibels |

| Feature | Detail |
|-------------------|--------|
| Country of Origin | China |

WARRANTY AND SUPPORT

TOUCHBeauty stands behind the quality of its products. This product is typically covered by a return policy allowing for refund or replacement within 30 days of purchase, subject to the retailer's terms and conditions.

For product support, technical assistance, or warranty claims, please contact TOUCHBeauty customer service directly. Refer to the contact information provided on the product packaging or the official TOUCHBeauty website.

Manufacturer: TOUCHBeauty