#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Amazon Basics /
- Amazon Basics Upright Bagless Vacuum Cleaner for Carpet and Hard Floors, With Crevice and Upholstery Tools, Detachable Handle, Lightweight (8.4 lbs), 1.7L Dust Cup, 720W, 25ft Cord, Black/White

#### **Amazon Basics PD-KNRMY6AYFK**

# Amazon Basics Upright Bagless Vacuum Cleaner User Manual

Model: PD-KNRMY6AYFK

#### Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Amazon Basics Upright Bagless Vacuum Cleaner. Please read all instructions carefully before use and retain this manual for future reference.

The Amazon Basics Upright Bagless Vacuum Cleaner is designed for easy maneuverability and powerful cleaning on both carpeted and hard floors. Weighing just 8.4 lbs, it features a 720W motor with 12kPa suction power, a 25-ft power cord for extended reach, and a large 1.7L dust cup for continuous cleaning. Versatile attachments, including upholstery and crevice tools, along with a detachable handle, provide comprehensive cleaning solutions for various surfaces and tight spaces.

## **Safety Information**

WARNING: This product can expose you to chemicals which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to <a href="https://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a>.

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Do not leave the vacuum cleaner unattended when plugged in. Unplug from outlet when not in use and before servicing. Do not use with damaged cord or plug. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces. Do not use on wet surfaces. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Use only as described in this manual. Use only manufacturer's recommended attachments.

## **Package Contents**

- Amazon Basics Upright Bagless Vacuum Cleaner Unit
- Detachable Handle
- Crevice Tool
- Upholstery Tool
- Washable Filter (pre-installed)

## Setup

Your vacuum cleaner requires minimal assembly before first use. Ensure all components are present and undamaged.

#### **Handle Assembly**

Align the detachable handle with the opening at the top of the main vacuum body. Push firmly until it clicks securely into place. Ensure the handle is fully seated and stable before use.



Figure 1: Detachable handle for extended reach and versatile cleaning.

#### **Hose and Tool Attachment**

The flexible hose connects to the main unit for use with attachments. The crevice tool and upholstery tool can be stored on board the vacuum for convenience.



Figure 2: Efficient design with onboard storage for crevice and upholstery tools, and a 25-ft power cord.

## **Operating Instructions**

#### Powering On/Off

To turn the vacuum cleaner on, press the power button located near the base with your foot. Press it again to turn the vacuum off.

#### **Vacuuming Surfaces**

The vacuum is suitable for both carpet and hard floors. For optimal performance, ensure the floorhead is flat against



Figure 3: Effective cleaning on hard floors.

### **Using Attachments**

For detailed cleaning, detach the handle and connect the flexible hose. Attach either the crevice tool for tight spaces or the upholstery tool for furniture and delicate surfaces. The detachable handle can also be used directly with the hose for reaching high areas like ceilings and curtains.



Figure 4: Detachable handle allows for cleaning of high spaces such as ceilings and curtains.

#### **Maintenance**

#### **Emptying the Dust Cup**

The vacuum features a large 1.7L dust cup. To empty, press the quick-release button to detach the dust cup from the main unit. Position the dust cup over a trash receptacle and open the bottom flap to release collected debris. Close the flap and reattach the dust cup to the vacuum until it clicks securely.



Figure 5: Easy empty dust cup with quick release button.

#### Cleaning the Washable Filter

The vacuum includes a washable filter for long-lasting performance. To clean, remove the filter from the dust cup. Rinse the filter under cold water until the water runs clear. Allow the filter to air dry completely for at least 24 hours before reinserting it into the dust cup. Do not use detergent or hot water, and ensure the filter is completely dry before reassembly to prevent damage to the vacuum.





Figure 6: Washable filter for lasting performance and easy maintenance.

## Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet not working	Ensure plug is fully inserted; Test outlet with another appliance
Loss of suction	Dust cup full; Filter clogged; Hose/attachments clogged	Empty dust cup; Clean/dry filter; Check hose/attachments for blockages
Unusual noise/burning smell	Brush roll jammed; Motor overheating	Unplug immediately; Check brush roll for obstructions (hair, debris); Allow motor to cool down

## **Specifications**

Feature	Detail
Brand	Amazon Basics
Model Number	PD-KNRMY6AYFK
Special Feature	Bagless
Included Components	Crevice Tool and upholstery tool
Is Cordless?	No
Capacity	1.7 Liters
Wattage	720 watts
Recommended Uses	Carpet, Hardwood
Form Factor	Upright
Color	Black/White
Noise Level	82 dB
Amperage	6 Amps
Item Weight	8.4 pounds
Product Dimensions	11.9 x 11.4 x 41.3 inches

## **Warranty and Support**

For detailed warranty information and additional support, please refer to the official documentation provided with your product.

- User Manual (PDF)
- Warranty (PDF)

Protection plans are available for extended coverage:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly plan)

#### Related Documents - PD-KNRMY6AYFK



#### Amazon Basics Upright Bagless Lightweight Vacuum Cleaner User Manual

Comprehensive user manual for the Amazon Basics Upright Bagless Lightweight Vacuum Cleaner (Model VUS29AE1B). Provides detailed instructions on safety, operation, assembly, cleaning, maintenance, and troubleshooting. Includes specifications and contact information for support.





#### Amazon Basics Cylinder Bagless Vacuum Cleaner 2.5 L 700 W User Manual

User manual for the Amazon Basics Cylinder Bagless Vacuum Cleaner (2.5 L, 700 W). Covers assembly, operation, cleaning, maintenance, and troubleshooting. Includes model numbers B071VNC8M4, B072FBY7L4, B07C41FMF1 and safety information.



#### Amazon Basics Cylinder Bagless Vacuum Cleaner User Manual VCM43A16H

Comprehensive user manual for the Amazon Basics Cylinder Bagless Vacuum Cleaner (Model VCM43A16H). Includes setup, operation, cleaning, maintenance, safety instructions, and specifications for household use.



#### Amazon Basics Cylinder Bagless Vacuum Cleaner User Manual

Discover how to use and maintain your Amazon Basics Cylinder Bagless Vacuum Cleaner with this comprehensive user manual. It covers safety guidelines, operational procedures, cleaning tips, specifications, and troubleshooting for model VCS35B15KC.



#### Amazon Basics Chair Mat User Guide: Polycarbonate, PVC, and Vinyl Floor Protection

Comprehensive user guide for Amazon Basics Polycarbonate, PVC, and Vinyl chair mats. Includes detailed instructions for unpacking, selection based on floor type, proper use, care, and safety guidelines for optimal floor protection and mat longevity.



#### Amazon Basics VCB46A15F Cyclonic Bagged Cylinder Vacuum Cleaner User Manual

Comprehensive user manual for the Amazon Basics VCB46A15F cyclonic bagged cylinder vacuum cleaner, covering safety instructions, product description, operation, cleaning, maintenance, troubleshooting, and specifications.