

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution FSR78 ZV28960 Replacement Remote Control User Manual for Yamaha Soundbars

Beyution FSR78-ZV28960

Beyution FSR78 ZV28960 Replacement Remote Control User Manual

For Yamaha Soundbar and Home Audio Speaker Systems

1. PRODUCT OVERVIEW

This Beyution FSR78 ZV28960 replacement remote control is designed to operate various Yamaha Soundbar and Home Audio Speaker models. It offers a direct replacement solution without requiring complex programming or setup. The remote is lightweight, ergonomic, and features responsive buttons for ease of use.



Image 1.1: Angled view of the Beyution FSR78 ZV28960 replacement remote control, showcasing its ergonomic design and button layout.

Compatible Models

This remote control is compatible with the following Yamaha Soundbar and Home Audio Speaker models:

- ATS-1060
- ATS-1070
- YAS-106
- YAS-207
- YAS-107
- YAS-108
- YAS-207BL
- YAS-CU207
- YAS-106BL
- NS-WSW42
- SR-B20A
- ATS-B200

- YAS-1080
- ATS-2090
- ATS-2070

2. SETUP

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: No additional programming or pairing is required. The remote is ready for use once batteries are installed.

3. OPERATING INSTRUCTIONS

This remote control functions identically to the original remote for compatible Yamaha soundbar and speaker systems. Ensure a clear line of sight between the remote control and your audio device for optimal performance.





Image 3.1: Front view of the Beyution FSR78 ZV28960 remote control, highlighting the layout of all functional buttons.

Button Functions

Button	Function
Power ()	Turns the soundbar/speaker system on or off.
HDMI	Selects the HDMI input source.
TV	Selects the TV input source.
ANALOG	Selects the Analog input source.
BLUETOOTH	Selects the Bluetooth input source.
SURROUND	Activates or deactivates surround sound mode.

Button	Function
STEREO	Activates or deactivates stereo sound mode.
CLEAR VOICE	Enhances dialogue clarity.
BASS EXTENSION	Boosts low-frequency sound.
BLUETOOTH STANDBY	Enables or disables Bluetooth standby mode.
DIMMER	Adjusts the brightness of the soundbar's display indicators.
SUBWOOFER (+/-)	Adjusts the subwoofer volume level.
VOLUME (+/-)	Adjusts the main volume level.
MUTE ()	Mutes or unmutes the audio output.

4. MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface and internal components.

Storage

When not in use for extended periods, store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the remote will not be used for several weeks or months to prevent potential leakage and damage.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common problems and solutions:

- **Remote Not Responding:**

- Ensure batteries are correctly installed with the correct polarity (+/-).
- Replace old batteries with new AAA alkaline batteries.
- Check for any obstructions between the remote control and the soundbar/speaker system's infrared receiver.
- Ensure you are within the effective operating range (approximately 8-10 meters).

- **Limited Operating Range:**

- Replace batteries with fresh ones. Low battery power can reduce the remote's range.
- Ensure there are no strong light sources (e.g., direct sunlight, fluorescent lights) interfering with the infrared signal.

- **Specific Button Not Working:**

- Check if the button is physically stuck or damaged.
- If other buttons work, the issue might be specific to the soundbar's function or the remote itself. Try

replacing the remote if other troubleshooting steps fail.

6. SPECIFICATIONS

Feature	Detail
Model Number	FSR78-ZV28960
Brand	Beyution
Power Source	2 x AAA Batteries (not included)
Dimensions	5 x 1 x 0.5 inches (approx.)
Item Weight	0.317 ounces (without batteries)
Color	Black
Special Feature	Ergonomic Design
Operating Distance	Up to 10 meters (approx. 33 feet)

7. CUSTOMER SUPPORT

If you cannot find your specific model listed, or if you receive a remote control that does not function as expected, please contact our customer service team. We are committed to providing a satisfactory solution within 24 hours. For assistance, please reach out via the email provided by your retailer or on the product packaging.

© 2023 Beyution. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question