

TABU B0BN63T851

TABU 17.6 lbs Portable Twin Tub Washing Machine Instruction Manual

Model: B0BN63T851

1. INTRODUCTION

Thank you for choosing the TABU 17.6 lbs Portable Twin Tub Washing Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference. This compact washing machine is designed for small loads and is ideal for dorms, apartments, RVs, and camping environments.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, adhere to the following safety precautions:

- Read all instructions before using the appliance.
- Ensure the power supply matches the specifications of the machine (110V/60Hz).
- Always unplug the machine from the power outlet before cleaning, performing maintenance, or when not in use.
- Do not operate the machine with a damaged power cord or plug. If damaged, contact customer support.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical components in water or other liquids.
- Place the machine on a stable, level surface to prevent vibration and noise.
- Do not wash waterproof materials or items that may float, as this can cause imbalance and damage.
- Ensure the spin tub lid is closed securely before starting the spin cycle.
- Avoid touching moving parts during operation.
- Do not use hot water above 122°F (50°C).

3. PRODUCT OVERVIEW

3.1 Components



Figure 3.1: Front view of the TABU Portable Twin Tub Washing Machine.



Figure 3.2: Detailed view of the washer tub, spin tub, water inlet, and drain hose.

- **Washer Tub:** For washing clothes. Capacity: 11 lbs.
- **Spin Tub:** For spin-drying clothes. Capacity: 6.6 lbs.

- **Water Inlet:** Connection point for water supply.
- **Drain Hose:** For gravity drainage of used water. Length: 29.5 inches.
- **Control Panel:** Includes Wash Timer, Program Selector (Normal/Gentle/Drain), and Spin Timer.

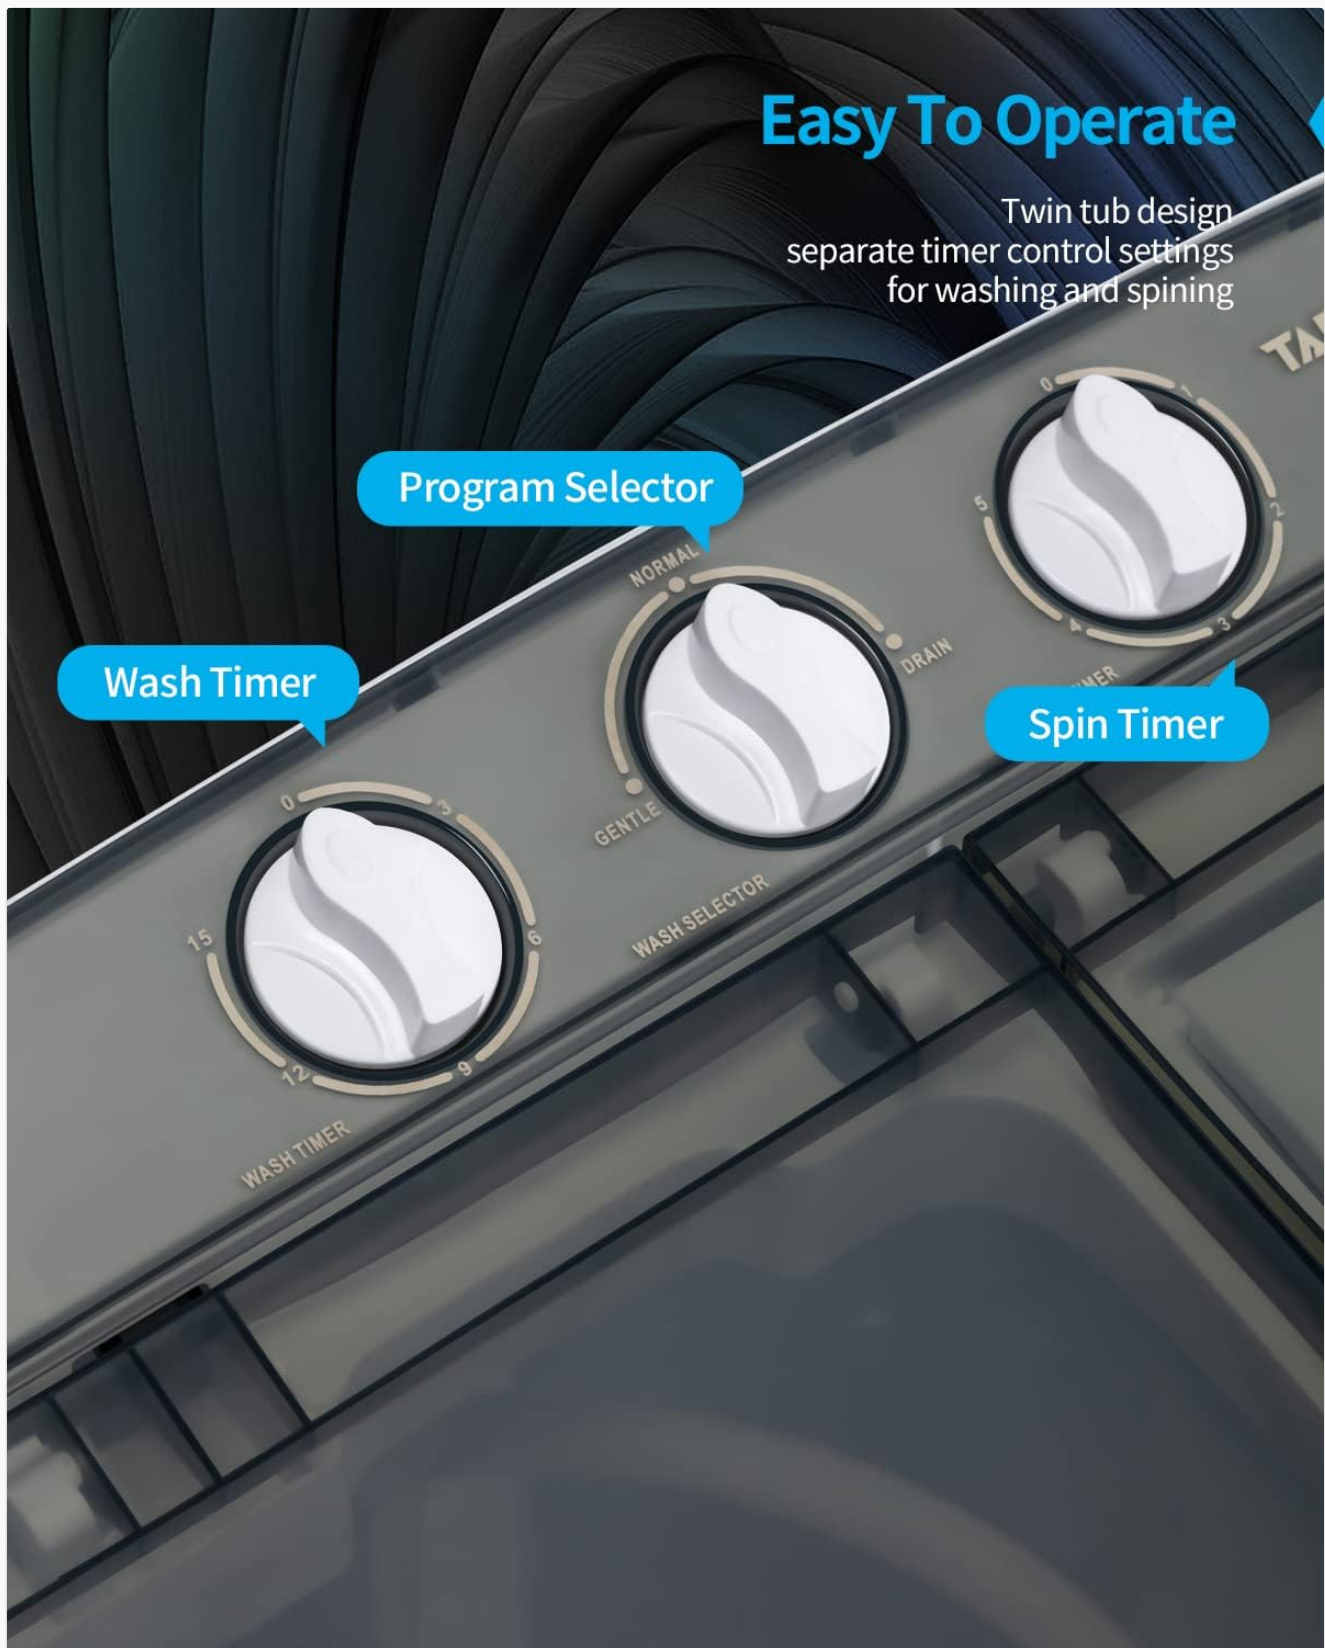


Figure 3.3: Close-up of the control panel.

3.2 Key Features

- **Twin Tub Design:** Allows simultaneous washing and spin-drying, saving time.
- **Easy Operation:** Simple knob controls for wash timing, wash options, drain options, and spin timing.
- **Powerful Performance:** Features a 1300 RPM motor for effective cleaning and efficient spin-drying.

- **Compact and Portable:** Designed for small living spaces and easy relocation.

4. SETUP

Follow these steps to set up your washing machine:

1. **Unpacking:** Carefully remove the washing machine from its packaging. Inspect for any damage.
2. **Placement:** Place the machine on a firm, level surface. Ensure there is enough space around it for ventilation and operation. The location should be near a water source and a drain.
3. **Water Inlet Connection:** Connect the water inlet hose to a suitable faucet. Ensure the connection is secure to prevent leaks.
4. **Drain Hose Positioning:** Position the drain hose to allow gravity drainage into a sink, bathtub, or floor drain. Ensure the hose is not kinked or blocked. The drain hose is 29.5 inches long.
5. **Power Connection:** Plug the power cord into a grounded 110V/60Hz electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Washing Cycle

1. **Load Clothes:** Open the washer tub lid and place clothes inside. Do not exceed the 11 lbs capacity. For best results, avoid overloading.
2. **Add Water and Detergent:** Fill the washer tub with water to the desired level. Add an appropriate amount of laundry detergent.
3. **Set Wash Timer:** Turn the 'Wash Timer' knob to select the desired wash duration (up to 15 minutes).
4. **Select Wash Option:** Turn the 'Program Selector' knob to 'Normal' for regular clothes or 'Gentle' for delicate items.
5. **Start Washing:** The machine will begin washing automatically once the timer is set.

5.2 Rinsing

1. **Drain Water:** After the wash cycle, turn the 'Program Selector' knob to 'Drain' to empty the dirty water from the washer tub.
2. **Refill:** Close the drain and refill the washer tub with clean water.
3. **Rinse Cycle:** Set the 'Wash Timer' for a short duration (e.g., 3-5 minutes) and the 'Program Selector' to 'Normal' or 'Gentle' to rinse the clothes.
4. **Final Drain:** Turn the 'Program Selector' to 'Drain' to remove the rinse water. Repeat rinsing if necessary.

5.3 Spin Drying Cycle

1. **Transfer Clothes:** Carefully transfer the washed and rinsed clothes from the washer tub to the spin tub. Do not exceed the 6.6 lbs capacity.
2. **Distribute Evenly:** Arrange the clothes evenly inside the spin tub to prevent imbalance and excessive vibration.
3. **Close Lid:** Ensure the spin tub lid is securely closed.
4. **Set Spin Timer:** Turn the 'Spin Timer' knob to select the desired spin duration (up to 5 minutes).
5. **Start Spinning:** The machine will begin spin-drying. The spin cycle will automatically stop when the timer runs out.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Tubs:** After each use, wipe down the inside of both the washer and spin tubs to remove any residue. Periodically, clean the tubs with a mild detergent and rinse thoroughly.
- **Drain Hose:** Ensure the drain hose is clear of lint or blockages.
- **Storage:** When not in use for an extended period, ensure both tubs are completely dry. Unplug the machine and store it in a dry, well-ventilated area.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Lid not closed; Timer not set.	Check power connection; Ensure lids are closed; Set the timer.
Water not draining	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten hose, clear blockages; Turn 'Program Selector' to 'Drain'.
Poor washing performance	Overloading; Insufficient water/detergent.	Reduce load size; Adjust water and detergent levels.
Excessive vibration during spin	Unevenly distributed load in spin tub.	Rearrange clothes evenly in the spin tub.
Power cord/Drain hose too short	Standard product design.	Consider using a suitable extension cord (3-prong type) and/or a longer compatible drain hose (purchased separately).

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	TABU
Model Number	B0BN63T851
Total Capacity	17.6 lbs
Washer Capacity	11 lbs
Spin Capacity	6.6 lbs

Feature	Specification
Product Dimensions (D x W x H)	13.8 x 21.2 x 25.2 inches
Item Weight	11 pounds
Power Supply	110V/60Hz
Total Power	360W (Wash: 240W / Dry: 120W)
Max Spin Speed	1300 RPM
Drainage Type	Gravity Drain
Control Type	Knob
Included Components	Washing Machine

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the manufacturer directly. You can also visit the official TABU store for more information: [TABU Store](#).

