

Voice Caddie VC300SE

Voice Caddie VC300 Voice Golf GPS User Manual

Model: VC300SE

1. INTRODUCTION

Welcome to the Voice Caddie VC300 Voice Golf GPS user manual. This device is designed to provide golfers with accurate, voice-guided distance information to the front, center, and back of the green, enhancing your game with hands-free convenience. The VC300 features automatic course and hole recognition, shot distance measurement, and a compact, clip-on design for ease of use.

2. PRODUCT OVERVIEW

The Voice Caddie VC300 is a lightweight and portable golf GPS device. Its intuitive design allows for quick access to essential yardage information.

2.1 Device Components

- **Main Unit:** The compact, white, heart-shaped device housing the GPS and audio components.
- **Integrated Clip:** Located on the back, designed for secure attachment to visors, belts, or pockets.
- **USB Charging Port:** For recharging the internal battery.
- **Control Button:** For activating voice prompts and other functions.

2.2 Key Features

- Audio Distance Information by Voice
- Automatic Course and Hole Recognition
- Preloaded with 22,000+ Courses Worldwide
- Shot Distance Measurement
- Volume Control
- Hands-Free Operation

2.3 Product Views



Figure 2.3.1: Front view of the Voice Caddie VC300, showcasing its compact, white, heart-shaped design with the Voice Caddie logo.



Figure 2.3.2: The Voice Caddy VC300 held in a hand, illustrating its small and ergonomic size for easy portability.



Figure 2.3.3: The Voice Caddie VC300 securely clipped to the brim of a golf visor, demonstrating its intended hands-free use during a round.



Figure 2.3.4: Side view of the Voice Caddie VC300, highlighting the USB charging port for convenient power replenishment.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your Voice Caddie VC300. Connect the device to a USB power source using the provided cable. A full charge typically takes approximately 2 hours. The device is equipped with a battery life of up to 9 hours on a full charge.

3.2 Powering On and Course Recognition

1. To power on, press and hold the main button until you hear an audible confirmation.
2. It is recommended to turn on the device upon arrival at the golf course, ideally before reaching the first tee.
3. The VC300 will automatically search for and recognize the golf course. This process may take up to 5 minutes. The device will audibly confirm once the course is found and ready for use.

3.3 Attaching the Device

Utilize the integrated clip to attach the VC300 to your golf visor, cap, belt, or pocket. Ensure it is securely fastened to prevent accidental loss during play. The clip is designed to be snug for secure attachment.

4. OPERATING INSTRUCTIONS

4.1 Getting Yardage Information

- **Current Hole Yardage:** Once the course and hole are recognized, the device will automatically provide the distance to the center of the green.
- **Front/Back Yardage:** To hear the distances to the front and back of the green, press the main button once. The device will cycle through center, front, and back distances.

4.2 Automatic Hole Recognition

The VC300 automatically advances to the next hole as you move around the course. Listen for the audible confirmation of the current hole number.

4.3 Shot Distance Measurement

1. At your starting point (e.g., tee box or where you hit your shot), press and hold the main button until you hear a confirmation that shot measurement has begun.
2. Walk to your ball. The device will continuously measure the distance.
3. Upon reaching your ball, press the main button again to hear the total distance of your shot.

4.4 Volume Control

The VC300 features adjustable volume. Consult the quick start guide (not provided here) for specific button combinations to increase or decrease the volume to your preference. The audio is designed to be clear without disturbing others.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth to remove dirt or debris. Do not use harsh chemicals or abrasive cleaners. Ensure the USB port is free of moisture and debris before charging.

5.2 Battery Care

- Charge the device regularly, even if not in frequent use, to maintain battery health.
- Avoid exposing the device to extreme temperatures, which can degrade battery performance.
- If storing for an extended period, charge the battery to approximately 50% before storage.

6. TROUBLESHOOTING

6.1 Device Not Powering On

- Ensure the device is fully charged. Connect it to a power source and check for charging indicators.
- Press and hold the main button for several seconds to attempt a power cycle.

6.2 Course Not Found / Incorrect Hole Recognition

- Ensure you are outdoors with a clear view of the sky for optimal GPS signal reception.
- Turn the device on well in advance (5-10 minutes) of your tee time to allow sufficient time for satellite acquisition and course recognition.
- If the device recognizes the wrong hole, try moving slightly or restarting the device to re-acquire the correct position.
- Verify that the course you are playing is among the 22,000+ preloaded courses.

6.3 Inaccurate Distances

- Ensure the device has a strong GPS signal. Obstructions like dense trees or tall buildings can interfere with accuracy.
- Confirm the device has correctly identified your current hole.

7. SPECIFICATIONS

Feature	Detail
Brand	Voice Caddie
Model Name	VC300 (VC100 Black in some specifications, but VC300 is the product)

Model Number	VC300SE
Color	White
Item Dimensions (LxWxH)	2.1 x 0.5 x 2.1 inches
Item Weight	0.14 Kilograms
Material	Plastic
Battery Life	Up to 9 Hours
Connectivity Technology	GPS
Preloaded Courses	22,000+ worldwide
Mounting Type	Belt mount, Visor clip


8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please refer to the official Voice Caddie website or contact their customer service directly. Retain your proof of purchase for warranty claims.

Online Resources: Visit the official Voice Caddie website for FAQs, firmware updates, and additional support materials.

© 2024 Voice Caddie. All rights reserved.

Documents - Voice Caddie – VC300SE

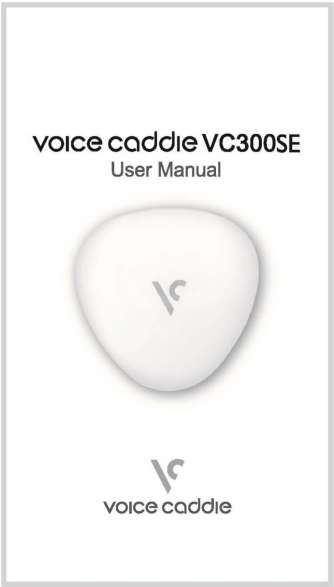

[\[pdf\]](#) User Manual
Voice Caddie VC300SE Golf GPS Rangefinder User Manual 8165858210115335419 cdn shopify s files 1
0041 6386 2626 |||
...
lang: **score:25** filesize: 883.46 K page_count: 11 document date: 2019-02-27



[\[pdf\]](#) User Manual
jsint manual hub Created Date 10 29 2023 3 09 18 PM VOICE CADDIE VC300SE 01 files 775834ea f2f3
4027 8217 6a27b85a5f26 |||
...
lang: **score:22** filesize: 1.8 M page_count: 1 document date: 2024-08-13



[\[pdf\]](#) User Manual

VC300SE Device Voice caddie User Man cas t the power is ON will ching for GPS and recood golf
Golf Course minutes to sync Buttor onds select Meters Press hold tum on off Hole 180831 manual
ENGCHN voicecaddie 2019 11 |||

...

lang: **score:18** filesize: 5.79 M page_count: 1 document date: 2018-08-31