

Kitchen HQ Smokeless Indoor Electric Barbecue Grill

Kitchen HQ Smokeless Indoor Electric Barbecue Grill User Manual

Model: Smokeless Indoor Electric Barbecue Grill

INTRODUCTION

Thank you for choosing the Kitchen HQ Smokeless Indoor Electric Barbecue Grill. This appliance is designed to provide a convenient and smoke-free grilling experience indoors. With its advanced turbo smoking technology and built-in fan, it minimizes cooking fumes, allowing you to enjoy grilled meals with less oil. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your grill.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the grill.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Kitchen HQ Smokeless Indoor Electric Barbecue Grill:



Figure 1: The Kitchen HQ Smokeless Indoor Electric Barbecue Grill. This image shows the main unit in black, featuring the non-stick grill plate, the base with integrated fan, and the side control panel.



Figure 2: Detail of the LED smart temperature control panel. This panel includes a power button, a fan button, and temperature adjustment controls with settings from 200°F to 450°F.

Key Components:

- **Grill Plate:** Made of aluminum with a non-stick coating, designed with grooves to filter out excess grease. Dimensions: 15" x 9".
- **Base Unit:** Houses the heating element and the built-in fan for smoke control.
- **Drip Tray/Water Tray:** Collects grease and helps in smoke reduction.
- **Control Panel:** Features LED smart temperature control with 6 settings (up to 450°F) and a fan button.
- **Power Cord:** For connecting the grill to an electrical outlet.
- **Cleaning Brush:** Included for maintenance.

SETUP GUIDE

Before first use, ensure all packaging materials are removed. Wash the grill plate and drip tray with warm, soapy water, then rinse and dry thoroughly. Wipe the base unit with a damp cloth.

1. Place the base unit on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the unit.
2. Insert the drip tray into the designated slot in the base unit. Ensure it is properly seated.
3. Place the grill plate securely on top of the base unit, ensuring it aligns with the heating element.
4. Ensure the power cord is not tangled and is placed away from hot surfaces.

OPERATING INSTRUCTIONS

Pre-heating the Grill:

1. Plug the power cord into a standard electrical outlet.
2. Press the power button on the control panel to turn on the grill.
3. Press the fan button to activate the built-in smoke extraction fan. It is recommended to always use the fan during operation.
4. Use the temperature controls (+/- buttons) to select your desired grilling temperature. The grill offers 6 temperature settings, up to 450°F. Allow the grill to pre-heat for 5-10 minutes until it reaches the set temperature.

Grilling Food:

- Once pre-heated, carefully place food onto the grill plate. Avoid overcrowding the grill to ensure even cooking.
- The non-stick surface requires little to no oil, contributing to healthier cooking.
- Monitor food as it cooks. The grill plate's grooves will help drain excess grease into the drip tray.
- For best results and to achieve grill marks, avoid moving food too frequently.

After Grilling:

- When finished cooking, press the power button to turn off the grill.
- Unplug the appliance from the wall outlet.
- Allow the grill to cool completely before attempting to clean or disassemble.

CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and optimal performance of your grill. Always ensure the grill is unplugged and completely cool before cleaning.

- **Detachable Design:** The grill plate and drip tray are detachable for easy cleaning.
- **Grill Plate & Drip Tray:** These components are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reassembling.
- **Base Unit:** Wipe the exterior of the base unit with a soft, damp cloth. Do not immerse the base unit, power cord, or plug in water or any other liquid.
- **Non-Stick Coating:** To preserve the non-stick coating, avoid using metal utensils or abrasive cleaning pads. The included cleaning brush can be used for stubborn residue.
- **Fan Maintenance:** Periodically check the fan area for any debris. Ensure it is clear for proper smoke extraction.

TROUBLESHOOTING

If you encounter issues with your grill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not turn on.	Not plugged in; power outlet issue; power button not pressed.	Ensure the grill is securely plugged into a working outlet. Press the power button firmly.
Grill is not heating up.	Temperature not set; grill plate not properly seated.	Verify a temperature setting has been selected. Ensure the grill plate is correctly placed on the base unit.
Excessive smoke during operation.	Fan not activated; drip tray empty or full; fatty foods.	Ensure the fan is turned on. Check if the drip tray needs to be emptied or if it contains water (some models use water for smoke reduction). Reduce the amount of fat on food.
Food sticks to the grill plate.	Insufficient pre-heating; damaged non-stick coating.	Allow the grill to pre-heat fully before adding food. Ensure proper cleaning and avoid abrasive utensils to protect the non-stick surface.

SPECIFICATIONS

Feature	Detail
Brand	Kitchen HQ
Model Name	Smokeless Indoor Electric Barbecue Grill

Feature	Detail
ASIN	B0BN71Q8S7
UPC	704335053839
Color	Black
Material	Aluminum (Grill Plate)
Special Feature	Electric, Smokeless, Non-Stick Finish
Item Weight	12 Pounds
Temperature Settings	6 settings, up to 450°F
Included Components	Cleaning Brush

WARRANTY AND SUPPORT

This Kitchen HQ Smokeless Indoor Electric Barbecue Grill is a Manufacturer Refurbished item and includes a **1 Year Refurbished Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims or technical support, please refer to the contact information provided at the point of purchase or visit the Amazon Renewed support page for assistance with refurbished products.

For general inquiries or further assistance, you may also visit the [Amazon Renewed Brand Page](#).