

Analogue Analogue-0650245198125

Analogue Pocket Console User Manual

Model: Analogue-0650245198125



INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your Analogue Pocket Console. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

1. SETUP

1.1 Unboxing

Carefully remove all components from the packaging. Ensure the following items are present:

- Analogue Pocket Console
- USB-C Charging Cable
- Quick Start Guide (if included)

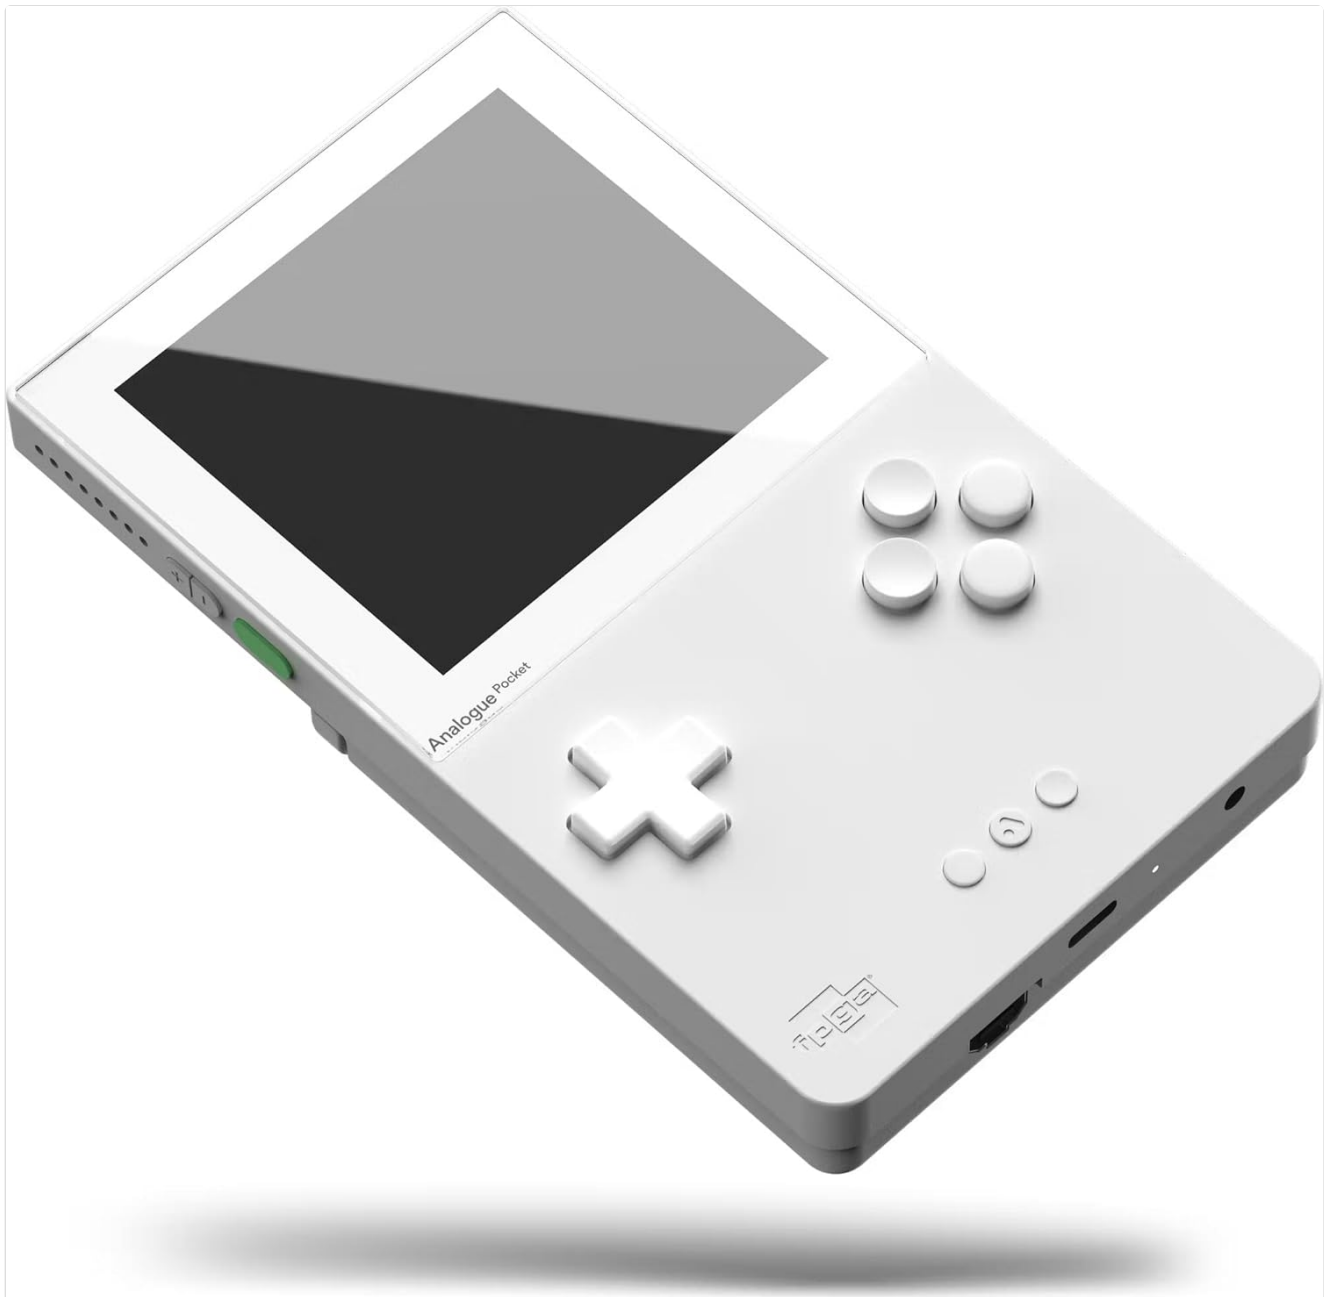 


Figure 1: Analogue Pocket Console (White) - Angled View. This image displays the console's front and side, highlighting the screen, D-pad, action buttons, and shoulder buttons.

1.2 Charging the Device

Before initial use, fully charge the Analogue Pocket Console. Connect the USB-C charging cable to the console's USB-C port and the other end to a compatible USB power adapter (not included) or a powered USB port.

- The charging indicator light will illuminate during charging.
- A full charge typically takes approximately 2-3 hours.

1.3 Inserting Game Cartridges

The Analogue Pocket supports various game cartridges. To insert a cartridge:

1. Ensure the console is powered off.
2. Locate the cartridge slot on the top edge of the console.
3. Gently slide the game cartridge into the slot until it clicks into place. Do not force the cartridge.



Figure 2: Analogue Pocket Console (White) - Front View. This image shows the console from a direct front perspective, emphasizing the screen, D-pad, and action buttons.

1.4 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power button until a power-off menu appears on the screen, then select "Power Off." Alternatively, hold the Power button for an extended period (e.g., 5-10 seconds) for a forced shutdown.

2. OPERATING INSTRUCTIONS

2.1 Basic Controls

Familiarize yourself with the console's control layout:

- **D-Pad:** Directional input for movement and menu navigation.
- **A/B/X/Y Buttons:** Action buttons, functions vary by game.

- **Start/Select Buttons:** Typically used for pausing games, confirming selections, or accessing in-game menus.
- **Shoulder Buttons (L/R):** Additional action buttons, functions vary by game.
- **Volume Buttons:** Adjust audio output.
- **Brightness Buttons:** Adjust screen brightness.

2.2 Navigating the System Menu

Upon powering on, you will typically be presented with the system menu. Use the D-Pad to navigate through options and the A button to select. Common menu options include:

- **Play Cartridge:** Starts the game inserted in the cartridge slot.
- **Settings:** Access display, audio, control, and system settings.
- **Library:** View and manage installed games or system files (if applicable).

2.3 Playing Games

Once a game cartridge is inserted and the console is powered on, select "Play Cartridge" from the main menu to begin playing. Follow in-game instructions for specific controls and gameplay mechanics.

2.4 Saving and Loading Game Progress

Game saving and loading functionality is dependent on the specific game and cartridge. Refer to the individual game's instructions for details on how to save your progress.

2.5 Connecting Accessories

The Analogue Pocket may support various accessories (e.g., docks, external controllers). Refer to the accessory's specific manual for connection and usage instructions.

3. MAINTENANCE

3.1 Cleaning the Console

To maintain the appearance and functionality of your console:

- Use a soft, dry, lint-free cloth to wipe the screen and exterior.
- For stubborn marks, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.
- Do not spray cleaning solutions directly onto the console.

3.2 Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not allow the battery to fully deplete for extended periods.
- If storing the console for a long time, charge it to approximately 50% before storage.

3.3 Software Updates

Periodically check the official Analogue website for firmware updates. Updates can provide performance improvements, bug fixes, and new features. Follow the instructions provided with the update files carefully.

4. TROUBLESHOOTING

If you encounter issues with your Analogue Pocket Console, refer to the following common problems and solutions:

Problem	Possible Solution
Console does not power on.	Ensure the battery is charged. Connect the console to a power source and attempt to power on after a few minutes.
Game cartridge not recognized.	Ensure the cartridge is fully and correctly inserted. Clean the cartridge contacts with a cotton swab and isopropyl alcohol if necessary.
Screen is blank or flickering.	Try restarting the console. Check screen brightness settings. If the issue persists, contact support.
Buttons are unresponsive.	Restart the console. Ensure no debris is lodged around the buttons.

5. SPECIFICATIONS

Feature	Detail
Model Number	Analogue-0650245198125
Dimensions (Package)	10.87 x 6.93 x 2.83 inches
Item Weight	1.13 pounds
Type of Item	Video Game Console
First Available	January 28, 2023

6. WARRANTY AND SUPPORT

6.1 Warranty Information

The Analogue Pocket Console comes with a limited manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Analogue website for detailed terms and conditions. This warranty typically covers defects in materials and workmanship under normal use.

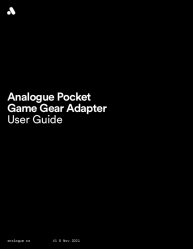 
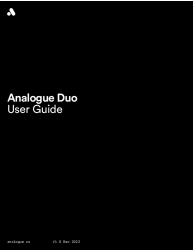 
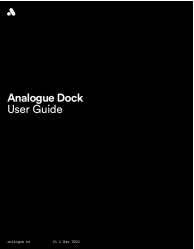 
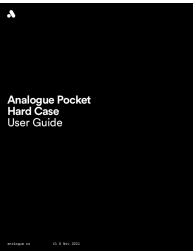 
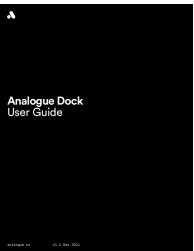 
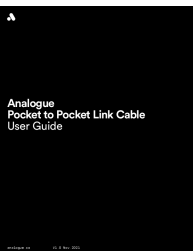 
6.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Analogue customer support. Contact information can usually be found on the official Analogue website or in your product's packaging.

Website: [www.analogue.co](#) (Example link, actual link may vary)
Email: support@analogue.co (Example email, actual email may vary)



Related Documents - Analogue-0650245198125

	<p>Analogue Pocket Game Gear Adapter User Guide</p> <p>A concise guide on how to use the Analogue Pocket Game Gear Adapter, detailing the simple steps for inserting the adapter and Game Gear cartridges to play games.</p>
	<p>Analogue Duo User Guide</p> <p>Comprehensive user guide for the Analogue Duo video game console, covering setup, features, settings, controller compatibility, and advanced usage for playing TurboGrafx-16, PCE, SuperGrafx, and CD-ROM² games.</p>
	<p>Analogue Dock User Guide: Connect and Play Analogue Pocket on HDTV</p> <p>This user guide provides comprehensive instructions for setting up and using the Analogue Dock, enabling Analogue Pocket users to connect their device to an external display for an enhanced gaming experience. It covers hardware overview, setup, firmware upgrades, and detailed controller compatibility and button mapping.</p>
	<p>Analogue Pocket Hard Case: User Guide and Instructions</p> <p>Official user guide for the Analogue Pocket Hard Case, providing step-by-step instructions on how to safely use and secure your Analogue Pocket device. Learn how to open the case, insert your Analogue Pocket, and close the lid.</p>
	<p>Analogue Dock User Guide</p> <p>User guide for the Analogue Dock, detailing its features, setup, ports, LED indicators, controller pairing, and firmware upgrades. Connect your Analogue Pocket to an HDTV and use wireless or wired controllers.</p>
	<p>Analogue Pocket to Pocket Link Cable User Guide</p> <p>User guide for the Analogue Pocket to Pocket Link Cable, detailing usage with Game Boy, Game Boy Color, and Game Boy Advance systems, and compatibility with Nintendo handheld peripherals.</p>