

[Manuals.plus](#) /

> [Tamagotchi](#) /

> Tamagotchi Nano x Demon Slayer - Breath of Water Color Instruction Manual

Tamagotchi 88568

Tamagotchi Nano x Demon Slayer - Breath of Water Color Instruction Manual

Brand: Tamagotchi | Model: 88568

1. INTRODUCTION

The Tamagotchi Nano x Demon Slayer - Breath of Water Color is a compact virtual pet device designed for fans of Demon Slayer -Kimetsu No Yaiba-. This device allows you to raise and interact with various Demon Slayer characters, following the storyline of the Entertainment District Arc. It features unique programming and mini-games to enhance your virtual pet experience.

This device is suitable for ages 8 and up.

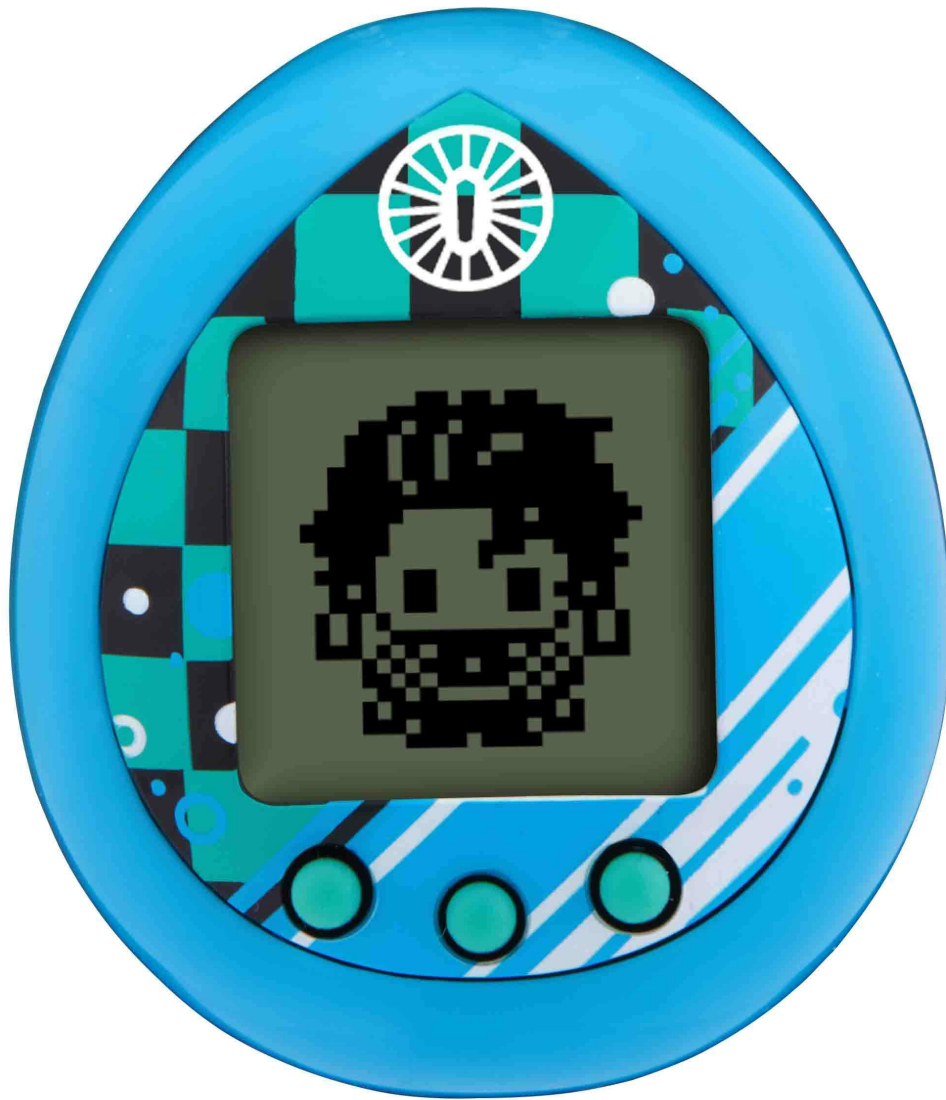


Image: The Tamagotchi Nano x Demon Slayer - Breath of Water Color device, featuring a blue and green design inspired by Tanjiro's Breath of Water.

What's Included:

- Demon Slayer Tamagotchi Nano - Breath of Water Color device
- 2 x LR44 batteries (pre-installed or included separately)

2. IMPORTANT SAFETY INFORMATION

CHOKING HAZARD: Small parts. Not for children under 3 years of age. Adult supervision is recommended for younger users.

Please keep batteries out of reach of small children. If swallowed, seek immediate medical attention.

3. SETUP

3.1. Unboxing and Battery Installation

Carefully remove the Tamagotchi Nano device from its packaging. The device requires two LR44 batteries, which are included. If the device does not power on, or if the screen is blank, you may need to install or

replace the batteries.

1. Locate the battery compartment on the back of the device.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert two LR44 batteries, ensuring correct polarity (+/-).
4. Securely close the battery compartment cover.





Image: The Tamagotchi Nano x Demon Slayer - Breath of Water Color device shown in its original packaging.

3.2. Initial Power-On

After battery installation, the device should power on automatically. If not, press the reset button on the back of the device using a pointed object (e.g., a pen tip). You will then be prompted to set the time.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and initial setup of the Tamagotchi Nano device, showing how to remove it from packaging and prepare it for use.

4. OPERATING INSTRUCTIONS

Your Tamagotchi Nano allows you to raise a Demon Slayer character. The character's evolution and growth depend on how you care for it.

4.1. Raising Your Demon Slayer

- **Feeding:** If your Slayer is hungry, provide a rice ball. If they are in a bad mood, offer green tea to improve their spirits.
- **Training:** Engage your Slayer in various activities and mini-games to train them. Your training methods influence which of the 18 possible Slayers (including 3 new characters from the Entertainment District Arc) your character will evolve into.
- **Neglect and Injury:** Neglecting your Slayer's needs can lead to injury. Ensure you treat any injuries promptly before a Kakushi arrives to remove the character.
- **Daily Events:** Scenes from the Demon Slayer -Kimetsu No Yaiba- Entertainment District Arc will appear at certain times each day.
- **Unlocking Features:** Continue playing to reveal additional features such as Kasugai garasu (Kasugai Crow), Chuntaro, and encounters with demons.





Image: A close-up view of the Tamagotchi Nano device, displaying a pixelated character on its screen.

4.2. Mini-Games

The device includes three different mini-games to play with your Demon Slayer:

- **Cut Mimizu-Obi:** A timed button-pressing game.
- **Catch the Luggage:** An interactive game where you catch falling luggage.
- **Play the Shamisen with Zenko:** A rhythm-based game.

5. MAINTENANCE

To ensure the longevity of your Tamagotchi Nano device, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the device gently with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** This device is not waterproof. Avoid contact with water or other liquids.
- **Battery Replacement:** Replace batteries when the screen becomes dim or the device stops responding. Always use LR44 batteries.

6. TROUBLESHOOTING

Problem	Solution
Device screen is blank or unresponsive.	This often indicates a need for a reset or battery replacement. First, try pressing the reset button on the back of the device using a pointed object. If the issue persists, replace the LR44 batteries.
Character is injured frequently.	Ensure you are regularly feeding your Slayer (rice ball for hunger, green tea for bad mood) and engaging in mini-games. Promptly treat any injuries that occur.
Difficulty evolving to a specific character.	Character evolution is influenced by care and training methods. Experiment with different feeding schedules and mini-game participation to achieve desired evolutions.

7. SPECIFICATIONS

Feature	Detail
Model Number	88568
UPC	045557885687
Screen Size	1.57 Inches
Item Dimensions (L x W x H)	0.98"L x 1.18"W x 1.57"H
Item Weight	0.04 Kilograms
Power Source	Battery Powered (2 x LR44 batteries included)
Display Type	LCD

Feature	Detail
Material Type	ABS, PC, SI
Age Range Description	8+
Manufacturer	Bandai

8. WARRANTY AND SUPPORT

For detailed warranty information, customer support, or to access English instructions, please visit the official Bandai website or contact their customer service department. Specific warranty terms may vary by region.

English instructions are available at [Bandai.com](https://www.bandai.com).