

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BOGASING](#) /
- › [BOGASING M5 Portable Bluetooth Speaker User Manual](#)

BOGASING M5



BOGASING M5 Portable Bluetooth Speaker

USER MANUAL

Introduction

Thank you for choosing the BOGASING M5 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: Front view of the BOGASING M5 Portable Bluetooth Speaker.

Package Contents

Upon opening the package, please verify that all items are present and in good condition:

- 1 x BOGASING M5 Bluetooth Speaker

- 1 x USB-C Charging Cable
- 1 x AUX Cable
- 1 x User Manual (this document)

Product Overview

Familiarize yourself with the various components and controls of your BOGASING M5 speaker.



Image: Top panel of the BOGASING M5 speaker showing power, volume, playback, and EQ buttons.

The BOGASING M5 features intuitive controls on its top panel for easy access to power, volume adjustment, music playback, and equalizer settings. The speaker also includes a battery indicator to show the remaining charge.



Image: Side view of the BOGASING M5 speaker showing USB, Type-C, AUX, and TF card input ports.

Multiple input options are available, including USB, Type-C for charging, AUX for wired connections, and a TF card slot for direct media playback.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C cable to the speaker's Type-C port and the other end to a compatible USB power adapter (not included). The battery indicator lights will show charging progress and turn solid when fully charged.

- **Charging Time:** Approximately 3.5-4 hours for a full charge.
- **Battery Life:** Up to 30 hours of playtime at moderate volume.

2. Powering On/Off

- **To Power On:** Press and hold the **Power button** (🔌) for 2 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the **Power button** for 2 seconds. You will hear an audible prompt.

3. Bluetooth Pairing

The BOGASING M5 uses Bluetooth 5.3 for a stable and fast connection.

1. Ensure the speaker is powered on and in Bluetooth pairing mode (the Bluetooth indicator light will flash blue).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "BOGASING M5" from the list.
4. Once connected, the Bluetooth indicator light will turn solid blue, and you will hear a confirmation sound.

The speaker will automatically reconnect to the last paired device when powered on, if the device is within range.

4. Connecting via AUX Input

Use the provided 3.5mm AUX cable to connect the speaker to devices without Bluetooth capability.

1. Connect one end of the AUX cable to the speaker's AUX port.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode.

5. Playing from TF Card / USB Flash Drive

Insert a TF (microSD) card or a USB flash drive into the respective port. The speaker will automatically detect and play audio files from the storage device.

6. True Wireless Stereo (TWS) Pairing

You can pair two BOGASING M5 speakers together for a true stereo sound experience.



Image: Two BOGASING M5 speakers shown together, illustrating True Wireless Stereo pairing.

1. Ensure both M5 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the **TWS button** (usually indicated by a chain link icon or similar) for 2 seconds. The speaker will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. Once connected, the primary speaker's Bluetooth indicator will flash, and the secondary speaker's indicator will be solid.
4. Now, connect your device to the primary speaker via Bluetooth as described in step 3.

To disconnect TWS, press and hold the TWS button on either speaker again.

Operating the Speaker

1. Volume Control

- **Volume Up:** Press the **'+' button**.
- **Volume Down:** Press the **'-' button**.

2. Music Playback Control

- **Play/Pause:** Press the **Play/Pause button** (⏮).
- **Next Track:** Press and hold the **'+' button**.
- **Previous Track:** Press and hold the **'-' button**.

3. Equalizer (EQ) Modes

The BOGASING M5 offers three distinct EQ modes to enhance your listening experience.



Image: Visual representation of the three EQ modes: 3D Stereo, Vocal, and Super Bass.

- **To Change EQ Mode:** Press the **EQ button** (often indicated by a musical note or wave icon). Each press cycles through the modes.
- **3D Stereo:** Provides a balanced, immersive surround sound.
- **Vocal:** Enhances clarity and naturalness of vocals.
- **Super Bass:** Delivers deep and powerful bass.

4. Call Management (if applicable)

If connected to a smartphone, the speaker can be used for hands-free calls.

- **Answer Call:** Press the **Play/Pause button** once.
- **End Call:** Press the **Play/Pause button** once during a call.
- **Reject Call:** Press and hold the **Play/Pause button** for 2 seconds.

Maintenance

Proper care ensures the longevity and performance of your BOGASING M5 speaker.

- **Cleaning:** Use a soft, dry cloth to wipe the speaker's surface. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Water Resistance (IPX7):** The speaker is IPX7 waterproof, meaning it can be submerged in up to 1 meter of water for 30 minutes. Ensure the charging port cover is securely closed before exposing the speaker to water. After exposure to water, dry the speaker thoroughly before charging.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to about 50% every few months to preserve battery health.
- **Avoid Impacts:** While durable, avoid dropping the speaker or subjecting it to strong impacts, as this can damage internal components.

Troubleshooting

If you encounter issues with your BOGASING M5 speaker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not turn on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode or too far from device.	Ensure speaker is in pairing mode (flashing blue light). Move speaker closer to device (within 10 meters). Forget "BOGASING M5" on your device's Bluetooth list and try pairing again.
No sound or distorted sound.	Volume too low, incorrect input mode, or poor connection.	Increase speaker and device volume. Check if the correct input mode (Bluetooth, AUX, TF Card, USB) is selected. Ensure Bluetooth connection is stable or AUX cable is fully inserted.
Short battery life.	High volume usage, aging battery, or not fully charged.	Reduce volume. Ensure speaker is fully charged before use. Battery performance may degrade over time.
TWS pairing fails.	Speakers already connected to other devices or too far apart.	Ensure both speakers are disconnected from other Bluetooth devices. Place speakers close to each other during TWS pairing.

If the problem persists, please contact BOGASING customer support.

Specifications

Feature	Detail
Model Number	M5
Output Power	40 Watts
Bluetooth Version	5.3
Battery Capacity	6000 mAh
Playtime	Up to 30 hours
Waterproof Rating	IPX7
Connectivity	Bluetooth, AUX, TF Card, USB
Dimensions (L x W x H)	16 x 7.5 x 7 cm (approx.)
Frequency Response	20 KHz
Recommended Use	Pool, Beach, Outdoor

Warranty and Support

The BOGASING M5 speaker comes with a **12-month manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

The warranty does not cover damage caused by:

- Accident, abuse, misuse, or improper operation.
- Unauthorized repair or modification.
- Failure to follow instructions in this manual.

For warranty claims or technical support, please contact BOGASING customer service through the retailer where you purchased the product or visit the official BOGASING website for contact information.

Online Support: [Visit the BOGASING Store on Amazon](#)