

[Manuals.plus](#) /

› [iWALK](#) /

› iWALK Charger Station for Portable Charger Instruction Manual

iWALK LPE002

iWALK Charger Station Instruction Manual

Model: LPE002

PRODUCT OVERVIEW

The iWALK LinkPod Charging Station is a family-sized charger designed to efficiently charge and store multiple iWALK LinkPod portable chargers. It is compatible with various LinkPod models, including 3350mAh, 4500mAh, 4800mAh, and 5000mAh versions, allowing you to charge different types of portable chargers simultaneously.

This station serves as the ideal storage solution for your iWALK portable chargers, ensuring they are always in a designated location, fully charged, and ready for use. Its unique protection switch prevents overcharging, safeguarding your power banks and maintaining their functionality.

The station supports charging up to four iWALK LinkPod portable chargers concurrently, providing a 10W output power. Additionally, it features a USB-A output port for charging one extra device, making it a versatile charging hub for your home or during social gatherings.



Figure 1: iWALK Charger Station with LinkPod portable chargers.

SETUP GUIDE

1. **Unpack Contents:** Carefully remove the iWALK charging station, USB-C to USB-C cable, and user manual from the packaging.
2. **Connect Power:** Connect one end of the provided USB-C to USB-C cable to the USB-C input port on the back of the iWALK charging station. Connect the other end to a genuine USB-C wall charger (not included). For optimal charging speed, it is recommended to use a wall charger with an output power of at least 5V 2A.
3. **Placement:** Place the charging station on a stable, flat surface such as a countertop, desk, or nightstand. The anti-slip feet on the bottom will help secure it in place.



Figure 2: USB-C input ports on the charging station.

OPERATING INSTRUCTIONS

1. **Insert LinkPods:** Gently insert your iWALK LinkPod portable chargers into the designated USB-C slots on the charging station. Ensure they click securely into place. The station can accommodate up to four LinkPods.
2. **Activate Charging:** Press the power button located on the front of the charging station. The button will light up green, and the charge indicator lights on your LinkPods will illuminate, indicating that charging has begun.
3. **Charge Additional Devices:** The station includes a USB-A output port on the side. You can use this port to charge an additional device, such as a smartphone or tablet, while your LinkPods are charging.
4. **Charging Completion:** Once your LinkPods are fully charged, the indicator lights on the LinkPods will change (refer to your LinkPod's specific manual for light indications). You can then press the power button on the station again to turn off charging, or leave them in place for convenient storage.



Figure 3: Power button to activate charging.



Figure 4: USB-A output port for charging an additional device.

CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the charging station. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, store the charging station in a cool, dry place away from direct sunlight and extreme temperatures.

- **Handling:** Avoid dropping the device or subjecting it to strong impacts, as this may damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LinkPods not charging	Power button not pressed; station not connected to power; LinkPods not properly seated.	Ensure the power button is pressed (green light on). Verify the USB-C cable is securely connected to both the station and a working wall charger. Re-insert LinkPods firmly into their slots.
Slow charging speed	Insufficient power from wall charger.	Use a genuine USB-C wall charger with an output of at least 5V 2A (10W). Avoid using low-power USB-A chargers if possible.
Station not turning on	No power supply; faulty cable/charger.	Check power connection. Try a different USB-C cable and wall charger to rule out faulty accessories.

TECHNICAL SPECIFICATIONS

Feature	Detail
Model Number	LPE002
Product Dimensions	3.2 x 1 x 2 inches
Item Weight	5.6 ounces
Color	Black
Connector Type	USB Type C (Input), USB Type C (Output to LinkPods), USB Type A (Output)
Output Power	10W (for LinkPods)
Compatibility	iWALK LinkPod portable chargers (3350mAh, 4500mAh, 4800mAh, 5000mAh)
Special Features	Over Charging Protection, Anti-slip feet

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official iWALK website or contact the seller directly. Keep your purchase receipt as proof of purchase for any warranty claims.

For further assistance or technical inquiries, please visit the iWALK store on Amazon or contact their customer service team.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question