

Haunted Living 1902

Haunted Living 20 ct. LED Battery-Powered Spider Lights User Manual

Model: 1902

1. INTRODUCTION

Thank you for choosing the Haunted Living 20 ct. LED Battery-Powered Spider Lights. These decorative lights are designed to add a festive ambiance to your indoor or outdoor spaces. Featuring 20 LED lights shaped like spiders, they are battery-operated for flexible placement and are water-resistant for versatile use.

2. SAFETY INFORMATION

- Always use the specified battery type (3 AA batteries).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not going to be used for an extended period.
- Keep batteries out of reach of children.
- Do not expose the battery compartment to excessive moisture or direct water immersion. While the lights are water-resistant, the battery box should be protected from heavy rain or submersion.
- Do not attempt to modify or repair the lights. Contact customer support if issues arise.

3. PACKAGE CONTENTS

- 1 x Haunted Living 20 ct. LED Battery-Powered Spider Lights string
- (Batteries are not included)



Image: Product packaging showing the Haunted Living brand and details.

4. SETUP AND INSTALLATION

1. **Insert Batteries:** Open the battery compartment on the battery box. Insert 3 AA batteries (not included), ensuring correct polarity (+/-). Close the battery compartment securely.
2. **Placement:** Uncoil the string lights carefully. These lights are battery-powered and water-resistant, allowing for creative placement both indoors and outdoors. Common placements include draping them over bushes, along fences, around windows, or across mantels.
3. **Secure Placement:** Use appropriate fasteners (not included) if needed to secure the lights in your desired location.



Image: The 20 LED spider lights uncoiled, showing the battery box with mode selector.

5. OPERATION

The battery box features a switch to control the light modes:

- **1. STEADY:** Lights remain continuously on.
- **2. FLASH:** Lights will flash intermittently.
- **3. OFF:** Lights are turned off.

Toggle the switch to select your desired lighting mode.

6. MAINTENANCE AND CARE

- **Cleaning:** To clean the lights, gently wipe them with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the lights or battery box in water.
- **Storage:** When not in use, carefully coil the lights and store them in a cool, dry place, away from direct sunlight. Remove batteries before long-term storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or inserted incorrectly. Switch is in the "OFF" position.	Replace batteries with new ones, ensuring correct polarity. Move the switch to "STEADY" or "FLASH" mode.
Lights are dim.	Batteries are low.	Replace batteries with new ones.

8. SPECIFICATIONS

- **Model:** 1902
- **Brand:** Generic (Haunted Living)
- **Light Type:** LED
- **Number of Lights:** 20 ct.
- **Power Source:** 3 x AA Batteries (not included)
- **Material:** Copper (wiring), Plastic (spider casings)
- **Color:** Purple
- **Product Dimensions:** Approximately 153 x 3 x 2 inches (Length x Width x Height, uncoiled)
- **Features:** Water-resistant, Battery-Powered, Steady/Flash modes

9. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For support or inquiries, please refer to the retailer or manufacturer's contact information available at the point of purchase.