

Retlux RXL 406

Retlux RXL 406 LED Snowman 180 cm Instruction Manual

Model: RXL 406 | **Brand:** Retlux

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Retlux RXL 406 LED Snowman. Please read this manual thoroughly before assembly, installation, and operation. Keep it for future reference.

2. SAFETY INSTRUCTIONS

- **Electrical Safety:** Ensure the power source matches the product's voltage requirements. Do not overload electrical outlets.
- **Outdoor Use:** This product is designed for both indoor and outdoor use. When used outdoors, ensure all connections are protected from moisture and extreme weather conditions.
- **Cable Management:** Position the power cord to prevent tripping hazards or damage. Do not run the cord under carpets or through doorways.
- **Assembly:** Assemble the product on a stable, flat surface. Ensure all components are securely fastened before connecting to power.
- **Children and Pets:** Keep the product out of reach of small children and pets to prevent accidental damage or injury.
- **Damage:** Do not operate the product if the power cord, plug, or any part of the product is damaged. Contact customer support for assistance.

3. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1x Retlux RXL 406 LED Snowman (180 cm)
- 1x Power Adapter (Wired)
- Assembly Components (e.g., frame sections, securing clips, base)

- Instruction Manual (this document)



Figure 1: The Retlux RXL 406 LED Snowman, standing 180 cm tall. It features a classic snowman design with three segments, adorned with a black top hat, a red scarf, and black buttons. The internal LED lights provide a festive glow.

4. SETUP

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble Frame:** Connect the frame sections according to the diagrams (Note: Specific assembly steps may vary; refer to included diagrams if available. Generally, connect the base, then the body sections, ensuring they lock

securely.).

- 3. **Attach Decorations:** Secure the top hat, scarf, and any other decorative elements to the snowman structure.
- 4. **Positioning:** Place the assembled snowman in your desired location. Ensure it is on a stable, level surface. For outdoor use, consider securing it against wind using stakes (not included) if necessary.
- 5. **Connect Power:** Plug the power adapter into the snowman's power input. Then, plug the adapter into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

The Retlux RXL 406 LED Snowman is designed for simple operation.

- **Power On/Off:** Once plugged into a power source, the LED lights will illuminate. To turn off, simply unplug the power adapter from the electrical outlet.
- **Continuous Operation:** The snowman is designed for continuous illumination when powered.

6. MAINTENANCE

- **Cleaning:** Disconnect from power before cleaning. Wipe the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, disassemble the snowman if possible and store it in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **LED Replacement:** The LEDs are integrated and not user-replaceable. If lights fail, contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not illuminate.	No power connection. Faulty power outlet. Damaged power cord/adapter.	Ensure the power adapter is securely plugged into both the snowman and a working electrical outlet. Test the outlet with another device. Inspect the cord and adapter for visible damage. If damaged, discontinue use and contact support.
Snowman is unstable.	Improper assembly. Uneven surface. Wind (outdoor use).	Recheck all assembly connections. Move to a flat, stable surface. For outdoor use, secure the base with ground stakes (not included).

8. SPECIFICATIONS

- **Model:** RXL 406
- **Brand:** Retlux
- **Product Type:** LED Snowman
- **Height:** 180 cm
- **Number of LEDs:** 160
- **Power Source:** Wired
- **Material:** Decorative fabric over frame

- **Theme:** Christmas
- **ASIN:** B0BNC3H12X

9. WARRANTY AND SUPPORT

This Retlux product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Retlux website.

For technical support, troubleshooting assistance, or inquiries regarding replacement parts, please contact Retlux customer service. Contact information can typically be found on the product packaging or the official brand website.

© 2023 Retlux. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question