

[Manuals.plus](#) /

› [Alohappy](#) /

› Mid-Century Modern TV Stand User Manual

Alohappy 59“ tv stand Brown (B0BNC4QLXY)

Mid-Century Modern TV Stand

USER INSTRUCTION MANUAL

Brand: Alohappy | Model: 59“ tv stand Brown (B0BNC4QLXY)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Alohappy Mid-Century Modern TV Stand. Designed for TVs up to 65 inches, this entertainment center combines functional storage with a stylish aesthetic, featuring a drawer, sliding doors, and open shelving. Please read this manual thoroughly before beginning assembly or use to ensure proper setup and longevity of your product.



Figure 1.1: The Alohappy Mid-Century Modern TV Stand in a typical living room setup.

2. SAFETY INFORMATION

For your safety and to prevent damage to the product, please adhere to the following guidelines:

- Always follow the assembly instructions carefully.
- Ensure all hardware is securely fastened before use. Do not overtighten screws.
- Do not exceed the recommended weight capacity of the TV stand (up to 150 lbs).
- Place the TV stand on a flat, stable, and level surface to prevent tipping.
- Keep small parts and packaging materials away from children and pets during assembly.
- Avoid placing hot items directly on the surface without protection.
- This product is intended for indoor use only.

3. PRODUCT OVERVIEW

The Alohappy Mid-Century Modern TV Stand is crafted from high-density particleboard with solid wood legs, offering a durable and stylish solution for your entertainment needs. It features a smooth finish for easy cleaning and a stable support structure.

Key Features:

- **Mid-Century Modern Design:** Enhances living room or bedroom decor.
- **Ample Storage:** Includes two storage cabinets with 3-level adjustable shelves, a central open shelf, and a spacious drawer.
- **Sliding Doors:** Two sliding doors allow for flexible display or concealment of items.
- **Cable Management:** Integrated hole for organizing wires and promoting good ventilation.
- **Durable Construction:** Made from MDF board with sturdy rubber wood legs and metal handles.

LARGE STORAGE SPACE



Figure 3.1: Overview of the TV stand's large storage capacity, including cabinets, open cube, and drawer.



SLIDING DOOR DESIGN VARIOUS DISPLAY MODES



Figure 3.2: Various display modes enabled by the sliding door design.



Spacious&Smooth Surface

Made of high density particleboard,
smooth finish for easy clean

Smooth Guide Rail

Drawer with Metal Guide Rail,
Open and close the drawers easily



Stable Support Structure

Rubber wood legs ,
Durable and stylish,
support up to 150lbs

Figure 3.3: Details on material quality and structural stability.

Environmental Friendly Materia

Cable Management Hole for
Good Ventilation

Metal Handle Design
simple and Aesthetic

Adjustable Shelves for
Different Size Things



Figure 3.4: Additional features including cable management and adjustable shelving.

4. SETUP AND ASSEMBLY

The Alohappy Mid-Century Modern TV Stand is designed for easy assembly. All necessary hardware and detailed assembly instructions are included in the package. Boards and accessories are numbered to facilitate the process.

Assembly Steps:

1. **Unpack and Verify:** Carefully unpack all components and hardware. Refer to the parts list in the included assembly instruction manual to ensure all pieces are present and undamaged.
2. **Prepare Workspace:** Choose a clean, flat, and spacious area for assembly. Lay down a blanket or cardboard to protect the floor and furniture pieces from scratches.
3. **Follow Numbered Instructions:** Assemble the unit step-by-step according to the numbered diagrams and instructions provided in the separate assembly manual. Pay close attention to the orientation of each piece.

4. **Secure Connections:** Ensure all screws, dowels, and cam locks are properly aligned and tightened. Do not overtighten to avoid stripping the wood.
5. **Install Drawer and Doors:** Follow instructions for installing the drawer on its metal guide rails and attaching the sliding doors.
6. **Attach Legs:** Securely attach the solid wood legs to the base of the TV stand.
7. **Final Check:** Once assembled, gently lift and move the stand to its desired location. Verify its stability and ensure all parts are secure.

***Note:** While assembly is designed to be straightforward, some users have noted that certain steps may require careful attention to detail. If you encounter difficulties, double-check the diagrams and ensure components are correctly oriented before proceeding.*

5. OPERATING THE TV STAND

Your TV stand offers versatile storage and display options.

Sliding Doors:

The two sliding doors can be moved horizontally along the track to cover either the side cabinets or the central open shelf and drawer. This allows you to customize the appearance and access to your stored items. Simply grasp the metal handle and slide the door smoothly to the desired position.

Drawer:

The central drawer operates on smooth metal guide rails for easy opening and closing. It is ideal for storing smaller items such as remote controls, cables, or media accessories. To open, gently pull the drawer handle. To close, push it back until it is flush with the front of the stand.

Adjustable Shelves:

The shelves within the side cabinets are adjustable to three different height levels. To adjust a shelf, remove any items, lift the shelf, and reposition the shelf pins into the desired holes. Then, place the shelf back onto the pins, ensuring it is level and secure.

Cable Management:

Utilize the pre-drilled cable management hole located in the back panel of the central open shelf. This allows you to route power cords and audio/video cables neatly, reducing clutter and promoting better airflow around electronic devices.

6. MAINTENANCE

To keep your TV stand in optimal condition, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a damp cloth. For tougher spots, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Dusting:** Regularly dust with a soft, dry cloth to prevent buildup.

- **Spills:** Immediately wipe up any spills to prevent moisture damage or staining.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.
- **Temperature and Humidity:** Maintain a stable room temperature and humidity level to prevent warping or cracking of the wood.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, consider the following common solutions:

Problem	Possible Cause	Solution
Difficulty during assembly	Incorrect part orientation; misaligned screw holes; missing hardware.	Review the assembly manual carefully, ensuring each piece is oriented as shown. If screw holes are misaligned, gently adjust or contact customer service. Verify all hardware is present against the parts list.
TV stand is wobbly or uneven	Uneven floor; loose connections; improperly attached legs.	Ensure the stand is on a level surface. Check and tighten all assembly screws. Verify that the legs are securely and evenly attached. Use furniture pads if minor leveling is needed.
Drawer does not slide smoothly or interferes with doors	Misaligned drawer rails; obstruction; drawer not fully inserted.	Check that the metal guide rails are correctly installed and aligned. Ensure no items are obstructing the drawer's path. Note: The drawer may need to be fully closed or removed to allow the sliding doors to pass freely, depending on the configuration.
Sliding doors stick or are difficult to move	Debris in track; misaligned doors; damaged track.	Clean the sliding tracks of any dust or debris. Ensure the doors are properly seated in the tracks. If the issue persists, check for any damage to the track or door mechanism.
Damaged or missing parts upon arrival	Shipping damage; packaging error.	Do not attempt to assemble damaged parts. Contact Alohappy customer service immediately with details of the issue and photos if possible.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Product Dimensions (L x W x H)	59 x 16 x 20 inches
Material	MDF board and solid rubber wood legs
Color	Brown
Number of Drawers	1
Number of Shelves	5 (including adjustable shelves)
Special Feature	Adjustable shelves, Sliding doors, Cable management hole
Recommended TV Size	Up to 65 inches
Weight Capacity	Up to 150 lbs (approximate, based on stable support structure)
Manufacturer	Alohappy
Date First Available	November 25, 2022



Figure 8.1: Detailed dimensions of the TV stand.

9. WARRANTY AND CUSTOMER SUPPORT

Alohappy is committed to providing quality products and excellent customer service. While specific warranty details are not provided in this manual, we stand by the quality of our products.

If you encounter any problems with your TV stand, or if you are not satisfied with your purchase, please do not hesitate to contact our customer service team. We are dedicated to resolving any issues and providing professional assistance to ensure your satisfaction.

For support, please refer to the contact information provided with your purchase documentation or visit the official Alohappy store page on Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question