



Manuals.plus /

› Danicub /

› Danicub Automatic Vacuum Sealer Instruction Manual

## Danicub Automatic Dry/Moist Food Sealer

# Danicub Automatic Vacuum Sealer Instruction Manual

Model: B0BNCX74GS

## INTRODUCTION

---

The Danicub Automatic Vacuum Sealer is designed to extend the freshness of various food items, including fruits, vegetables, fish, meat, nuts, and snacks. This appliance helps prevent freezer burn, reduce food spoilage, and minimize waste, making meal preparation more efficient.



*Image: The Danicub Automatic Vacuum Sealer shown with a vacuum-sealed steak and various fresh produce, illustrating its primary function.*

## SAFETY INFORMATION

---

- Read all instructions before using the appliance.
- Do not immerse the power cord, plug, or appliance in water or other liquids.
- Keep the appliance out of reach of children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not use outdoors.
- Ensure the vacuum chamber is clean and dry before each use to prevent electrical hazards.

## PRODUCT OVERVIEW AND COMPONENTS

The Danicub Vacuum Sealer features a practical and compact design, incorporating several key components for efficient food preservation.

- **Control Panel:** Features buttons for various sealing modes and operation.
- **Vacuum Chamber:** Area where the vacuum bag is placed for air removal.
- **Sealing Strip:** Heats to create a secure seal on the bag. This model features a double sealing strip for enhanced durability.
- **Bag Roll Rack:** Integrated storage for vacuum bag rolls up to 12 inches wide.
- **Sliding Cutter:** Allows for easy and precise cutting of custom-sized bags from a roll.
- **External Vacuum Port:** For use with external containers like canning jars or wine bottles.
- **Power Cord Storage:** Convenient area at the bottom of the unit for cord management.



Image: An annotated diagram highlighting the key features and components of the vacuum sealer.

# FEATURE UPGRADE



Image: An internal view of the vacuum sealer, emphasizing the 11.8-inch sealing area and the double sealing strip.

## SETUP

Before first use, ensure all packaging materials are removed. Place the vacuum sealer on a flat, stable, and dry surface.

### Included Accessories:

The Danicub Vacuum Sealer comes with a comprehensive starter kit:

- 1 x Danicub Vacuum Sealer
- 1 x User Manual (this document)
- 1 x Air Suction Hose (for external vacuuming)
- 1 x Placeholder (for storage)
- 6 x Medium Vacuum Bags (7.8 x 11.8 inches)
- 6 x Large Vacuum Bags (11.8 x 15.7 inches)

# A Fully Starter Kit




vacuum sealer x1




user manual x1



air suction hose

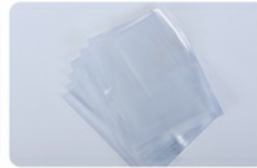

medium vacuum bags  
(7.8 x 11.8 inch) x6

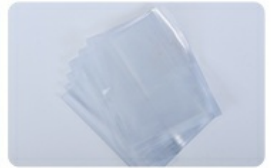

large vacuum bags  
(11.8 x 15.7 inch) x6

*Image: A visual representation of the complete starter kit included with the vacuum sealer.*

## Preparing Vacuum Bags:

If using a bag roll, utilize the integrated sliding cutter to create custom-sized bags. Ensure the bag is long enough to accommodate the food item and allow for proper sealing.

# Bag Roll Rack & Sliding Cutter

Storage bag roll and cut a customized bag easily as you need



*Image: Demonstrates the use of the integrated bag roll rack and sliding cutter for preparing custom-sized vacuum bags.*

## OPERATING INSTRUCTIONS

---

The Danicub vacuum sealer offers six distinct sealing modes for optimal food preservation.

### General Vacuum Sealing Steps:

1. Place the food item inside a vacuum bag, ensuring the open end of the bag is clean and dry.
2. Open the lid of the vacuum sealer and place the open end of the vacuum bag into the vacuum chamber. Ensure the bag is flat and extends across the sealing strip.
3. Close the lid firmly, pressing down on both sides until you hear a locking sound, indicating it is securely latched.
4. Select the desired sealing mode (see "Sealing Modes" section below).
5. Press the corresponding button to start the vacuum and sealing process. The machine will automatically complete the cycle.
6. Once the indicator light turns off, the process is complete. Press the lock release buttons on both sides to open the lid and remove the sealed bag.

# EASY TO USE



1 Put the vacuum bag into the vacuum chamber



2 Press firmly on both sides of the top cover until its locked tight



### Choose mode:

- \* **DRY/WET ( Dry Mode default )**: "DRY/WET" + "NORMAL VAC"
- \* **NORMAL VAC**: Normal automatic vacuum and seal
- \* **MANUAL VAC+ SEAL**: Press "MANUAL VAC" several times until get the effect you want, and then press "SEAL"



4 When the green light goes off, means it is done. Press the lock buttons on both sides to open

Image: A step-by-step visual guide demonstrating the ease of operation for the vacuum sealer.

## Sealing Modes:

The vacuum sealer is equipped with six modes to cater to different food types and preservation needs:

- **DRY (Green light)**: Optimized for dry food items such as nuts, grains, and dried fruits.
- **WET (Red light)**: Designed for moist or wet food items, like fresh meat, fish, or marinated foods.
- **NORMAL**: Standard vacuum and seal function for most daily food items.
- **MANUAL**: Allows the user to control the vacuum effect. Press the "MANUAL VAC" button repeatedly to achieve the desired vacuum level, then press "SEAL" to seal the bag. This is useful for delicate items.
- **SEAL**: This mode only seals the bag without vacuuming. It can be used to reseal bag rolls or other bags that do not require vacuuming.
- **OUTSIDE**: For use with external vacuum containers, such as wide-mouth canning jars or wine bottles, using the air suction hose.

# 6 Sealing Modes



*Image: An overview of the six distinct sealing modes available on the Danicub vacuum sealer.*

## External Vacuum System:

To use the external vacuum function with jars or containers:

1. Connect one end of the air suction hose to the external vacuum port on the side of the sealer and the other end to the port on your compatible external container (jars, containers, wine corks).
2. Ensure the container lid is properly sealed or the wine cork is securely in place.
3. Press the "OUTSIDE VAC" button on the control panel. The machine will begin to remove air from the container.
4. Once the vacuum is complete, the machine will stop automatically. Remove the hose.

# External Vacuum System



Jars



Containers



Wine Cork



1. Connect the sealer and container.
2. Press the both sides of the top cover until you hear sounds of locking.
3. Then press "OUTSIDE VAC", the machine will start to work.

*Image: Demonstrates the connection and use of the external vacuum system with a container.*

## Bag Compatibility:

The Danicub vacuum sealer is compatible with various types of vacuum bags. For optimal vacuum sealing, textured vacuum bags are recommended. Non-textured simple bags can be sealed but not vacuumed. Mylar aluminum foil bags and non-textured folding-angle bags can be both vacuumed and sealed.

	Glossy Bags	Textured Bags	Mylar Aluminum Foil Bags
	Non-Textured Simple Bag	Textured Vacuum Bags	Non-Textured Folding-Angle Bag
VACUUM	✗	✓	✓
SEAL	✓	✓	✓

Image: A compatibility chart detailing which types of bags are suitable for vacuuming and sealing with the appliance.

## MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your vacuum sealer.

- **Cleaning the Vacuum Chamber:** The vacuum chamber is removable for easy and safe cleaning. After each use, especially after sealing moist foods, remove the vacuum chamber and wipe it clean with a damp cloth. Ensure it is completely dry before reassembling.
- **Cleaning the Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Sealing Strip:** Periodically check the sealing strip for any debris or residue. Clean gently with a damp cloth. Ensure it is dry before use.
- **Storage:** After use, ensure the placeholder is inserted into the machine. Store the appliance in a dry place.



Image: A close-up view of the removable vacuum chamber, highlighting its ease of cleaning.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet.
Bag does not vacuum properly.	Bag not positioned correctly; bag type incompatible; moisture in vacuum chamber.	Ensure the open end of the bag is fully inside the vacuum chamber and flat. Use textured vacuum bags for vacuuming. Clean and dry the vacuum chamber.
Bag does not seal.	Sealing strip dirty or damaged; bag not positioned correctly.	Clean the sealing strip. Ensure the bag is flat across the sealing strip.
Lid does not lock.	Not pressing firmly enough on both sides.	Apply firm, even pressure on both sides of the lid until you hear a click.
Overheat Protection Activated.	Continuous use without cooling down.	Allow the machine to cool down for 15-20 minutes before resuming operation.

## SPECIFICATIONS

**Brand:** Danicub

**Model:** Automatic Dry/Moist Food Sealer (ASIN: B0BNCX74GS)

**Material:** ABS

**Color:** Silver

**Product Dimensions:** 15.7"L x 6.5"W x 3.2"H

**Item Weight:** 3.1 Pounds

**Power Source:** AC

**Operation Mode:** Automatic

**Wattage:** 90 watts

**Voltage:** 120 Volts

**Max Seal Width:** 11.8 inches

## WARRANTY AND SUPPORT

---

The Danicub Automatic Vacuum Sealer comes with a **24-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, warranty claims, or any inquiries regarding your product, please contact Danicub customer service. Refer to the contact information provided on the product packaging or the official Danicub website for the most up-to-date support channels.

For more information and product registration, visit the official Danicub Store on Amazon.