

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Supersonic](#) /

› [Supersonic SC-2107 7-inch Android Tablet User Manual](#)

## Supersonic SC-2107

# Supersonic SC-2107 7-inch Android Tablet User Manual

Model: SC-2107

## INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Supersonic SC-2107 7-inch Android Tablet. Please read this guide thoroughly before operating your device to ensure optimal performance and longevity.

The Supersonic SC-2107 is a compact 7-inch tablet featuring a Cortex A7 Quad-core processor, 1GB RAM, and 16GB of internal storage, running on Android 10. It is designed for everyday tasks, media consumption, and light productivity.

## WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 7" Quad Core Tablet
- AC Adapter
- USB Cable
- User Manual (this document)

## DEVICE OVERVIEW


Familiarize yourself with the physical features of your Supersonic SC-2107 tablet.



**Image:** Side view of the Supersonic SC-2107 tablet, highlighting the power button and volume rocker on the right edge. The power button is a small, circular button, and the volume buttons are elongated, adjacent to it.



**Image:** Side view of the Supersonic SC-2107 tablet, displaying the Micro USB charging port, a standard USB-A port, and a 3.5mm headphone jack on the top edge. These ports are recessed into the tablet's frame.

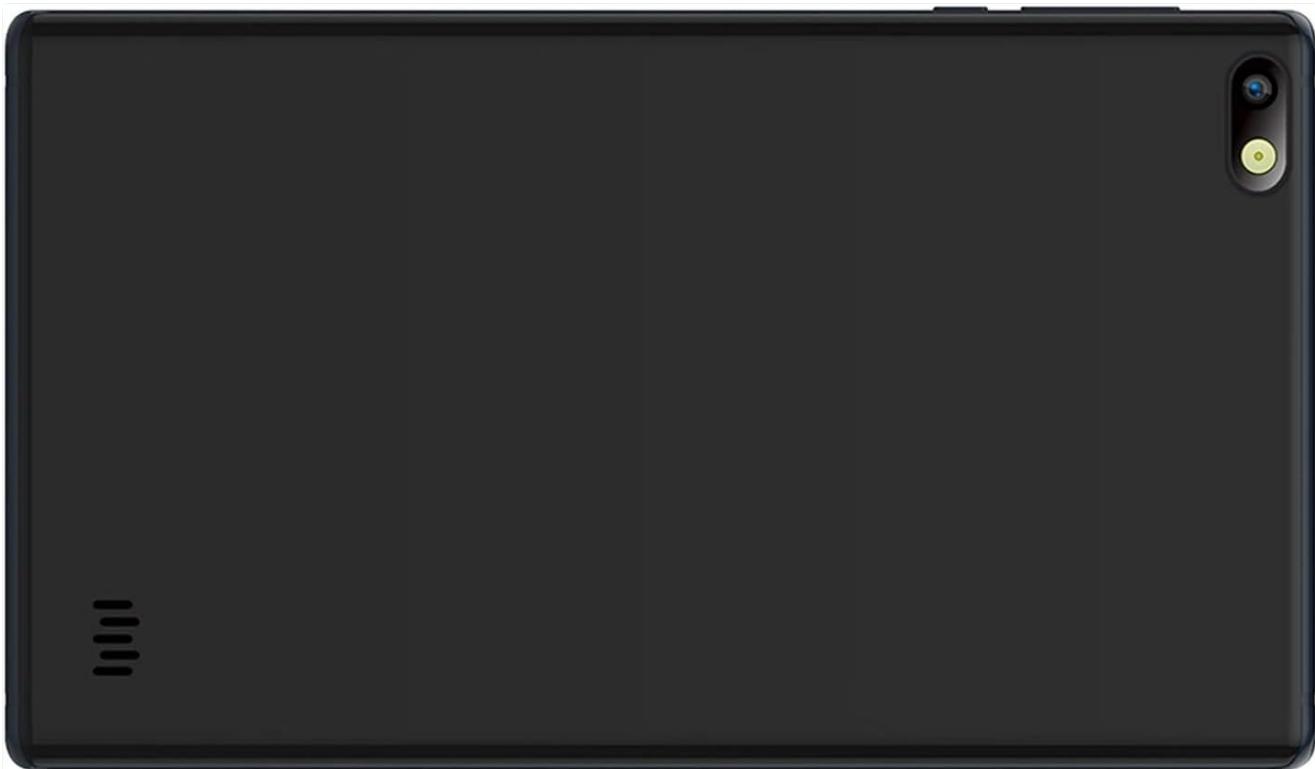

**Image:** Rear view of the Supersonic SC-2107 tablet. The back panel is a solid dark color. In the upper right corner, a circular rear camera lens is visible, accompanied by a small LED flash. On the lower left, a rectangular speaker grille with multiple horizontal slits is present.

## SETUP

### 1. Charging the Tablet

Before first use, fully charge your tablet. Connect the provided AC adapter to the Micro USB port on the tablet and plug it into a power outlet. The battery indicator on the screen will show charging status.

### 2. Powering On/Off

- **To Power On:** Press and hold the **Power Button** (refer to Device Overview image) until the Supersonic logo appears on the screen.
- **To Power Off:** Press and hold the **Power Button** until a menu appears. Select "Power Off" and confirm.
- **To Restart:** From the power menu, select "Restart" and confirm.

### 3. Initial Setup Wizard

The first time you power on the tablet, you will be guided through an initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network. This is crucial for downloading apps and updates.
3. Sign in with your Google Account or create a new one. This is required to access the Google Play Store and other Google services.
4. Follow the on-screen prompts to set up date, time, and other preferences.

## 4. Inserting a MicroSD Card (Optional)

The tablet supports microSD cards for expandable storage. Locate the microSD card slot (usually under a small cover on the side or back). Gently insert the microSD card with the gold contacts facing down until it clicks into place. You may need to format the card via the tablet's settings for optimal use.

# OPERATING INSTRUCTIONS

## 1. Basic Navigation

- **Tap:** Touch the screen once to open apps, select items, or press buttons.
- **Tap & Hold:** Press and hold an item to access context menus or move icons.
- **Swipe:** Drag your finger across the screen to scroll through pages or lists.
- **Pinch:** Use two fingers to zoom in or out on images and web pages.

## 2. Connecting to Wi-Fi

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

## 3. Downloading Applications

Access the Google Play Store to download and install applications. You must be signed in with a Google Account and connected to Wi-Fi.

1. Tap the **Play Store** icon on your home screen or app drawer.
2. Search for the desired app.
3. Tap **Install** and follow the on-screen instructions.

## 4. Using the Camera

The tablet features a front camera (300 Kilopixel) and a rear camera (2 MP).

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Use the camera switch icon to toggle between front and rear cameras.

## 5. Audio Playback

You can play audio through the built-in speaker or by connecting headphones to the 3.5mm headphone jack (refer to Device Overview image for port location).

# MAINTENANCE

## 1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the device.

## 2. Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not allow the battery to fully discharge frequently.
- Use only the provided AC adapter and USB cable for charging.

### 3. Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

### 4. Storage Management

To optimize performance, regularly manage your tablet's storage. Delete unnecessary apps, photos, and videos. You can also move files to an inserted microSD card. Check storage usage in **Settings > Storage**.

## TROUBLESHOOTING

Problem	Solution
Tablet does not power on.	Ensure the tablet is fully charged. Connect it to the AC adapter and wait a few minutes before attempting to power on again.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Ensure you have entered the correct Wi-Fi password.
Apps are crashing or freezing.	Close and reopen the app. Clear the app's cache in <b>Settings &gt; Apps &amp; notifications &gt; [App Name] &gt; Storage &amp; cache</b> . If the problem persists, uninstall and reinstall the app.
Tablet is slow or unresponsive.	Close unused apps. Clear cache and temporary files. Restart the tablet. Consider performing a factory reset if performance does not improve (see below).

### Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. Back up any important data before proceeding.

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision when prompted. The tablet will restart and begin the reset process.

## SPECIFICATIONS

Feature	Detail
Model Number	SC-2107
Operating System	Android 10
Processor	Cortex A7 Quad-core (1.3 GHz)
Chipset Brand	Rockchip RK3126 SoC

Feature	Detail
RAM	1 GB
Internal Storage	16 GB
Expandable Storage	microSD Supported
Screen Size	7 Inches
Screen Resolution	1024 x 600 Pixels
Rear Camera	2 MP
Front Camera	300 Kilopixel
Battery Life (Average)	826.5 Hours (Standby/Usage not specified)
Item Weight	1.21 pounds
Product Dimensions (LxWxH)	0.4 x 7.4 x 4.3 inches

## WARRANTY INFORMATION

Supersonic products are designed and manufactured to the highest quality standards. For specific warranty terms and conditions applicable to your SC-2107 tablet, please refer to the warranty card included in your product packaging or visit the official Supersonic website. Keep your purchase receipt as proof of purchase for warranty claims.

## CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Supersonic customer support. Contact information can typically be found on the official Supersonic website or on the warranty card provided with your product.

For online resources, you may visit the [Supersonic Store on Amazon](#).