

TANLANIN TE-2026

TANLANIN TE-2026 Vintage 3-Speed Bluetooth Portable USB Suitcase Record Player Instruction Manual

Model: TE-2026 | Brand: TANLANIN

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your TANLANIN TE-2026 Vintage 3-Speed Bluetooth Portable USB Suitcase Record Player. Please read these instructions thoroughly before use and retain them for future reference.



Image 1: The TANLANIN TE-2026 Record Player in Ivory White, showcasing its open design with a vinyl record placed on the turntable.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the device.
- Keep the manual for future reference.
- Heed all warnings on the product and in the operating instructions.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been

damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Upon opening your TANLANIN TE-2026 record player, please ensure all items listed below are present and in good condition:

- 1 x Suitcase Record Player
- 1 x Turntable Mat
- 1 x Spare Needle
- 1 x Power Cord

Your browser does not support the video tag.

Video 1: An official product video from TANLANIN showcasing the features and components of the record player. This video provides a general overview of the product. (Creator: TANLANIN)

4. SETUP GUIDE

1. **Unpacking:** Carefully remove the record player from its packaging. Retain all packaging materials for potential future transport or storage.
2. **Placement:** Place the record player on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibrations.
3. **Power Connection:** Connect the provided power cord to the DC 5V input on the back of the unit and then to a wall outlet.
4. **Turntable Mat:** Place the turntable mat onto the platter.
5. **Stylus Protection:** Remove the white protective cap from the stylus (needle) before playing any records. This cap is for shipping protection only.

Every party starts with a Record Player



Image 2: A detailed view of the record player's control panel, highlighting the stylus, speed selector switch, and various function buttons for media playback and recording.

5. OPERATING INSTRUCTIONS

5.1 Playing Vinyl Records

1. **Power On:** Turn the ON/OFF/Volume knob clockwise to power on the unit and adjust the volume.
2. **Select Speed:** Choose the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch located on the turntable.
3. **Place Record:** Carefully place a vinyl record on the turntable platter. For 45 RPM records, use the included 45 RPM adapter.
4. **Lift Tonearm:** Gently lift the tonearm using the cue lever.
5. **Position Stylus:** Move the tonearm over the desired track of the record.
6. **Lower Tonearm:** Slowly lower the tonearm onto the record using the cue lever. The record will begin to play.
7. **Auto-Stop Function:** The turntable features an auto-stop function. If enabled (switch set to "AUTO STOP ON"), the platter will stop spinning automatically when the record finishes. If set to "AUTO STOP OFF", the platter will continue to spin.

8. **End Playback:** At the end of playback, lift the tonearm, return it to the tonearm rest, and turn the ON/OFF/Volume knob counter-clockwise to power off.

5.2 Bluetooth Connectivity

The record player can connect wirelessly to your smartphone or other Bluetooth-enabled devices to stream audio through its built-in speakers.

1. **Switch to Bluetooth Mode:** Press the 'M' (Mode) button on the control panel until "BT" appears on the LED display. The unit will enter pairing mode.
2. **Enable Bluetooth on Device:** On your smartphone or other device, enable Bluetooth and search for available devices.
3. **Pair Device:** Select "BLTD" (or similar name) from the list of available devices to pair. Once connected, you will hear a confirmation sound.
4. **Play Audio:** You can now play audio from your device through the record player's speakers.



Image 3: The TANLANIN TE-2026 Record Player demonstrating its Bluetooth streaming feature, with a smartphone connected and playing music.

5.3 USB/TF Card Playback and Recording

The unit supports playback from USB drives and TF cards, and can also record vinyl audio directly to these storage devices.

1. **Insert USB/TF Card:** Insert a USB flash drive into the USB port or a TF card into the TF card slot.
2. **Select Mode:** Press the 'M' (Mode) button to cycle through modes until "USB" or "TF" appears on the LED display.
3. **Playback Controls:** Use the playback control buttons (Play/Pause, Next/Previous Track) to manage your audio.
4. **Recording:** To record from vinyl, ensure a USB drive or TF card is inserted. Start playing your vinyl record. Long press the 'M' button to start recording. The LED display will show "REC". Long press 'M' again to stop recording. The recorded file will be saved to the USB drive/TF card.

5.4 External Audio Connections

- **Headphone Jack:** For private listening, plug 3.5mm headphones into the headphone jack on the front panel.
- **RCA Output:** Connect external speakers or an amplifier using the RCA audio output jacks on the rear panel for enhanced sound.
- **AUX Input:** Use the 3.5mm AUX input to connect other audio devices (e.g., CD player, MP3 player) to play through the record player's speakers.

6. MAINTENANCE

6.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the stylus clean. Use a soft brush to gently clean the stylus tip from back to front.

6.2 Replacing the Stylus

The stylus is a delicate component and may need replacement after extended use (approximately 200-300 hours of playback). A spare needle is included in the package.

1. Gently pull the old stylus cartridge downwards and away from the tonearm to remove it.
2. Align the new stylus cartridge with the tonearm and push it upwards until it clicks into place.
3. Ensure the stylus is securely attached before use.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely connected; Test outlet with another device.
No sound from speakers	Volume too low; Incorrect mode selected; External speakers not connected properly (if used).	Increase volume; Press 'M' button to select correct mode (PHO for vinyl, BT for Bluetooth, USB/TF for respective media); Check external speaker connections.
Record skipping	Record is dirty or scratched; Stylus is worn or dirty; Turntable not on a stable surface.	Clean record; Clean or replace stylus; Place turntable on a stable, level surface.

Problem	Possible Cause	Solution
Bluetooth not pairing	Device too far; Bluetooth not enabled on device; Incorrect mode selected.	Ensure device is within range; Enable Bluetooth on your device; Select "BT" mode on the record player.

8. SPECIFICATIONS

- **Model Name:** TE-2026
- **Brand:** TANLANIN
- **Product Dimensions:** 14 x 10 x 5 inches
- **Item Weight:** 5.85 pounds
- **Maximum Rotational Speed:** 78 RPM (Supports 33 1/3, 45, 78 RPM)
- **Material:** Engineered Wood, Plastic
- **Special Features:** Anti-Resonance, Built-In Speakers, Built-In Bluetooth Receiver, TF card Recording and Playback, USB Recording and Playback
- **Compatible Devices:** CD player, Headphone, PC/MP3, Smartphone/Tablet, Speaker


9. WARRANTY AND SUPPORT




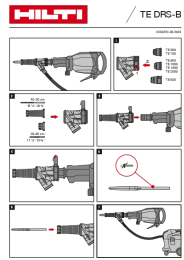
For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: TANLANIN

For further assistance, visit the [TANLANIN Store on Amazon](#).

Related Documents - TE-2026

<p>Limited Warranty for TANLANIN Brands</p> <p>This document provides a summary of the limited warranty for TANLANIN brand products. For complete details, please refer to the full warranty document available on the TANLANIN website.</p> <p>Products covered by this warranty:</p> <table border="1"> <tr> <th>Product Line</th> <th>Warranty Period</th> </tr> <tr> <td>Vinyl Record Players</td> <td>1 Year</td> </tr> <tr> <td>Kids Karaoke Machines</td> <td>1 Year</td> </tr> <tr> <td>CD Players</td> <td>1 Year</td> </tr> <tr> <td>Bluetooth Speakers</td> <td>1 Year</td> </tr> </table> <p>Product coverage:</p> <p>This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by accidents, misuse, or unauthorized repairs.</p> <p>Options available for covered products:</p> <p>For more information, please visit the TANLANIN website or contact customer service.</p>	Product Line	Warranty Period	Vinyl Record Players	1 Year	Kids Karaoke Machines	1 Year	CD Players	1 Year	Bluetooth Speakers	1 Year	<p>TANLANIN Brands Limited Warranty Information and Coverage</p> <p>Official limited warranty details for TANLANIN brand products including Vinyl Record Players, Kids Karaoke Machines, CD Players, and Bluetooth Speakers. Learn about coverage periods, service options, and warranty limitations.</p>
Product Line	Warranty Period										
Vinyl Record Players	1 Year										
Kids Karaoke Machines	1 Year										
CD Players	1 Year										
Bluetooth Speakers	1 Year										
<p>TE-2026 Portable Suitcase Record Player</p>  <p>Turntable with USB and Bluetooth Reception</p>	<p>TE-2026 Portable Suitcase Record Player User Guide</p> <p>Instruction manual for the TE-2026 Portable Suitcase Record Player, detailing features, operation, connections, troubleshooting, and specifications for this vintage-style turntable with USB and Bluetooth capabilities.</p>										

 <p>TE-2030 3-Speed Vintage Record Player</p> <p>Record Player Turntable with Bluetooth Reception</p> <p>User's Guide</p>	<p>TE-2030 3-Speed Vintage Record Player with Bluetooth - User Manual</p> <p>Comprehensive user guide for the TE-2030 3-Speed Vintage Record Player. Learn how to set up, play records, connect via Bluetooth and AUX, use audio outputs, replace the needle, and troubleshoot common issues. Includes specifications and FCC statements.</p>
 <p>HILTI</p> <p>TE 3-ML TE 3-CL</p>	<p>Hilti TE 3-ML & TE 3-CL Rotary Hammer Operating Instructions</p> <p>Official operating instructions and safety guide for Hilti TE 3-ML and TE 3-CL rotary hammers. Learn about features, technical data, and safe usage.</p>
 <p>HILTI</p> <p>TE 3-ML TE 3-CL</p>	<p>Hilti TE 3-ML and TE 3-CL Rotary Hammer Operating Instructions and Safety Guide</p> <p>Operating instructions, safety guidelines, technical data, and maintenance information for Hilti TE 3-ML and TE 3-CL rotary hammers. Designed for professional use, detailing product features, applications, and safe handling.</p>
 <p>HILTI</p> <p>TE DRS-B</p>	<p>Hilti TE DRS-B Dust Removal System Operating Instructions</p> <p>Step-by-step guide for assembling and using the Hilti TE DRS-B dust removal system with Hilti TE demolition hammers. Covers adapter selection for various models, choosing the correct hose length based on chisel size, secure connection, and final setup with a vacuum cleaner.</p>