

Mayer MMCCG206

Mayer MMCCG206 Multi-Functional Ceramic Cooker with Grill User Manual

Model: MMCCG206

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Mayer MMCCG206 Multi-Functional Ceramic Cooker with Grill. Retain this manual for future reference.

- **Electrical Safety:** Ensure the voltage rating of the appliance matches your local power supply. Do not immerse the appliance, cord, or plug in water or other liquids.
- **Heat Surfaces:** The ceramic cooking surface and grill plate become extremely hot during operation. Always use oven mitts or heat-resistant gloves when handling hot parts. Allow the appliance to cool completely before cleaning or storing.
- **Child Safety:** This appliance is not intended for use by children. Keep the appliance and its cord out of reach of children. Utilize the safety child lock feature when not in use.
- **Ventilation:** Ensure adequate ventilation around the appliance during use. Do not block any ventilation openings.
- **Placement:** Place the appliance on a stable, heat-resistant, and level surface, away from flammable materials.
- **Maintenance:** Do not attempt to repair the appliance yourself. Contact authorized service personnel for any repairs.
- **Unplugging:** Always unplug the appliance from the power outlet when not in use, before cleaning, and before moving.

2. PRODUCT OVERVIEW

The Mayer MMCCG206 is a versatile multi-functional ceramic cooker with an integrated grill, designed for various cooking methods. It features an LED display, safety child lock, and portable handles for convenience.



Figure 2.1: Front view of the Mayer MMCCG206 Multi-Functional Ceramic Cooker. This image displays the main unit with its control panel and handles, providing a clear view of its compact design.



Figure 2.2: Side view of the Mayer MMCCG206 Multi-Functional Ceramic Cooker. This perspective highlights the depth and profile of the appliance, showing the sturdy handles for portability.

Key Features:

- Multi-functional cooking modes: Boli, Hot pot, Milk, Soup, Fry, Stew.
- Integrated grill for BBQ, shabu shabu, and omelets.
- Intuitive LED display.

- Safety child lock feature.
- Portable design with integrated handles.
- Durable ceramic material.

3. SETUP

1. **Unpacking:** Carefully remove the appliance from its packaging. Retain packaging materials for future transport or storage.
2. **Inspection:** Check the appliance for any signs of damage. Do not operate if damaged.
3. **Placement:** Place the cooker on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the appliance for ventilation (at least 10 cm on all sides).
4. **Initial Cleaning:** Before first use, wipe the ceramic cooking surface and grill plate with a damp cloth. Ensure all parts are dry before plugging in.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Basic Operation

1. Ensure the appliance is properly set up and plugged into a power source.
2. The LED display will illuminate, indicating the cooker is in standby mode.
3. Use the control knob to select the desired cooking function or temperature setting (OFF, LOW, MED, HIGH).
4. The selected setting will be shown on the LED display.

4.2 Cooking Functions

The MMCCG206 offers a variety of cooking functions:

- **Boli:** Ideal for boiling water or preparing quick broths.
- **Hot Pot:** Maintain a consistent temperature for communal hot pot dining.
- **Milk:** Gentle heating for milk or other delicate liquids.
- **Soup:** Suitable for simmering soups and stews.
- **Fry:** High heat for frying and searing ingredients.
- **Stew:** Lower, sustained heat for slow cooking and stewing.

The grill function is perfect for BBQ, shabu shabu, and preparing omelets. Adjust the temperature using the dedicated control for the grill plate.



Figure 4.1: The Mayer MMCCG206 in operation, demonstrating its dual functionality with food grilling on one side and

a kettle heating on the ceramic hob. This illustrates the versatility for simultaneous cooking tasks.

4.3 Safety Child Lock

To activate the safety child lock, refer to the specific instructions on the control panel or in the quick start guide. This feature prevents accidental operation, enhancing safety in households with children.

4.4 Temperature Control

The appliance features a sliding control for temperature adjustment, typically marked as OFF, LOW, MED, and HIGH. Select the appropriate setting based on your cooking requirements. The LED display will show the current power level or function.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Mayer MMCCG206.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Ceramic Surface:** Wipe the ceramic cooking surface with a soft, damp cloth. For stubborn stains, use a mild non-abrasive cleaner specifically designed for ceramic cooktops.
3. **Grill Plate:** The grill plate can be cleaned with a soft sponge and mild dish soap. Ensure all food residues are removed.
4. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
5. **Do Not Immerse:** Never immerse the main unit, power cord, or plug in water or any other liquid.
6. **Storage:** Store the appliance in a dry, clean place when not in use.

6. TROUBLESHOOTING

If you encounter issues with your Mayer MMCCG206, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not power on.	Not plugged in; power outlet fault; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the problem persists, contact customer support.
Uneven heating.	Appliance not on a level surface; food distribution.	Place the cooker on a flat, level surface. Distribute food evenly on the cooking surface.

Problem	Possible Cause	Solution
Child lock engaged.	Safety child lock is active.	Refer to the manual or control panel for instructions on how to deactivate the child lock.
Smoke or unusual odor during first use.	Protective coatings burning off.	This is normal for the first few uses. Ensure good ventilation. If excessive or persistent, unplug and contact support.

For issues not listed here, please contact Mayer customer support.

7. SPECIFICATIONS

- **Brand:** Mayer
- **Model:** MMCCG206 (ICMMCCG206BKMY)
- **Material:** Ceramic
- **Voltage:** 240 Volts
- **Product Dimensions:** 45D x 32W x 12H centimetres
- **Special Features:** LED Display, Safety Child Lock, Multi-Functional
- **Included Components:** 1 x Multi-Functional Ceramic Cooker with Grill
- **Number of Settings:** 6

8. WARRANTY AND SUPPORT

Mayer products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Mayer website.

For technical support, service inquiries, or to purchase replacement parts, please contact Mayer customer service through their official channels. Keep your purchase receipt and model number (MMCCG206) handy when contacting support.

