

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DANFI AUDIO DF](#) /

› [DANFI AUDIO DF Vintage Record Player TE-2026YW Instruction Manual](#)

DANFI AUDIO DF TE-2026YW

DANFI AUDIO DF Vintage Record Player TE-2026YW Instruction Manual

Model: TE-2026YW

INTRODUCTION

Thank you for purchasing the DANFI AUDIO DF Vintage Record Player. This manual provides essential information for the safe and efficient operation of your new record player. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

To ensure safe operation, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Keep the manual for future reference.
- Heed all warnings on the appliance and in the operating instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

PACKAGE CONTENTS

Ensure all items are present upon unboxing:

- 1 x Suitcase Record Player
- 1 x Turntable Platter Mat
- 1 x 45 rpm Adapter
- 1 x Extra Replacement Needle

- 1 x User's manual



Image: The DANFI AUDIO DF Vintage Record Player TE-2026YW in its yellow suitcase form, ready for use.

PRODUCT OVERVIEW

The DANFI AUDIO DF Vintage Record Player combines classic aesthetics with modern functionality. Key features include:

- **Retro Suitcase Design:** Portable and stylish, covered in retro PU leather.
- **3-Speed Turntable:** Supports 33 1/3, 45, and 78 RPM records with a belt-drive system and auto-stop function.
- **Built-in Stereo Speakers:** Provides clear and immersive sound.
- **Bluetooth Input Connectivity:** Wirelessly stream music from smartphones, tablets, or other Bluetooth-enabled devices.
- **USB/SD Card Recording & Playback:** Record vinyl to digital formats or play music from USB/SD cards.
- **RCA Output & AUX-in:** Connect to external speakers or headphones for enhanced audio experience.
- **Headphone Jack:** For private listening.



The Revival of Records in Sound



Bluetooth
Connectivity



AUX-IN &
Headphone Jack



Built-IN
Stereo Speakers



3-Speed
Turntable



RCA output
External Speaker




Compact &
Portable

Image: An overview highlighting the key features of the record player, such as Bluetooth connectivity, built-in speakers, and multiple input/output options.

Control Panel & Ports

Familiarize yourself with the controls and connection points:

- **ON/OFF Button (Volume control):** Turn the unit on/off and adjust volume.
- **Speed Switch:** Select 33 1/3, 45, or 78 RPM.
- **Auto Stop Control:** Enable/disable automatic stopping at the end of a record.
- **Tone Arm Lifter:** Manually raise and lower the tone arm.
- **LED Operation Panel:** Displays current mode and playback information.
- **USB/TF Card Slots:** For digital recording and playback.
- **AUX-in:** 3.5mm input for external audio devices.
- **Headphone Jack:** 3.5mm output for headphones.
- **RCA Output (Line Out):** Connect to external amplifiers or powered speakers.
- **DC 5V/1A Power Jack:** For power adapter connection.

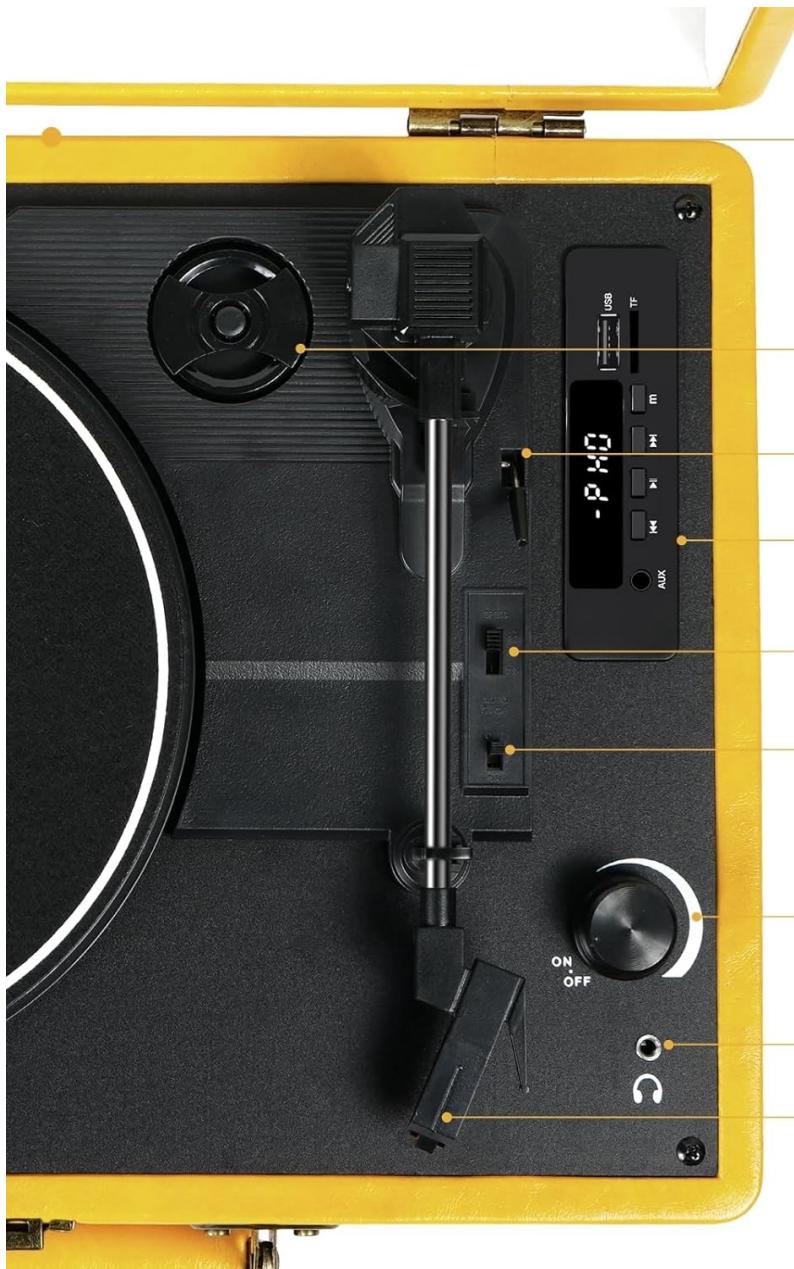

RCA Out Power Jack
45 PRM Adaptor

Tone Arm Lifter
LED operation panel
Speed Swich
Auto Stop Control

ON/OFF Button
(Volume control)
Headphone jack
Cartridge

Image: A close-up of the record player's internal components and control panel, indicating the function of each part.

SETUP

Follow these steps to set up your record player:

1. Unpack the record player and all accessories from the box.
2. Place the unit on a flat, stable surface.
3. Remove the protective cap from the stylus (needle).
4. Connect the DC 5V/1A power adapter to the power jack on the back of the unit and plug it into a wall outlet.
5. Place the turntable platter mat onto the platter.



Image: A detailed view of the record player's handle and latch, emphasizing its portability and vintage aesthetic.

OPERATING INSTRUCTIONS


Playing Vinyl Records

1. Open the record player lid.
2. Place a vinyl record on the turntable platter. If playing a 45 RPM single, use the included 45 RPM adapter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed switch.
4. Turn the ON/OFF/Volume knob clockwise to power on the unit and set your desired listening volume.
5. Release the tone arm lock.
6. Gently lift the tone arm using the tone arm lifter and position it over the desired track of the record.
7. Lower the tone arm slowly onto the record. The record will begin playing.
8. If the auto-stop function is enabled, the turntable will automatically stop spinning when the record finishes.

Bluetooth Connectivity

Stream music wirelessly from your Bluetooth-enabled devices:

1. Turn on the record player.
2. Press the 'MODE' button on the LED operation panel until 'BT' appears, indicating Bluetooth mode.
3. Enable Bluetooth on your smartphone or tablet and search for 'TE-2026YW' (or similar model name).
4. Pair your device with the record player. A confirmation sound will indicate successful pairing.
5. You can now stream music from your device through the record player's speakers.

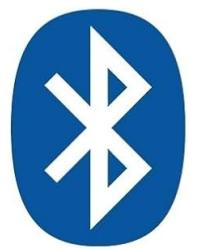

Bluetooth®

Stream music from your phone and other devices



Image: The record player in Bluetooth mode, with a smartphone screen showing available Bluetooth devices for pairing.

USB/SD Card Recording & Playback

Record your vinyl to digital files or play digital music:

1. Insert a USB flash drive or SD card into the respective slot on the LED operation panel.
2. To record: Start playing a vinyl record. Press the 'REC' button on the panel. The LED display will show recording time. Press 'REC' again to stop and save the recording.
3. To playback: Press the 'MODE' button to select USB or TF mode. Use the playback controls (play/pause, next/previous track) to navigate your digital music files.

Recording LP to MP3/WAV

M Key to Recording & Saving, Super easy vinyl digital converting



Image: The record player demonstrating its USB recording capability, with the LED screen indicating recording and saving functions.

External Connections

Enhance your audio experience with external devices:

- **RCA Output:** Connect RCA cables from the 'LINE OUT' ports on the back of the record player to your external amplifier or powered speakers.
- **AUX-in:** Connect an external audio device (e.g., MP3 player) to the 'AUX-in' port on the control panel using a 3.5mm audio cable. Select 'AUX' mode on the record player.
- **Headphone Jack:** Plug your headphones into the 3.5mm headphone jack for private listening.

MAINTENANCE

Proper maintenance ensures the longevity of your record player:

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Stylus Care:** Handle the stylus (needle) with care. Avoid touching it with your fingers. Replace the stylus when sound quality deteriorates (an extra replacement needle is included).
- **Record Care:** Keep your vinyl records clean and free of dust. Store them vertically in their sleeves to prevent warping.
- **Storage:** When not in use, close the lid to protect the turntable from dust. If storing for an extended period, unplug the power adapter.

TROUBLESHOOTING

If you encounter issues, refer to these common solutions:

- **No Power:** Ensure the power adapter is securely connected to the unit and a working power outlet. Turn the ON/OFF/Volume knob clockwise to power on.
- **No Sound:** Check the volume level. Ensure external speakers (if connected) are powered on and correctly connected. If using headphones, ensure they are fully plugged in.
- **Skipping/Distorted Sound:** Ensure the record is clean and free of scratches. Check if the stylus is clean and undamaged. Ensure the record player is on a stable, level surface.
- **Bluetooth Pairing Failure:** Ensure the record player is in Bluetooth mode. Turn off and on your device's Bluetooth, then try pairing again. Ensure no other devices are currently paired.
- **Record Not Spinning:** Ensure the unit is powered on and the tone arm is lifted from its rest. Check the speed selection.

SPECIFICATIONS

Product Dimensions	13.9 x 10 x 5 inches
Item Weight	5 pounds
Item Model Number	TE-2026YW
Brand	DANFI AUDIO DF
Maximum Rotational Speed	78 RPM
Special Feature	Belt Drive, Built-In Speaker, Digital Recorder, Headphone Jack Output
Material	Engineered Wood
Compatible Devices	Smartphones, Tablets, iPhone, USB Flash Drive, TF card, Headphone, etc.

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided in the included user manual or visit the DANFI AUDIO DF official website. Keep your purchase receipt as proof of purchase for any warranty claims.

OFFICIAL PRODUCT VIDEOS

Video: An unboxing and demonstration of the Vintage Suitcase Record Player, showcasing its features and initial setup.

Video: A brief overview highlighting the great vintage aesthetic and sound quality of the record player.

Video: A demonstration of the Vintage Record Player Turntable in action, showing a record being played.

Video: A short clip demonstrating the sound quality of the record player.

Video: A demonstration of the Vintage Bluetooth Record Player's Bluetooth connectivity.

Video: A short video showcasing the Vintage Suitcase Record Player.

Video: A brief visual of the beautiful record player design.

Video: A short demonstration of the Vintage Portable Record Player.

Video: A detailed review of the Record Player with speakers, covering various aspects of its functionality.

