

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ufesa](#) /

› [Ufesa PinUp Classique Toaster Instruction Manual](#)

Ufesa Classic Pinup

Ufesa PinUp Classique Toaster Instruction Manual

Model: Classic Pinup

1. INTRODUCTION

Thank you for choosing the Ufesa PinUp Classique Toaster. This manual provides essential information for the safe and efficient use of your appliance. Please read these instructions carefully before first use and keep them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may involve a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Do not operate unattended.
- Bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

3. PRODUCT OVERVIEW

The Ufesa PinUp Classique Toaster is designed for efficient and even toasting of various bread types. It features two wide slots and multiple browning levels.

Components

- Toasting Slots (2)
- Carriage Lever
- Browning Control Dial (Levels 1-7)
- Cancel Button
- Reheat Button
- Defrost Button
- Removable Crumb Tray
- Cord Storage (underneath the unit)



Figure 1: Front view of the toaster with controls labeled.



Figure 2: Demonstrating bread insertion into the toaster slots.

4. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains. Ensure there is adequate space around the toaster for ventilation.
3. **First Use:** Before toasting bread for the first time, operate the toaster without bread on the highest browning setting (7) for a few minutes. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this process.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

5. OPERATING INSTRUCTIONS

1. **Insert Bread:** Place one or two slices of bread into the toasting slots. The wide slots accommodate various bread types.

2. **Select Browning Level:** Turn the browning control dial to your desired setting, from 1 (lightest) to 7 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust according to your preference.
3. **Start Toasting:** Press the carriage lever down until it locks into place. The indicator light for the selected function (if any) will illuminate. The toasting cycle will begin.
4. **Completion:** Once the selected browning level is reached, the toast will automatically pop up, and the toaster will switch off.
5. **Remove Toast:** Carefully remove the toasted bread. Be cautious as the bread and surrounding metal surfaces will be hot.

6. FUNCTIONS

Your Ufesa PinUp Classique Toaster includes three special functions:

- **Cancel (Stop) Button:** Press this button at any time to stop the toasting cycle and eject the toast.
- **Reheat Button:** Use this function to warm up already toasted bread without further browning. Insert the toast, press the carriage lever down, then press the Reheat button.
- **Defrost Button:** This function is for toasting frozen bread. Insert the frozen bread, press the carriage lever down, then press the Defrost button. The toaster will automatically adjust the toasting time to account for the frozen state.

7. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

Crumb Tray

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Remove Tray:** Pull out the removable crumb tray located at the bottom of the toaster.
3. **Empty:** Empty the crumbs into a waste bin.
4. **Clean:** Wipe the tray with a damp cloth, then dry thoroughly.
5. **Replace:** Slide the crumb tray back into its position until it locks.

Exterior Cleaning

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface. Never immerse the toaster in water or any other liquid.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged in. Check the circuit breaker or try a different outlet.
Bread is stuck in the slots.	Oversized bread; food debris.	Unplug the toaster. Carefully remove the bread using non-metallic tongs. Never use metal objects.
Toast is too light/dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.

Problem	Possible Cause	Solution
Smoke coming from toaster.	Food debris in crumb tray; bread burning; foreign object in slot.	Immediately press the Cancel button and unplug. Empty the crumb tray. Remove any stuck bread or foreign objects (only when unplugged and cool).

9. SPECIFICATIONS

Feature	Specification
Brand	Ufesa
Model Number	Classic Pinup
Power	850 Watts
Number of Slices	2
Browning Levels	7
Special Features	Defrost, Reheat, Cancel functions, Self-centering support, Wide slots, Removable crumb tray, Cord storage
Material	Alloy Steel
Color	Red
Product Dimensions (L x W x H)	31 x 20.2 x 18.6 cm
Item Weight	1.5 Kilograms
Country of Origin	China

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Ufesa customer service directly. Keep your proof of purchase for any warranty claims.

You can find contact details for Ufesa customer support on their official website or through your retailer.