

TPOB CANDY

TPOB Slime 2 Candy Edition Barber Hair Clippers User Manual

Model: CANDY

1. SAFETY INFORMATION

Warning: This product may cause skin irritation. Keep away from eyes to avoid injury. Ensure device is turned off and cool before handling. Use only as directed. Do not use on infants. Keep away from water sources. Clean and maintain the trimmer as recommended in the user manual.

2. PRODUCT OVERVIEW

The TPOB Slime 2 Candy Edition Barber Hair Clippers are designed for precision hair cutting with a powerful 6800 RPM motor and ceramic taper blades. This manual provides essential information for safe and effective use.

2.1. Package Contents

- TPOB Slime 2 Candy Edition Hair Clipper
- Charging Stand
- 0.5, 1, 1.5, 2, 3, 4, 5, 6 Guide Combs
- USB Charger Cable
- Oil Bottle
- Protection Cap
- Cleaning Brush

2.2. Product Features

- **Taper Blade:** Deep tooth cutting blade for professional use.
- **5-Clicking Lever Arm:** Facilitates precise fade cutting.
- **Color-Coded Guide Combs:** Easy identification for various hair lengths.
- **6800 RPM Motor:** Provides powerful and consistent cutting performance.
- **Ceramic Blades:** Ensures cooler operation, smoother finish, and sharper cut.
- **Digital Display:** Shows battery level and charging status.

2.3. Product Components



Figure 1: TPOB Slime 2 Candy Edition Hair Clipper on its charging stand, showcasing its transparent pink casing and digital display.



Figure 2: All included accessories for the TPOB Slime 2 Candy Edition Hair Clipper, including the charging stand, various color-coded guide combs, USB charger, oil, and protection cap.

3. SETUP

3.1. Initial Charging

Before first use, fully charge the clipper. Connect the USB charger cable to the charging stand or directly to the clipper, then plug into a suitable USB power adapter. The digital display will indicate charging progress. A full charge is recommended for optimal performance.

3.2. Blade Oiling

Apply a few drops of the included oil to the blades before each use. This ensures smooth operation and prolongs blade life. Turn the clipper on for a few seconds to distribute the oil evenly.

3.3. Attaching Guide Combs

Select the desired guide comb based on the hair length required. The combs are color-coded for easy identification. Align the comb with the clipper blade and snap it securely into place.

4. OPERATING INSTRUCTIONS

1. Fully charge the clipper before the first use.
2. Attach the desired guide comb for the desired hair length.
3. Apply oil to the blades for smooth operation.
4. Press the power button to turn on the clipper.
5. Use the clipper on dry hair.
6. Move the clipper slowly and steadily against the direction of hair growth.
7. Clean the clipper after each use.

4.1. Taper Lever Adjustment

The 5-clicking lever arm allows for precise adjustment of the blade length without changing guide combs, ideal for blending and fading techniques.

4.2. Hair Cutting Demonstration

Video 1: Demonstration of the TPOB Candy Clippers and Trimmers in use for various hair cutting techniques.

Video 2: A detailed demo showcasing the TPOB Candy Clippers' performance and features during a haircut.

5. MAINTENANCE

5.1. Cleaning

After each use, turn off the clipper and remove any attached guide combs. Use the included cleaning brush to remove loose hair from the blades and the clipper body. For a more thorough clean, the blades can be carefully detached and rinsed under water, ensuring they are completely dry before reattaching.

5.2. Oiling

Regular oiling of the blades is crucial for maintaining cutting performance and preventing rust. Apply 2-3 drops of clipper oil across the top of the blades and along the side rails after every few uses or as needed. Turn the clipper on for a few seconds to distribute the oil.

5.3. Storage

Store the clipper in a dry, cool place, away from direct sunlight and moisture. Ensure the protection cap is on the blades to prevent damage. When not in use, the clipper can be stored on its charging stand.

6. TROUBLESHOOTING

- **Clipper not turning on:** Ensure the battery is charged. Connect to the charger and check the digital display.
- **Clipper pulling hair:** This often indicates dull blades or insufficient oiling. Clean and oil the blades. If the issue persists, blade replacement may be necessary.
- **Reduced battery life:** Ensure the clipper is fully charged before use. Over time, battery capacity may decrease.
- **Unusual noise or vibration:** Turn off the clipper immediately. Check for any obstructions in the blades or internal components. If the issue continues, contact customer support.

For further assistance, please refer to the support section or contact TPOB customer service.

7. SPECIFICATIONS

Feature	Detail
Model Number	CANDY
Motor Speed	6800 RPM
Blade Type	Ceramic Taper Blade
Power Source	Battery Powered (1 Lithium Ion battery included)
Item Weight	208 Grams (7.34 ounces)
Color	Candy (Matte Pink)
Package Dimensions	9.33 x 5.31 x 3.82 inches

8. WARRANTY AND SUPPORT

8.1. Warranty Information

For detailed warranty information, please refer to the product packaging or visit the official TPOB website. Keep your proof of purchase for any warranty claims.

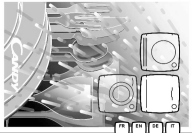 
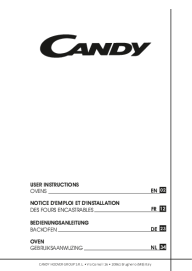 
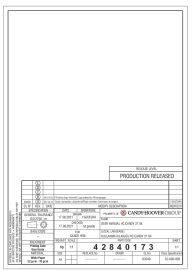 
8.2. Customer Support




If you encounter any issues or have questions regarding your TPOB Slime 2 Candy Edition Hair Clippers, please contact TPOB customer support through their official website or the contact information provided on the product packaging.

9. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

Related Documents - CANDY

	<p>Manuale d'Uso e Manutenzione Lavastoviglie Candy</p> <p>Guida completa per l'utilizzo sicuro ed efficiente della tua lavastoviglie Candy. Include istruzioni su installazione, programmi, manutenzione e risoluzione problemi.</p>
	<p>Candy Oven User Manual: Comprehensive Guide to Operation and Maintenance</p> <p>Official user manual for Candy ovens, providing detailed instructions on safety, installation, operation, cleaning, maintenance, and troubleshooting. Available in English, French, German, and Dutch.</p>
	<p>Candy VC.CANDY 21 SK Hob User Manual and Installation Guide</p> <p>Comprehensive user manual and installation guide for the Candy VC.CANDY 21 SK hob, providing detailed instructions on safety, operation, cleaning, and troubleshooting.</p>

	<p>Candy GVW 364TC Washer Dryer: Features and Specifications</p> <p>Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.</p>
	<p>Candy Перална Машина: Пълно Ръководство за Безопасна и Ефективна Употреба</p> <p>Открийте как да използвате вашата нова Candy перална машина безопасно и ефективно с това изчерпателно ръководство. Включва инструкции за инсталация, поддръжка, програми и съвети за пестене на енергия и вода.</p>
	<p>Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine</p> <p>Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.</p>