

[Manuals.plus](#) /

› [KXAITO](#) /

› KXAITO Model 6092 Men's Sports Outdoor Waterproof Military Watch Instruction Manual

KXAITO 6092

KXAITO Model 6092 Men's Sports Outdoor Waterproof Military Watch Instruction Manual

Model: 6092 | Brand: KXAITO

1. INTRODUCTION

Thank you for choosing the KXAITO Model 6092 Sports Outdoor Waterproof Military Watch. This timepiece combines robust design with multi-functional capabilities, making it suitable for various outdoor activities and daily wear. It features a dual analog and digital display, alarm, stopwatch, date, and LED backlight functions. Please read this manual carefully to understand the watch's operation and ensure proper use and maintenance.



Image 1: Front view of the KXAUTO Model 6092 watch, showcasing its robust design and dual display.

2. PRODUCT OVERVIEW AND FEATURES

The KXAUTO Model 6092 watch is engineered for durability and functionality. Key features include:

- **Dual Display:** Analog and digital time display for convenience.
- **Multi-functional:** Includes alarm, stopwatch, date, and LED backlight.
- **Water Resistance:** Rated for 5 ATM (50 meters), suitable for daily use and shallow water activities.
- **Durable Construction:** Features a stainless steel case cover, key scratch-resistant watch face, and a reinforced resin band.
- **Shock Resistant:** Designed to withstand impacts during sports and outdoor activities.
- **12/24 Hour Format:** User-selectable time display format.

The watch is equipped with four buttons for various operations:

- **LIGHT (Top Left):** Activates the LED backlight.

- **MODE (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Dual Time).
- **START (Top Right):** Used to start/stop functions or increment values during setting.
- **RESET (Bottom Right):** Used to reset functions or select items during setting.

50 METERS WATERPROOF

50 METERS WATERPROOF



Wash



Wash the face



Cold bath





Image 2: Diagram illustrating the watch's dimensions and highlighting various functional areas.

3. SETUP INSTRUCTIONS

3.1 Setting Time and Date

1. In normal time display mode, press the **MODE** button three times to enter time setting mode. The seconds digits will flash.
2. Press the **RESET** button to cycle through the setting items: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing digit or item. Hold **START** to rapidly advance the numbers.
4. Once all settings are complete, press the **MODE** button to return to normal time display mode.

3.2 12/24 Hour Format Selection

In normal time display mode, press the **START** button to toggle between 12-hour (AM/PM indicator) and 24-hour formats.

4. OPERATING INSTRUCTIONS

4.1 Alarm Function

1. From normal time display mode, press the **MODE** button once to enter Alarm mode.
2. Press the **RESET** button to select the hour or minute digits for setting.
3. Use the **START** button to adjust the flashing digits.
4. Press the **MODE** button to confirm the alarm time and exit Alarm setting mode.
5. To activate/deactivate the alarm, in Alarm mode, press the **START** button. An alarm icon will appear/disappear.
6. To activate/deactivate the hourly chime (SIG), in Alarm mode, press the **RESET** button and then **START**. A SIG icon will appear/disappear.

4.2 Stopwatch Function

1. From normal time display mode, press the **MODE** button twice to enter Stopwatch mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to zero while paused.
5. To record split times (SPL), press **RESET** while the stopwatch is running. The split time will display for a few seconds, then the stopwatch will continue timing. Press **RESET** again to return to the running stopwatch display.

4.3 LED Backlight

Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds, enhancing visibility in low-light conditions.

4.4 Dual Time Zone

This watch supports a dual time zone display. To access and set the second time zone:

1. From normal time display mode, press the **MODE** button four times to enter Dual Time mode.
2. Press the **RESET** button to select the hour or minute digits for setting.
3. Use the **START** button to adjust the flashing digits.
4. Press the **MODE** button to confirm the dual time and exit Dual Time setting mode.

5. MAINTENANCE

5.1 Water Resistance

The KXAUTO Model 6092 watch is water resistant up to 5 ATM (50 meters). This rating means the watch is suitable for:

- Daily use, such as hand washing and splashes.
- Showering (avoiding direct hot water spray).
- Swimming in shallow water.

Important Precautions:

- **DO NOT** press any buttons while the watch is submerged in water. This can compromise the water resistance seals.
- Avoid exposing the watch to hot water or steam (e.g., hot showers, saunas), as this can damage the waterproof ring.
- The watch is **NOT** suitable for diving, snorkeling, or high-pressure water activities.



Image 3: The watch demonstrating its water resistance capabilities.

5.2 Cleaning

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish or seals.

5.3 Battery Replacement

The watch uses a Maxell Japan battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is properly maintained.

6. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time and date following the instructions in Section 3.1. Ensure the 12/24 hour format is correctly set.

- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not a feature of this model). If the issue persists, a battery replacement might resolve it, or contact support.
- **Water inside the watch:** Immediately stop using the watch and seek professional repair. Do not attempt to open the watch yourself, as this will void any potential warranty and further damage the watch.

7. SPECIFICATIONS

Case Diameter	56 mm
Case Thickness	16 mm
Band Length	260 mm
Band Adjust Range	140 mm - 230 mm
Band Width	22 mm
Movement	Japan Import Quartz and Electronic Movement
Water Resistance	5 ATM (50 meters)
Battery Type	Maxell Japan Battery
Case Material	Zinc Alloy
Strap Material	TPU
Weight	80 g
Mirror Material	High Hardness Tempered Mirror

8. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your KXAITO Model 6092 watch, please do not hesitate to contact the seller or manufacturer directly. While specific warranty details are not provided in this manual, the seller is committed to customer satisfaction and will assist with any product-related inquiries.

Extended warranty plans may be available for purchase separately. Please refer to your purchase documentation or contact the seller for more information on available protection plans.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question