

[Manuals.plus](#) /

› [Country Kitchen](#) /

› Country Kitchen Non-Stick Cast Aluminum Cookware Set - Cream, 11 Pc. Instruction Manual

Country Kitchen Cream

Country Kitchen Non-Stick Cast Aluminum Cookware Set - Cream, 11 Pc. Instruction Manual

Model: Cream | Brand: Country Kitchen

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and effective use of your Country Kitchen Non-Stick Cast Aluminum Cookware Set. This 11-piece set is designed for everyday cooking, featuring a durable non-stick coating and cast aluminum construction for efficient heat distribution.

Please read these instructions thoroughly before first use and retain them for future reference.



Image: The complete 11-piece Country Kitchen cookware set in cream, showcasing various pots, pans, and glass lids with wood-look handles.

2. PRODUCT COMPONENTS

Your Country Kitchen 11-piece cookware set includes the following items:

- 1 x 8-quart Casserole Pot with Glass Lid
- 1 x 4-quart Casserole Pot with Glass Lid
- 1 x Steamer (fits 2-quart saucepan)
- 1 x 11-inch Frying Pan
- 1 x 8-inch Frying Pan
- 1 x 11-inch Deep Frying Pan with Glass Lid
- 1 x 2-quart Sauce Pan with Glass Lid

ESSENTIAL COOKWARE SET



4 QT Saute Pan With Lid



11 Inch Frying Pan



8 QT Dutch Oven With Lid



4 QT Casserole Pot With Lid



Steamer
fits 2 QT saucepan



2 QT Saucepan With Lid



8 Inch Frying Pan

COUNTRY KITCHEN

Image: A visual breakdown of the 11-piece set, labeling each pot, pan, and accessory by type and size.

3. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all cookware pieces and lids from their packaging. Inspect each item for any signs of damage.
2. **Initial Cleaning:** Before first use, wash all pots, pans, and lids with warm, soapy water. Rinse thoroughly and dry completely with a soft cloth.
3. **Handle Inspection:** Ensure all Bakelite handles are securely attached to the cookware. These handles are designed to remain cool during stovetop use.



Image: The cookware set displayed in a kitchen setting, illustrating how the pieces might be arranged for cooking.

4. OPERATING INSTRUCTIONS

4.1 Stovetop Use

- **Heat Settings:** For optimal performance and to preserve the non-stick coating, use low to medium heat settings. High heat is generally not necessary due to the efficient heat conductivity of cast aluminum.
- **Stovetop Compatibility:** This cookware set is compatible with gas, electric, ceramic, and induction stovetops.
- **Even Heating:** The stainless steel bottom ensures quick and even heat distribution, preventing hot spots.

QUICK & EVEN HEATING




gas



electric



ceramic

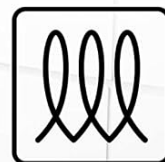

induction



Image: Visual representation of the cookware's compatibility with various heat sources: gas, electric, ceramic, and induction.

4.2 Non-Stick Performance

- The non-stick coating allows for cooking with minimal oil or butter.
- Use silicone, wooden, or heat-resistant plastic utensils to avoid scratching the non-stick surface. Metal utensils are not recommended.



Image: A fried egg effortlessly releasing from a non-stick pan, highlighting the effective non-stick properties.

4.3 Oven Use

This cookware set is oven safe. However, always check the maximum temperature rating for the specific Bakelite handles and glass lids before placing in the oven. Prolonged exposure to high oven temperatures may affect handle durability.

4.4 Glass Lids

The included glass lids allow for easy monitoring of food during cooking without lifting the lid, helping to retain heat and moisture.



Image: A close-up of a glass lid on a pot, allowing visibility of vegetables cooking inside.

5. MAINTENANCE AND CARE

- **Hand Washing:** Hand washing is recommended to maintain the non-stick finish and overall longevity of the cookware. Use warm, soapy water and a soft sponge or cloth.
- **Dishwasher Use:** This cookware is **not** dishwasher safe. Dishwasher detergents can be abrasive and may degrade the non-stick coating and finish over time.
- **Stubborn Food:** For stubborn food residues, soak the pan in warm, soapy water for a short period before cleaning. Avoid using abrasive cleaners, steel wool, or scouring pads.
- **Cool Down:** Always allow cookware to cool completely before washing to prevent warping.
- **Storage:** To protect the non-stick surface, place a soft cloth or paper towel between stacked pans during storage.



Image: A hand using a soft sponge to clean a non-stick pan, demonstrating the ease of cleaning.

6. TROUBLESHOOTING

Food Sticking to the Pan:

Possible Cause: Too high heat, insufficient oil (though minimal is needed), or damaged non-stick coating.

Solution: Ensure you are cooking on low to medium heat. While non-stick, a small amount of cooking oil or butter can improve food release. Avoid using metal utensils that can scratch the surface.

Discoloration or Stains on Cookware:

Possible Cause: Overheating, certain foods, or mineral deposits from water.

Solution: Ensure proper heat management. For mineral deposits, a solution of vinegar and water can sometimes help. Avoid harsh chemicals or abrasive scrubbers.

Handles Becoming Hot:

Possible Cause: Excessive heat, flame extending up the sides of the pan, or oven use.

Solution: Always ensure the heat source is confined to the base of the pan. While Bakelite handles are designed to

stay cool on the stovetop, they can heat up in an oven or if exposed directly to flame. Use oven mitts when handling hot cookware.

7. SPECIFICATIONS

Model	Cream
Brand	Country Kitchen
Material	Cast Aluminum body, Glass lids, Bakelite handles, Stainless Steel bottom
Number of Pieces	11
Non-Stick Coating	Yes (PFOA/PFOS Free, Non-toxic, Lead-Free)
Stovetop Compatibility	Gas, Electric, Ceramic, Induction
Oven Safe	Yes (check temperature limits for handles/lids)
Dishwasher Safe	No (Hand wash recommended)
Manufacturer	Enchante Direct
UPC	192598959041



Image: Detailed view of the pan's construction, showing the cast aluminum body, Bakelite handle, and stainless steel induction-compatible base.



Image: A visual confirmation of the cookware being 100% lead-free, shown with a pot of soup.

8. WARRANTY AND SUPPORT

Specific warranty details for the Country Kitchen Non-Stick Cast Aluminum Cookware Set are not provided in this manual. For warranty information, product support, or any inquiries, please contact the manufacturer, Enchante Direct, or visit the official Country Kitchen brand store.

Country Kitchen Brand Store: [Visit Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question