

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [eufy](#) /

> [eufy by Anker RoboVac Robot Vacuum G30 Edge Instruction Manual](#)

eufy G30 Edge

eufy by Anker RoboVac Robot Vacuum G30 Edge Instruction Manual

Model: G30 Edge (ASIN: B0BNLLD97D)

INTRODUCTION

Welcome to your new eufy by Anker RoboVac G30 Edge. This robot vacuum is designed to provide efficient and intelligent cleaning for your home with Smart Dynamic Navigation. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.

WHAT'S IN THE BOX

The eufy RoboVac G30 Edge package includes the following items:

- eufy RoboVac G30 Edge Robot Vacuum
- Charging Base with integrated cable management
- Power Adapter
- Side Brushes (extra set)
- High-Performance Filter (extra)
- Cleaning Tool
- Boundary Strips (2 rolls)
- Cable Ties
- Quick Start Guide
- User Manual



Image: All components included in the eufy RoboVac G30 Edge packaging.

SETUP

Initial Setup Steps

1. **Prepare the Charging Base:** Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 3 feet (1 meter) of clear space in front of the base and 1.5 feet (0.5 meters) on either side. Connect the power adapter to the charging base and a wall outlet.
2. **Install Side Brushes:** Press the side brushes onto the posts at the bottom of the RoboVac until they click into place.
3. **Charge the RoboVac:** Place the RoboVac on the charging base. The indicator lights will show charging status. Ensure it is fully charged before first use.
4. **Download the eufyHome App:** Search for "eufyHome" in the App Store (iOS) or Google Play (Android) and download the app.
5. **Connect to Wi-Fi:** The RoboVac requires a 2.4 GHz Wi-Fi network. Ensure your mobile device is connected to a 2.4 GHz network during setup. Follow the in-app instructions to connect your RoboVac to your home Wi-Fi.

Your browser does not support the video tag.

Video: A quick look at the eufy RoboVac G30 and G30 Edge, demonstrating its features and the setup process.

OPERATING INSTRUCTIONS

The eufy RoboVac G30 Edge offers various cleaning modes and smart features for optimal cleaning.

Control Buttons on RoboVac

- **Start/Pause Button:** Press to start or pause cleaning.
- **Home Button:** Press to send the RoboVac back to the charging base.
- **Spot Cleaning Button:** Press to initiate spot cleaning for a concentrated area.

eufyHome App Controls

The eufyHome app provides comprehensive control over your RoboVac:

- **Start/Stop Cleaning:** Initiate or stop cleaning cycles.
- **Select Cleaning Modes:** Choose from various modes like Auto, Spot, Edge, or Manual cleaning.
- **Set Schedules:** Program cleaning times for automatic operation.
- **View Cleaning History:** Review past cleaning sessions and coverage maps.
- **Adjust Suction Power:** Customize suction levels for different floor types.
- **Receive Notifications:** Get alerts on RoboVac status and maintenance reminders.



Image: The eufyHome app interface, allowing control and monitoring of the RoboVac.

Your browser does not support the video tag.

Video: The eufy RoboVac navigating and cleaning around furniture, demonstrating its obstacle avoidance and cleaning efficiency.

MAINTENANCE

To ensure optimal performance and longevity of your RoboVac, regular maintenance is essential. Perform these steps as needed or as indicated by the app.

Dust Collector and Filter

1. **Empty the Dust Collector:** Press the release button to remove the dust collector. Open the dust collector cover and empty its contents into a trash bin.
2. **Clean the Filter:** Remove the high-performance filter and foam filter. Tap them gently to remove dust. Use the cleaning tool to brush off any remaining debris. *Do not wash the high-performance filter with water.*
3. **Reinstall:** Place the filters back into the dust collector and reinsert the dust collector into the RoboVac.

Side Brushes

Check the side brushes regularly for tangled hair or debris. Pull them off to clean and reattach. Replace if worn or damaged.

Rolling Brush

Remove the rolling brush cover and lift out the rolling brush. Use the cleaning tool to cut and remove any hair or debris wrapped around the brush. Reinstall the rolling brush and cover.

Sensors and Charging Pins

Wipe the drop sensors, charging contact pins on the RoboVac, and charging base pins with a dry cloth to maintain good contact and prevent malfunctions.

TROUBLESHOOTING

If you encounter issues with your RoboVac, refer to the following common problems and solutions:

RoboVac does not turn on or charge.

- Ensure the power adapter is securely connected to the charging base and a functional wall outlet.
- Check if the charging pins on the RoboVac and charging base are clean and making proper contact.
- Verify the main power switch on the side of the RoboVac is in the "ON" position.

RoboVac gets stuck frequently.

- Use the provided boundary strips to block off areas where the RoboVac might get stuck (e.g., very thick carpets, areas with many loose cables).
- Clear wires, cables, and small objects from the floor before cleaning.
- Ensure the drop sensors are clean and free of debris.

Cannot connect to Wi-Fi.

- Confirm your Wi-Fi network is 2.4 GHz. The RoboVac does not support 5 GHz networks.
- Ensure your mobile device is connected to the 2.4 GHz network during the setup process.
- Restart your Wi-Fi router and try connecting again.
- Move the RoboVac closer to your Wi-Fi router to improve signal strength.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	eufy
Model	RoboVac G30 Edge
Navigation	Smart Dynamic Navigation
Suction Power	2000 Pa
Sensors	9 sensors
Auto-Return	Yes (to charging base)
Height	2.85 inches
Power Source	Battery Powered
Filter Type	Cartridge

Feature	Detail
Surface Recommendation	Carpet, Hard Floor
Wi-Fi Connectivity	2.4 GHz

WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical support, or other inquiries, please refer to the official eufy website or contact their customer service. Keep your purchase receipt for warranty claims.

Official eufy Website: www.eufylife.com