

[Manuals.plus](#) /

› [FARI](#) /

› FARI Electric Spin Scrubber User Manual

FARI ANS-8050

FARI Electric Spin Scrubber User Manual

Model: ANS-8050

1. PRODUCT OVERVIEW

The FARI Electric Spin Scrubber (Model ANS-8050) is a versatile and efficient cordless cleaning tool designed to simplify household cleaning tasks. It features a powerful motor, adjustable extension rod, and a variety of interchangeable brush heads, making it suitable for cleaning bathrooms, kitchens, floors, and even cars.



Figure 1: FARI Electric Spin Scrubber and included accessories.

2. WHAT'S IN THE BOX

Your FARI Electric Spin Scrubber package includes the following components:

- Electric Spin Scrubber Main Unit
- Adjustable Extension Rod (10-55 inches)
- 8 Different Type Cleaning Heads (various brushes and pads for different surfaces)
- Type-C Charging Cable
- Wall Holder
- Mesh Storage Bag
- User Manual (this document)




Figure 2: All components included in the FARI Electric Spin Scrubber package.

3. SETUP

3.1 Charging the Scrubber

Before first use, fully charge the Electric Spin Scrubber. The unit is powered by a 3.7V rechargeable Li-ion battery.

 1. Connect the Type-C charging cable to the charging port on the scrubber's handle.
2. Plug the other end of the cable into a compatible USB power adapter (not included).
3. The battery indicator lights will illuminate during charging. A full charge typically takes approximately 2 hours.
4. Once fully charged, the scrubber provides up to 90 minutes of continuous working time.

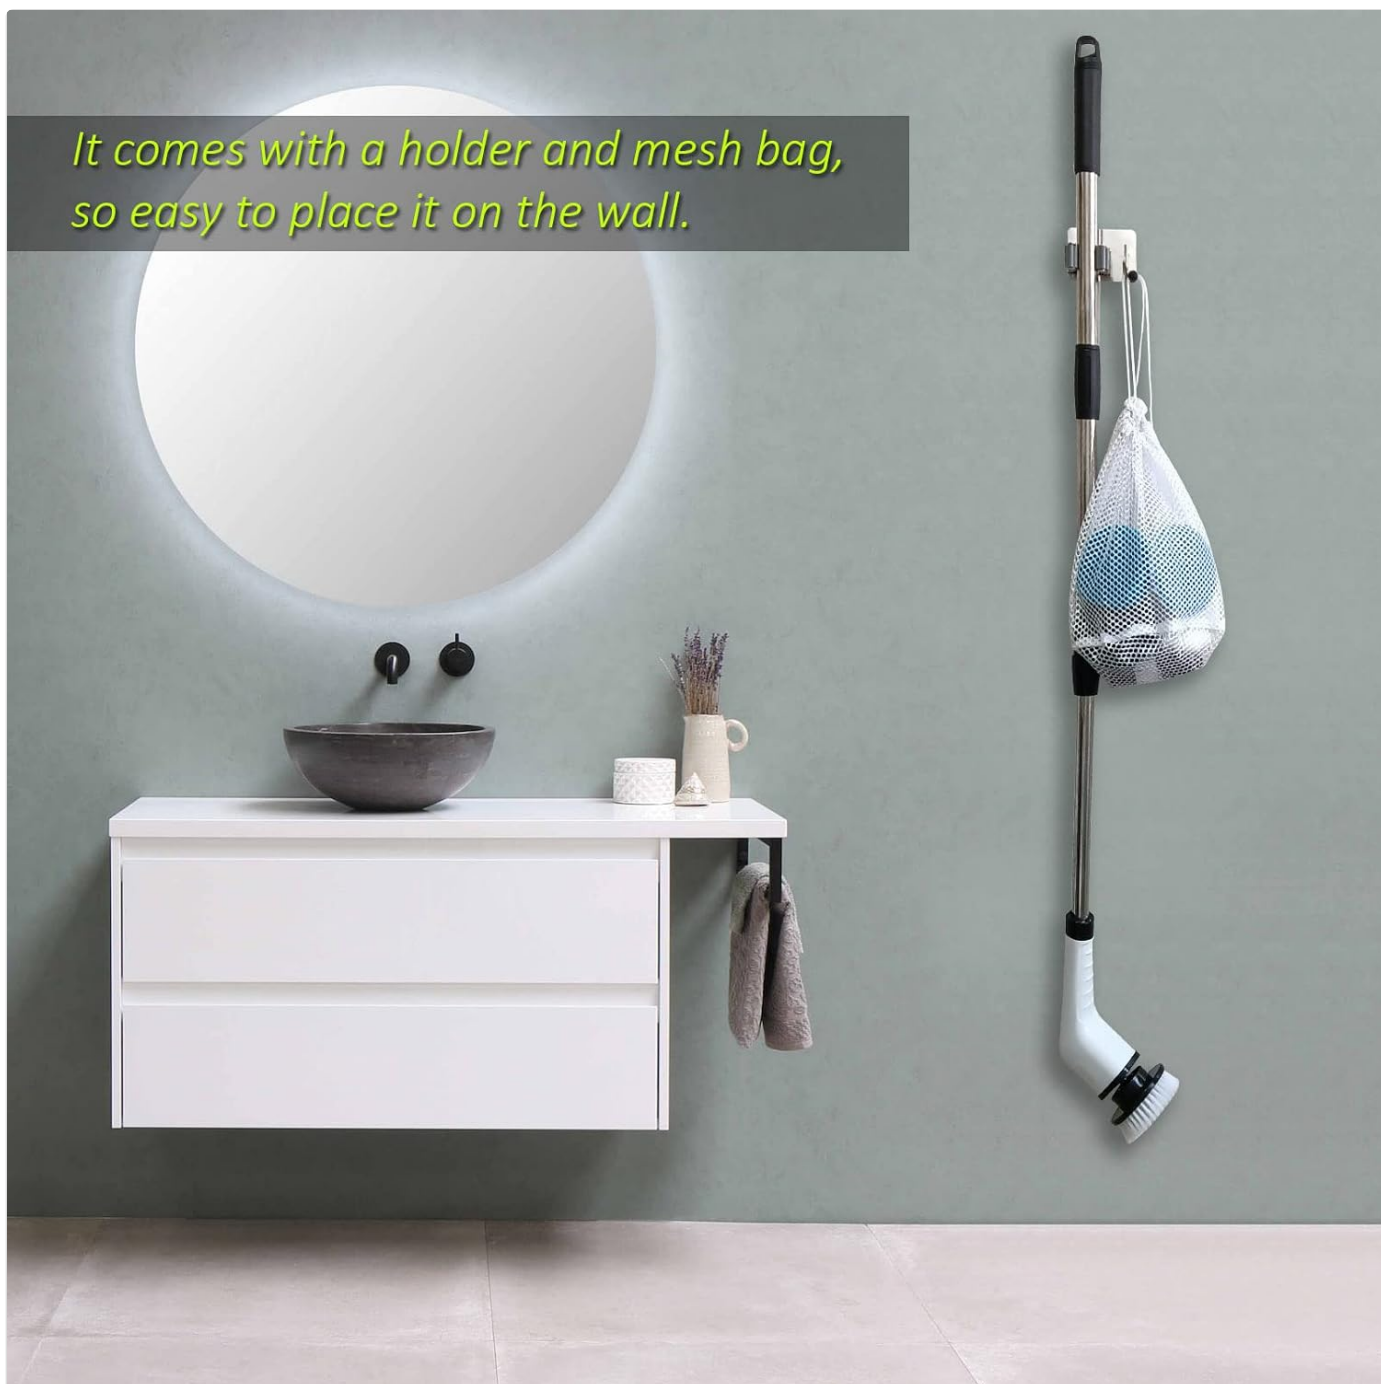

*It comes with a holder and mesh bag,
so easy to place it on the wall.*

Figure 3: Charging the Electric Spin Scrubber.

3.2 Attaching Brush Heads and Extension Rod

The scrubber comes with various brush heads and an adjustable extension rod for different cleaning needs.

1. **To attach a brush head:** Align the desired brush head with the rotating base of the main unit and twist clockwise until it clicks securely into place.
2. **To attach the extension rod:** Screw the main scrubber unit onto one end of the extension rod. Then, if needed, attach the other handle section to the opposite end of the rod. Adjust the length by twisting and extending the rod sections.
3. **To remove components:** Twist counter-clockwise to detach brush heads or rod sections.



Figure 4: Assembly of the scrubber unit and extension rod.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Speed Control

The scrubber features two working speeds for various cleaning intensities.

1. Press the power button () once to turn the unit on at Low Speed (300 RPM).
2. Press the power button again to switch to High Speed (400 RPM).
3. Press the power button a third time to turn the unit off.

4.2 Using the Scrubber

Select the appropriate brush head for the surface you intend to clean. Apply a suitable cleaning agent to the surface or directly to the brush head.

- **Bathroom Cleaning:** Use the large brush for bathtubs, tiles, and shower walls.

- **Kitchen Cleaning:** The small brush is ideal for sinks, countertops, and stovetops.
- **Corner Cleaning:** The pointed brush effectively reaches tight corners and grout lines.
- **Polishing:** Use the polishing pad for smooth surfaces like glass or chrome.
- **Grease Cleaning:** The abrasive pad is effective for stubborn grease on cooking surfaces.
- **Car Cleaning:** Utilize specific pads for car exterior or interior cleaning.
- **Window Cleaning:** The soft cloth pad is suitable for streak-free window cleaning.
- **Floor Cleaning:** The large floor brush or microfiber pad can be used with the extension rod for floors.



 
← Bathroom Cleaning

Kitchen Cleaning →




← Corner Cleaning

Polishing →

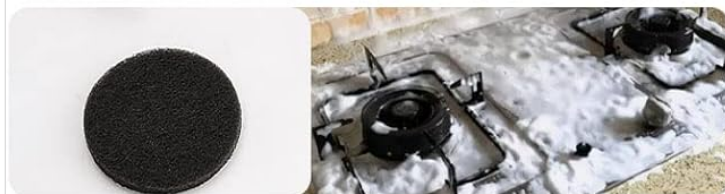

← Grease Cleaning

 Car Cleaning →

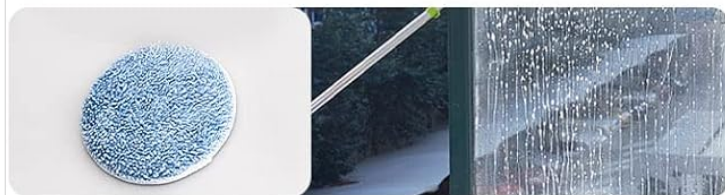

← Windows Cleaning

Floor Cleaning →



Figure 5: Examples of cleaning applications for different brush heads.

4.3 Important Operating Notes

- Do not immerse the main unit of the scrubber under water. It is highly sealed to prevent damage from water splashes, but not designed for submersion.
- Always ensure the brush head is securely attached before operating.
- For optimal cleaning, allow the scrubber to do the work; avoid applying excessive pressure.

5. MAINTENANCE

5.1 Cleaning the Scrubber

After each use, clean the scrubber and its accessories:

- Wipe down the main unit with a damp cloth. Do not rinse directly under a tap or immerse.
- Rinse brush heads thoroughly under running water to remove dirt and cleaning agents. Allow them to air dry completely before storing.
- Store the scrubber and its accessories in the provided mesh bag and use the wall holder for convenient storage.



Figure 6: Storing the scrubber using the included wall holder and mesh bag.

5.2 Battery Care

- To prolong battery life, avoid completely draining the battery before recharging.
- Store the unit in a cool, dry place when not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Scrubber does not turn on.	Low battery; Unit not charged.	Charge the unit fully (approx. 2 hours).
Brush head stops spinning or spins slowly.	Low battery; Excessive pressure applied; Brush head jammed.	Recharge the unit; Reduce pressure; Check for obstructions and clear them.

Problem	Possible Cause	Solution
Brush head detaches during use.	Brush head not securely attached.	Ensure the brush head is twisted clockwise until it clicks firmly into place.

7. SPECIFICATIONS

- Brand:** FARI
- Model:** ANS-8050
- Color:** White
- Material:** Acrylonitrile Butadiene Styrene (ABS)
- Product Dimensions:** 17"L x 4"W x 4"H (main unit)
- Adjustable Handle Length:** 10-55 inches
- Battery:** 3.7V Rechargeable Li-ion (included)
- Charging Time:** Approx. 2 hours
- Working Time:** Up to 90 minutes
- Speed Control:** 2 Speeds (Low: 300 RPM, High: 400 RPM)
- Waterproof Rating:** Highly sealed (do not immerse)
- Item Weight:** 2.2 Pounds
- Manufacturer:** ZLPMARY
- Country of Origin:** China

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your FARI Electric Spin Scrubber, please refer to the contact information provided on the product packaging or visit the official FARI brand store on Amazon: [FARI Store](#).

© 2025 FARI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question