



Manuals.plus /

- › Braun /
- › Braun Series 7 7420 All-in-One Trimmer Instruction Manual

Braun AIO7420

Braun Series 7 7420 All-in-One Trimmer Instruction Manual

Model: AIO7420

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use, setup, operation, and maintenance of your Braun Series 7 7420 All-in-One Trimmer. Please read all instructions carefully before using the device and retain this manual for future reference.



Image 1.1: Braun Series 7 7420 All-in-One Trimmer, showcasing the device, its packaging, charging stand, and travel case.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury, always adhere to the following safety guidelines:

- Avoid contact with eyes.
- Do not use on infants or children.
- Keep away from water sources when not specifically designed for wet use or when charging.
- Always unplug the device before cleaning.
- Do not use the device while it is charging.
- Always store the device and its accessories out of reach of children and pets.
- Always follow recommended cleaning and maintenance procedures as outlined in this manual.
- Always read and follow the user manual completely before initial use.
- This appliance is equipped with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise, there is a risk of electric shock.
- Never use the appliance with a damaged cord set or plug.

- Do not open the appliance. The integrated rechargeable battery can only be replaced by an authorized Braun Service Centre.

3. PACKAGE CONTENTS

Your Braun Series 7 7420 All-in-One Trimmer package includes the following components:

- Trimmer device with ProBlade trimmer head
- Body groomer head
- Precision beard comb (0.5 mm – 10 mm)
- Precision hair comb (10.5 – 20 mm)
- Beard fading combs (2 pieces)
- Ear & nose trimmer head
- Detail trimmer head
- Mini foil shaver
- Cleaning brush
- Charging stand
- Beard stencil
- Organizer case

What's included:



Image 3.1: A visual representation of all 11-in-1 components included in the kit, such as the electric trimmer, various combs, specialized heads, charging stand, and organizer case.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your trimmer. Connect the charging stand to the power outlet using the provided cord set, then place the trimmer on the charging stand. The charging indicator light will illuminate to show charging is in progress. A full charge provides up to 100 minutes of cordless runtime.



Image 4.1: The trimmer positioned on its charging stand, illustrating the device's 100-minute cordless operation capability.

4.2 Attaching and Removing Trimmer Heads/Combs

- **To Attach:** Align the desired trimmer head or comb with the trimmer body and press firmly until it clicks into place.
- **To Remove:** Gently pull the trimmer head or comb away from the trimmer body.

5. OPERATING INSTRUCTIONS

The Braun Series 7 7420 offers versatile grooming options for beard, face, hair, and body. Ensure your trimmer is charged and the desired attachment is securely in place before use.

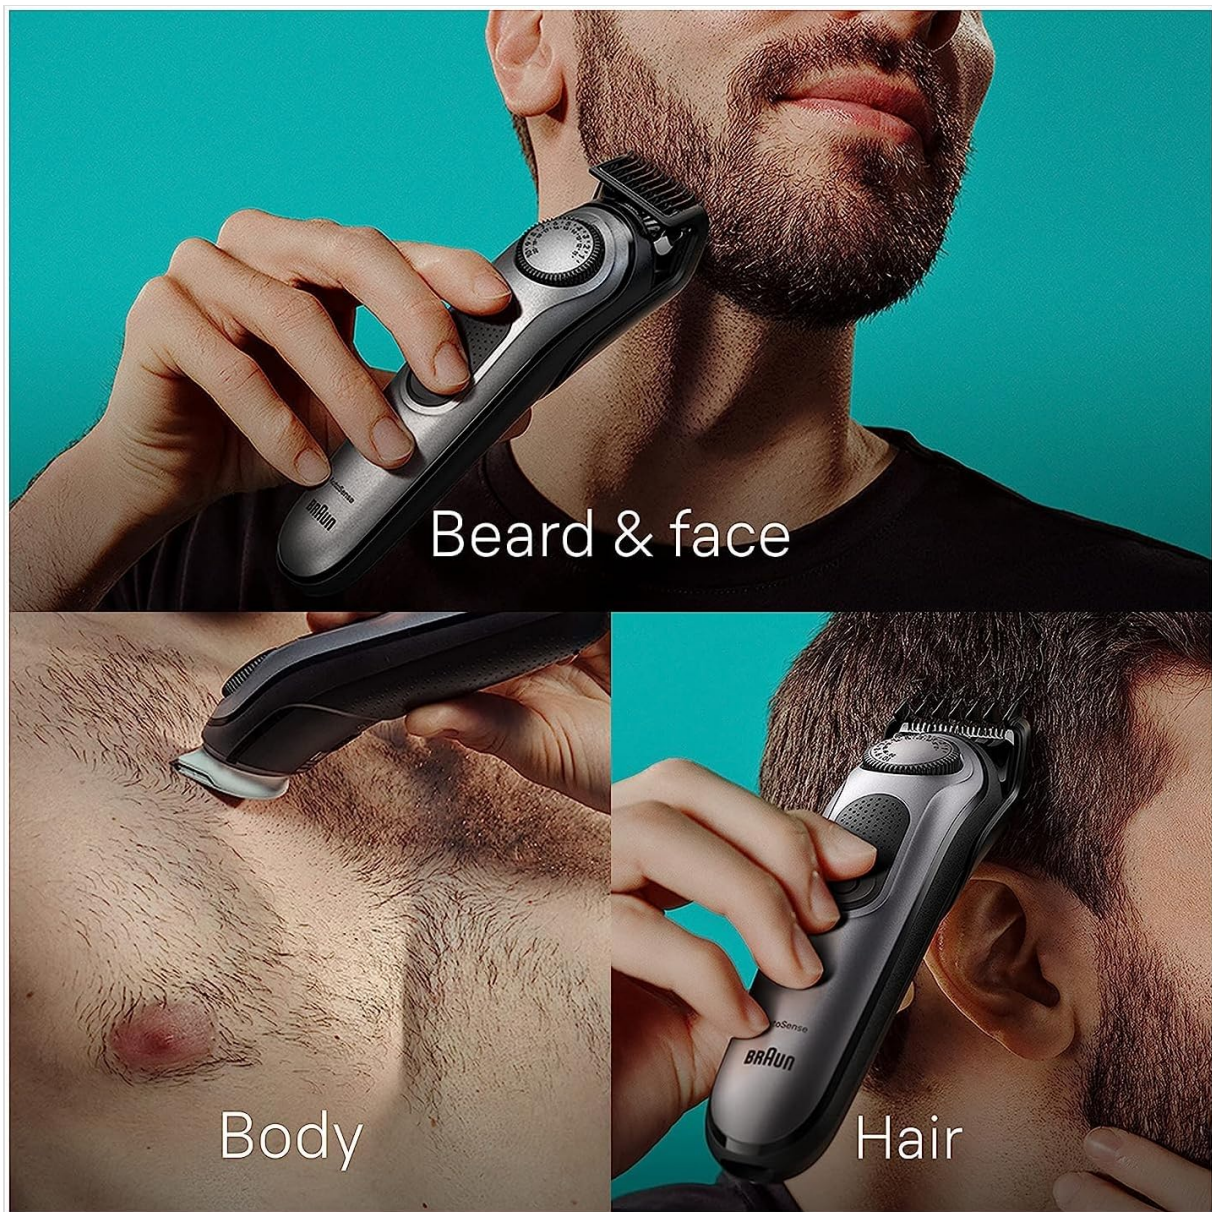


Image 5.1: Demonstrations of the trimmer being used for beard and face grooming, body hair trimming, and hair clipping.

5.1 Adjusting Length Settings with the Precision Wheel

The integrated Precision Wheel allows for 40 length settings in 0.5 mm steps, from 0.5 mm to 20 mm. Rotate the wheel to select your desired length. This feature is primarily used with the precision beard and hair combs.



Built-in ProWheel

for precision
at your fingertips



Image 5.2: A detailed view of the trimmer's Precision Wheel, indicating the 40 available length settings for precise grooming.

5.2 Beard & Face Trimming

- **For Short to Medium Beards (0.5 mm - 10 mm):** Attach the precision beard comb. Use the Precision Wheel to select the desired length. Trim against the direction of hair growth for an even cut.
- **For Beard Fading:** Use the specialized beard fading combs to create a gradual transition in beard length.
- **For Detailing and Edging:** Remove any comb and use the ProBlade directly for sharp lines, or attach the detail trimmer head for intricate styling. The beard stencil can assist in achieving symmetrical lines.

5.3 Hair Clipping

- Attach the precision hair comb (10.5 mm - 20 mm).
- Select the desired hair length using the Precision Wheel.
- Move the trimmer slowly against the direction of hair growth, ensuring consistent contact with the scalp.

5.4 Body Grooming

- Attach the body groomer head.
- Use gentle, even strokes to trim body hair to your preferred length.

5.5 Nose & Ear Trimming

- Attach the ear & nose trimmer head.
- Carefully insert the trimmer into the nostril or ear canal and gently rotate to trim unwanted hair. Do not insert too deeply.

5.6 Precision Shaving

- Attach the mini foil shaver head.
- Use for a close, smooth finish on small areas or for precise edging.

6. MAINTENANCE

6.1 Cleaning

The Braun Series 7 7420 is 100% waterproof, allowing for easy cleaning under running water.



Image 6.1: The trimmer being held under running water, demonstrating its 100% waterproof design for easy cleaning.

- After each use, remove the trimmer head and rinse both the head and the trimmer body under warm running water.
- Use the provided cleaning brush to remove any stubborn hair clippings from the blades and combs.
- Allow all parts to air dry completely before reassembling or storing.
- Do not use abrasive cleaners or harsh chemicals.

6.2 Blade Care

The ProBlade is designed for lifetime sharpness. For optimal performance, ensure blades are kept clean and free of debris. Oiling is generally not required for these self-sharpening blades, but refer to specific instructions if included with your device for any additional recommendations.



Image 6.2: A detailed shot of the ProBlade, emphasizing its durable metal construction and sharp cutting edge.

6.3 Storage

Store the trimmer and all accessories in the provided organizer case to protect them from damage and keep them clean. Ensure the device is dry before storing.

7. TROUBLESHOOTING

If you encounter issues with your Braun Series 7 7420 Trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer for at least 1 hour.
Poor trimming performance.	Blades are clogged with hair or dirty.	Clean the trimmer head and blades thoroughly.
Attachment head falls off during use.	Attachment not securely fastened.	Ensure the attachment clicks firmly into place.
Trimmer makes unusual noise.	Foreign object in the blade area or damaged head.	Clean the head. If noise persists or head is damaged, discontinue use and contact customer support.

If the problem persists after attempting these solutions, please contact Braun customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Model Number	AIO7420
Product Dimensions	6.3 x 3.27 x 11.1 inches
Item Weight	1.08 Pounds (488 Grams)
Power Source	Battery Powered (1 Lithium Ion battery included)
Battery Runtime	Up to 100 minutes cordless
Length Settings	40 precision length settings (0.5 mm - 20 mm)
Waterproof	100% waterproof
Manufacturer	Procter & Gamble

9. WARRANTY AND SUPPORT

Your Braun Series 7 7420 All-in-One Trimmer is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, replacement parts, or warranty claims, please visit the official Braun website or contact their customer service department. Contact information can typically be found on the Braun website

or in your product packaging.