

## Braun 5471

# Braun All-in-One Style Kit Series 5 5471 User Manual

Model: 5471

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your Braun All-in-One Style Kit Series 5 5471. This versatile 8-in-1 grooming tool is designed for trimming, detailing, body grooming, precision shaving, and managing ear and nose hair. Please read all instructions carefully before first use and retain this manual for future reference.

## SAFETY INFORMATION

---

### Important Safety Warnings:

- Keep the trimmer away from water sources to avoid damage. Do not submerge the trimmer.
- Always unplug the trimmer before cleaning or changing attachments.
- Replace blades only when necessary to avoid accidents from dull blades.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## PRODUCT OVERVIEW AND CONTENTS

---

Your Braun All-in-One Style Kit Series 5 5471 includes the following components:

- Trimmer device with plastic trimmer head
- Body groomer head
- Precision beard comb (0.5 mm – 10 mm)
- Precision hair comb (10.5 – 20 mm)

- Eyebrow comb
- Ear & nose trimmer head
- Detail trimmer head
- Mini foil shaver
- Cleaning brush
- Travel pouch
- Zipper pouch

 


Image: All components of the Braun All-in-One Style Kit Series 5 5471, including the main trimmer unit, various combs, specialized heads (body groomer, ear & nose trimmer, detail trimmer, mini foil shaver), cleaning brush, and storage pouches.

## SETUP

### Charging the Device

Before first use, fully charge the trimmer. Connect the charging cable to the trimmer and a power outlet. The charging indicator light will show the charging status. A full charge provides approximately 80 minutes of cordless runtime. The device is designed to prevent overcharging.



# 80 minutes

of cordless,  
constant cutting  
power



Image: The Braun All-in-One Style Kit Series 5 5471 trimmer standing upright, indicating its 80-minute cordless runtime and charging status with a green light.

## Attaching and Removing Trimmer Heads/Combs

To attach a trimmer head or comb, align it with the main unit and press firmly until it clicks into place. To remove, gently pull the head or comb away from the main unit. Ensure the device is switched off before changing attachments.

## OPERATING INSTRUCTIONS

### General Operation

Press the power button to turn the trimmer on or off. The ultra-sharp blades ensure efficient and precise trimming.

# Ultra sharp blades

Professional precision and 100% control



Image: A close-up view of the ultra-sharp blades of the Braun trimmer, highlighting their precision design for effective cutting.

## Adjusting Length with the Precision Wheel

The integrated Precision Wheel allows you to select from 40 length settings in 0.02-inch (0.5 mm) steps. Rotate the wheel to your desired length setting. This feature provides precise control for various styling needs.



# Built-in ProWheel

for precision  
at your fingertips



Image: A detailed view of the Precision Wheel on the Braun trimmer, illustrating its 40 distinct length settings for precise grooming.

## Specific Grooming Applications

- **Beard & Face:** Use the precision beard comb (0.5 mm - 10 mm) for beard trimming and styling. The detail trimmer head can be used for precise lines and edges. The mini foil shaver provides a close finish.
- **Body:** Attach the body groomer head for manscaping and body hair removal.
- **Hair:** Use the precision hair comb (10.5 mm - 20 mm) for hair clipping.
- **Ear & Nose:** Attach the ear & nose trimmer head for safe and comfortable removal of unwanted hair.

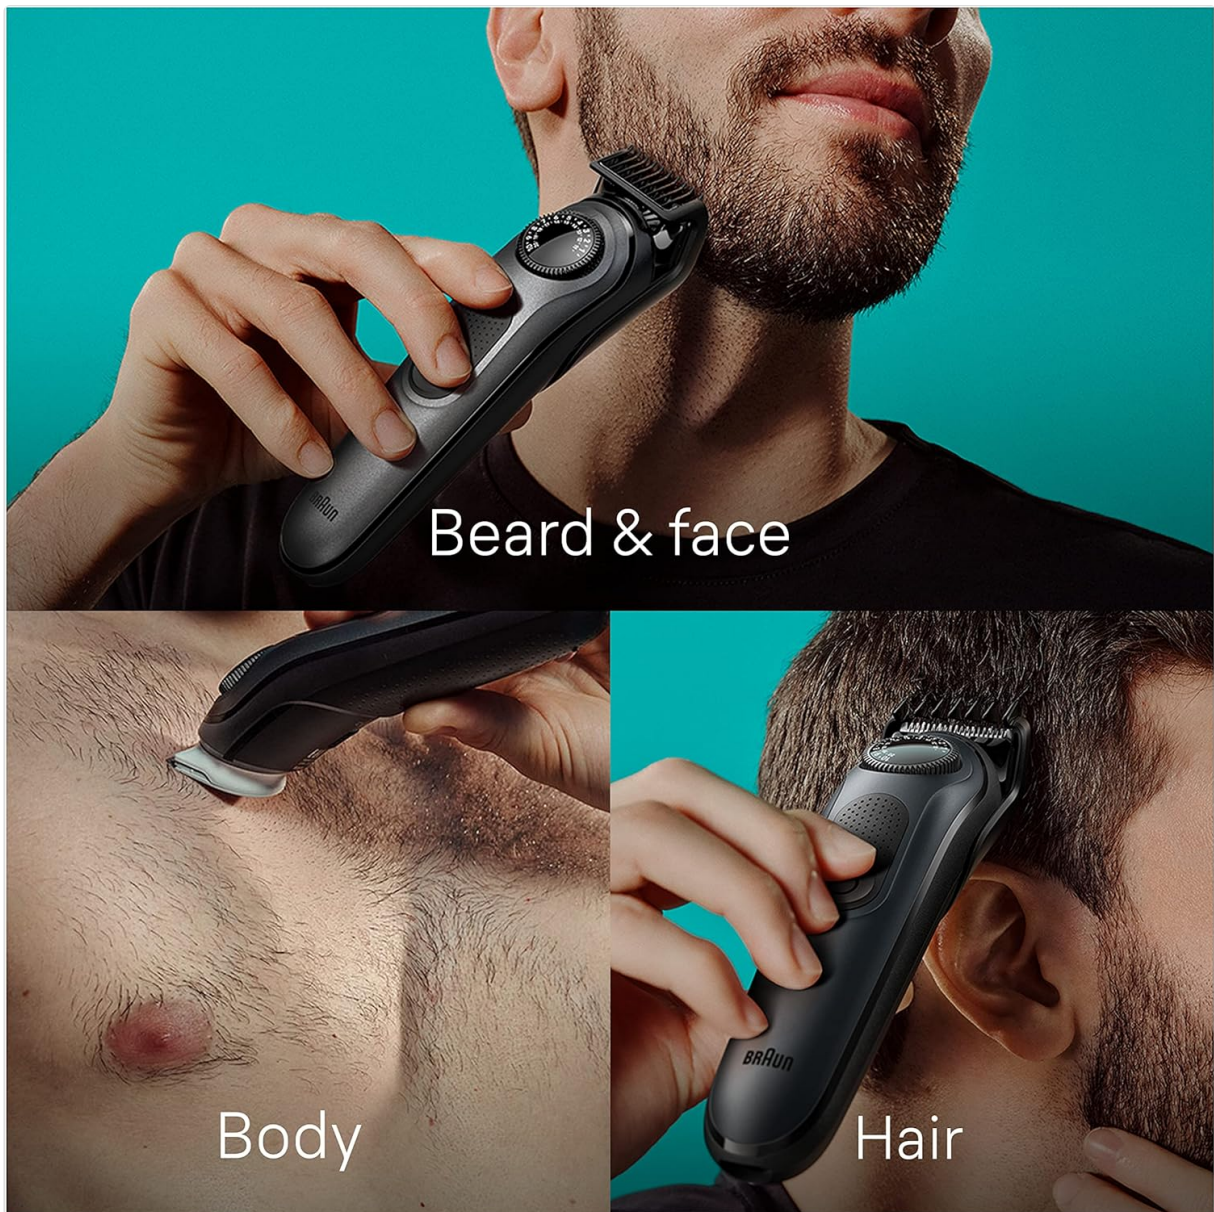


Image: Demonstrates the Braun All-in-One Style Kit Series 5 5471 in use for various grooming tasks: trimming a beard, body hair, and head hair.

### **Wet & Dry Use**

The Braun All-in-One Style Kit Series 5 5471 is 100% waterproof, allowing for convenient wet or dry use. This also facilitates easy cleaning under running water.



# 100% waterproof



Image: The Braun All-in-One Style Kit Series 5 5471 being held under running water, illustrating its 100% waterproof design for easy cleaning.

## MAINTENANCE

---

### Cleaning

After each use, switch off the trimmer and remove the attachment. Rinse the trimmer head and the main unit under running water. Use the included cleaning brush to remove any stubborn hair particles. Ensure the device is completely dry before storing or recharging.

### Storage

Store the trimmer and its attachments in the provided travel pouch or zipper pouch to keep them organized and protected from damage.

## TROUBLESHOOTING

---

- **Trimmer not turning on:** Ensure the device is fully charged. If the battery is depleted, connect it to the charger.
- **Trimmer pulling hair:** This may indicate a dull blade or that the attachment is clogged with hair.

Clean the attachment and blades thoroughly. If the issue persists, consider replacing the blade head.

- **Reduced performance:** A low battery charge can affect performance. Recharge the device. Ensure attachments are clean and properly seated.

## SPECIFICATIONS

Feature	Specification
Model Number	AIO5471
Power Source	Battery Powered (NiMH)
Cordless Runtime	Up to 80 minutes
Length Settings	40 (in 0.5 mm / 0.02 inch steps)
Waterproof	100% Waterproof
Item Weight	550 Grams (1.21 Pounds)
Product Dimensions	6.3 x 2.91 x 11.26 inches
Manufacturer	Procter & Gamble

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Braun website. Keep your purchase receipt as proof of purchase for any warranty claims.