

## Gofunly HT-001

# Gofunly Kids Camera User Manual

Model: HT-001 | Brand: Gofunly

## 1. INTRODUCTION AND OVERVIEW

The Gofunly Kids Camera (Model HT-001) is designed for young explorers aged 3-8, offering a fun and interactive way to capture memories. This digital toy camera features a 2-inch IPS screen, a 20.0 MP HD lens, and 1080P video recording capabilities. It comes equipped with various creative features like 8x digital zoom, 28 frames, and 6 filters to enhance the picture-taking experience. Beyond photography, the camera includes three built-in puzzle games and supports music playback, providing entertainment on the go. Its durable, shockproof silicone case ensures longevity, making it an ideal gift for birthdays and holidays.



Image: The Gofunly Kids Camera in pink with a unicorn design, highlighting its compact size and screen.

## 2. WHAT'S IN THE Box

Your Gofunly Kids Camera package includes the following items:

- Gofunly Kids Camera (Model HT-001)
- 32GB High-speed Memory Card
- USB Charging Data Cable
- Card Reader
- Lanyard (Neck Strap)
- Soft Cartoon Themed Silicone Shell (Unicorn design)



Image: All components included in the Gofunly Kids Camera package.

### 3. SETUP

#### 3.1 Charging the Camera

The camera has a built-in 1000 mAh rechargeable Li-ion battery. Before first use, fully charge the camera using the provided USB charging data cable. Connect the small end of the USB cable to the camera's charging port (typically located on the side or bottom) and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.



Image: Illustrates how to connect the USB charging cable to the camera.

### 3.2 Inserting the Memory Card

Locate the memory card slot on the side of the camera. Gently insert the included 32GB high-speed memory card into the slot until it clicks into place. Ensure the card is inserted in the correct orientation as indicated by a small icon near the slot. The camera supports up to 32GB memory cards, capable of storing over 4000 HD photos.



Image: Illustrates how to insert the memory card into the camera.

### 3.3 Attaching the Lanyard

Attach the provided lanyard to the designated loops on the camera. This allows children to wear the camera around their neck, preventing accidental drops and making it easy to carry during adventures.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

Press and hold the power button (usually marked with a power symbol) to turn the camera on or off. The 2-inch IPS screen will light up upon successful power-on.

### 4.2 Taking Photos

Navigate to the camera mode using the directional buttons. Press the shutter button to capture a 20.0 MP HD photo. Experiment with the 28 built-in frames and 6 color filter effects to add creativity to your pictures.



## 6 Color Filter Effects



## 28 Funny Frames



Image: Examples of photo frames and color filters available on the camera.

### 4.3 Recording Videos

Switch to video recording mode. Press the record button to start and stop 1080P HD video capture. The camera supports continuous shooting at 30 frames per second.



**Selfie Supported**

**Time Lapse**

**8X Zoom**

Image: Demonstrates 1080P HD video recording, selfie support, time-lapse, and 8x digital zoom features.

#### 4.4 Selfie Function and Digital Zoom

The camera features a dual lens design, allowing for easy selfies. Utilize the 8x digital zoom to get closer to your subjects, enhancing your photographic range.

#### 4.5 Time-Lapse Photography

Explore the time-lapse feature to capture sequences of events over time. This setting allows the camera to automatically take photos at set intervals (e.g., 2s, 5s, 10s) to create dynamic visual stories.

#### 4.6 Built-in Games and Music

The camera includes three pre-installed puzzle games: Pushing Boxes, Greedy Snakes, and Tetris, offering engaging entertainment. Parents can also download music files onto the camera's memory card for children to listen to.



Image: The camera's interface displaying one of the built-in puzzle games and music functionality.

## 5. MAINTENANCE

### 5.1 Cleaning the Camera

Use a soft, dry cloth to clean the camera body and screen. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials, as they may damage the camera's surface or screen.

### 5.2 Protecting the Camera

The camera comes with a soft cartoon-themed silicone shell designed to protect it from accidental drops and impacts. Always ensure the silicone case is properly fitted to provide maximum protection. Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.

# Shockproof Material



Easy to Carry

Image: The camera's shockproof silicone material, emphasizing its durability.

## 6. TROUBLESHOOTING

### 6.1 Camera Not Turning On

- Ensure the battery is fully charged. Connect the camera to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- Press and hold the power button for a few seconds.

### 6.2 Unable to Take Photos/Videos

- Check if the memory card is inserted correctly and securely.
- Verify that there is sufficient space on the memory card. If full, transfer files to a computer using the

provided card reader and delete them from the camera.

- Ensure the camera is in the correct mode (photo or video).

### 6.3 Poor Image/Video Quality

- Ensure the lens is clean and free from smudges.
- Check lighting conditions. The camera performs best in well-lit environments.

## 7. SPECIFICATIONS

Feature	Description
Model Name	HT-001
Brand	Gofunly
Maximum Webcam Image Resolution	20 MP
Video Resolution	1080p
Screen Size	2 Inches (IPS Screen)
Digital Zoom	8x
Battery Type	Built-in rechargeable 1000 mAh Li-ion battery
Battery Average Life	2-4 hours (single full charge)
External Memory Size	32 GB (included)
Supported File Format	JPEG (Images), MP4 (Videos)
Connectivity Technology	USB
Special Features	Selfie support, Time-lapse, 3 Puzzle Games, Music Playback, 28 Frames, 6 Filters
Color	Pink White-Unicorn
Water Resistance Level	Not Water Resistant

## 8. WARRANTY AND SUPPORT

No specific warranty information is provided with this product. For any questions, technical assistance, or support, please visit the official Gofunly Store on Amazon or contact their customer service.

**Gofunly Store:** [Visit Store](#)