

Arebos AR-HE-IH700WT

Arebos Infrared Heater with Wi-Fi & Thermostat (700 W)

MODEL: AR-HE-IH700WT

1. Important Safety Information

Please read all safety instructions carefully before installing and operating this infrared heater. Retain this manual for future reference.

- This appliance is for indoor use only.
- Ensure the power supply voltage matches the rating label on the heater (220 Volts).
- Do not cover the heater. Covering the heater can lead to overheating and fire.
- Keep flammable materials (curtains, furniture, etc.) at a safe distance from the heater.
- Do not operate the heater with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This heater is equipped with **overheating protection**. If the heater overheats, it will automatically shut off. Unplug the heater and allow it to cool before attempting to restart.
- The product is **TÜV and GS certified**, indicating compliance with safety standards.
- Do not insert any objects into the heater openings.
- Unplug the heater when not in use or before cleaning.

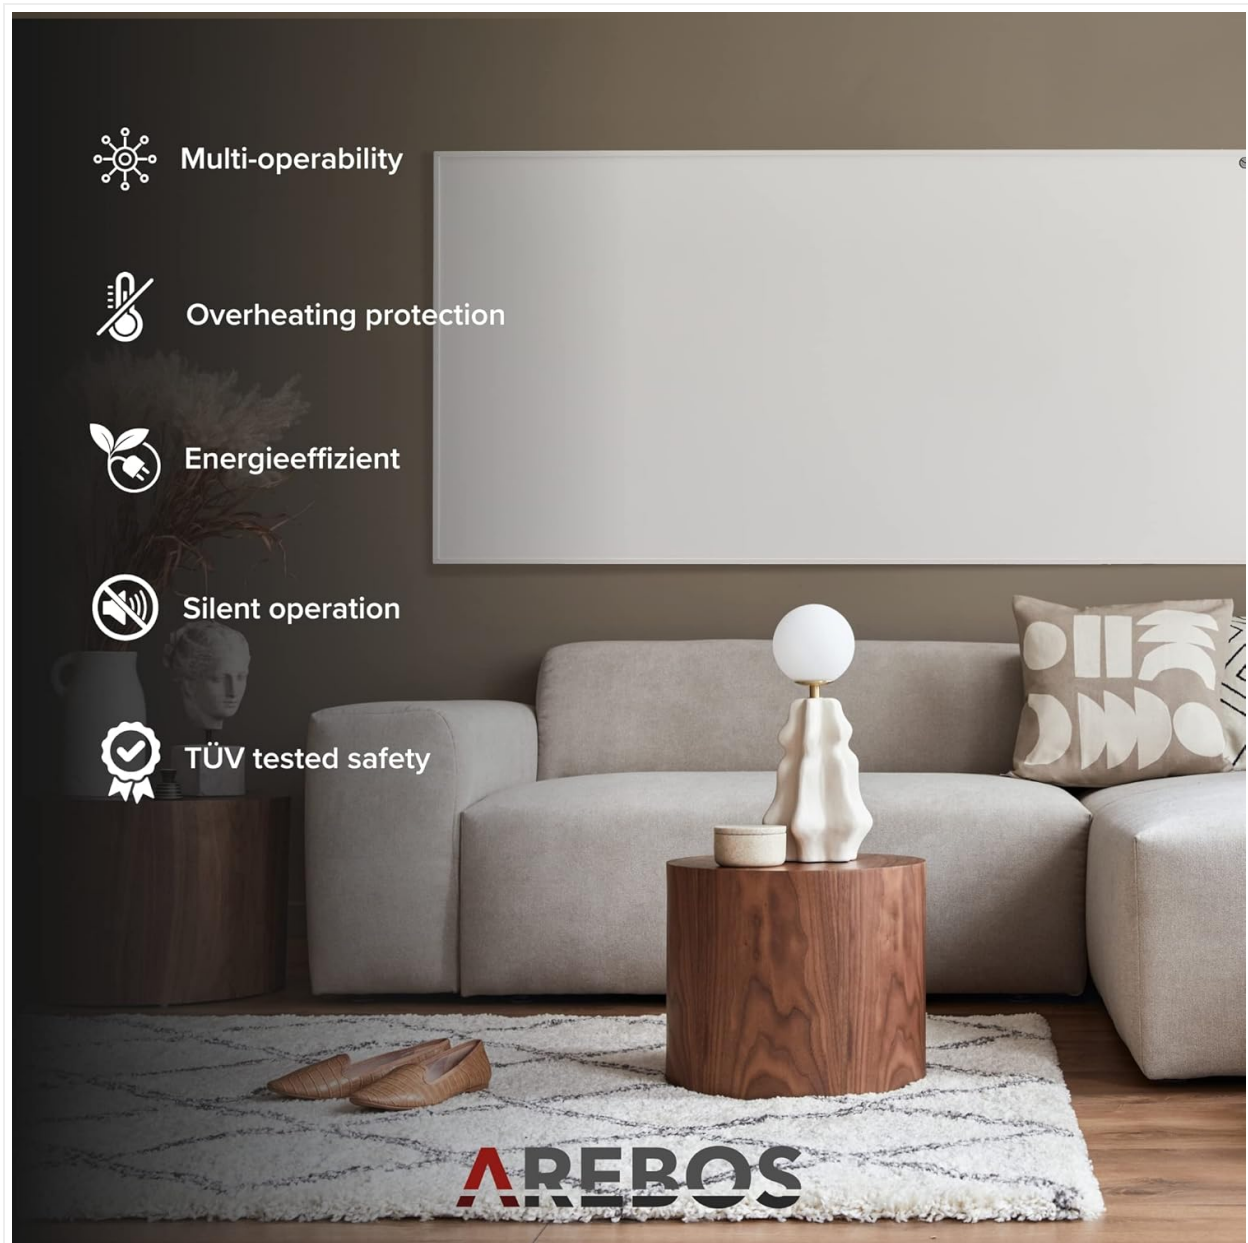 


Image: The Arebos infrared heater installed in a modern living room, illustrating its key features including multi-operability, overheating protection, energy efficiency, silent operation, and TÜV tested safety.

2. Product Features

The Arebos Infrared Heater offers efficient and comfortable heating with advanced control options.

- **Infrared Heating:** Provides a pleasant, condensation-free, and odorless warmth by directly heating objects and surfaces in the room.
- **Smart Control:** Equipped with Wi-Fi and app functionality, allowing you to control the heater's temperature and settings remotely via your mobile phone.
- **Remote Control:** An included remote control provides convenient manual operation.
- **Programmable Timer:** Features an adjustable power-on function, enabling you to schedule heating times (date and time) for preheating your space.
- **Energy Efficiency:** An integrated temperature sensor regulates heat output. The heating element switches off automatically once the target temperature is reached, conserving energy.
- **Versatile Placement:** Suitable for various indoor spaces such as kitchens, studies, living rooms, and bathrooms. Connects to a standard household socket.
- **Slim Design:** The heater features an extra-slim profile for discreet integration into any room.

- **Window Open Detection:** Automatically detects open windows and adjusts heating to prevent energy waste.

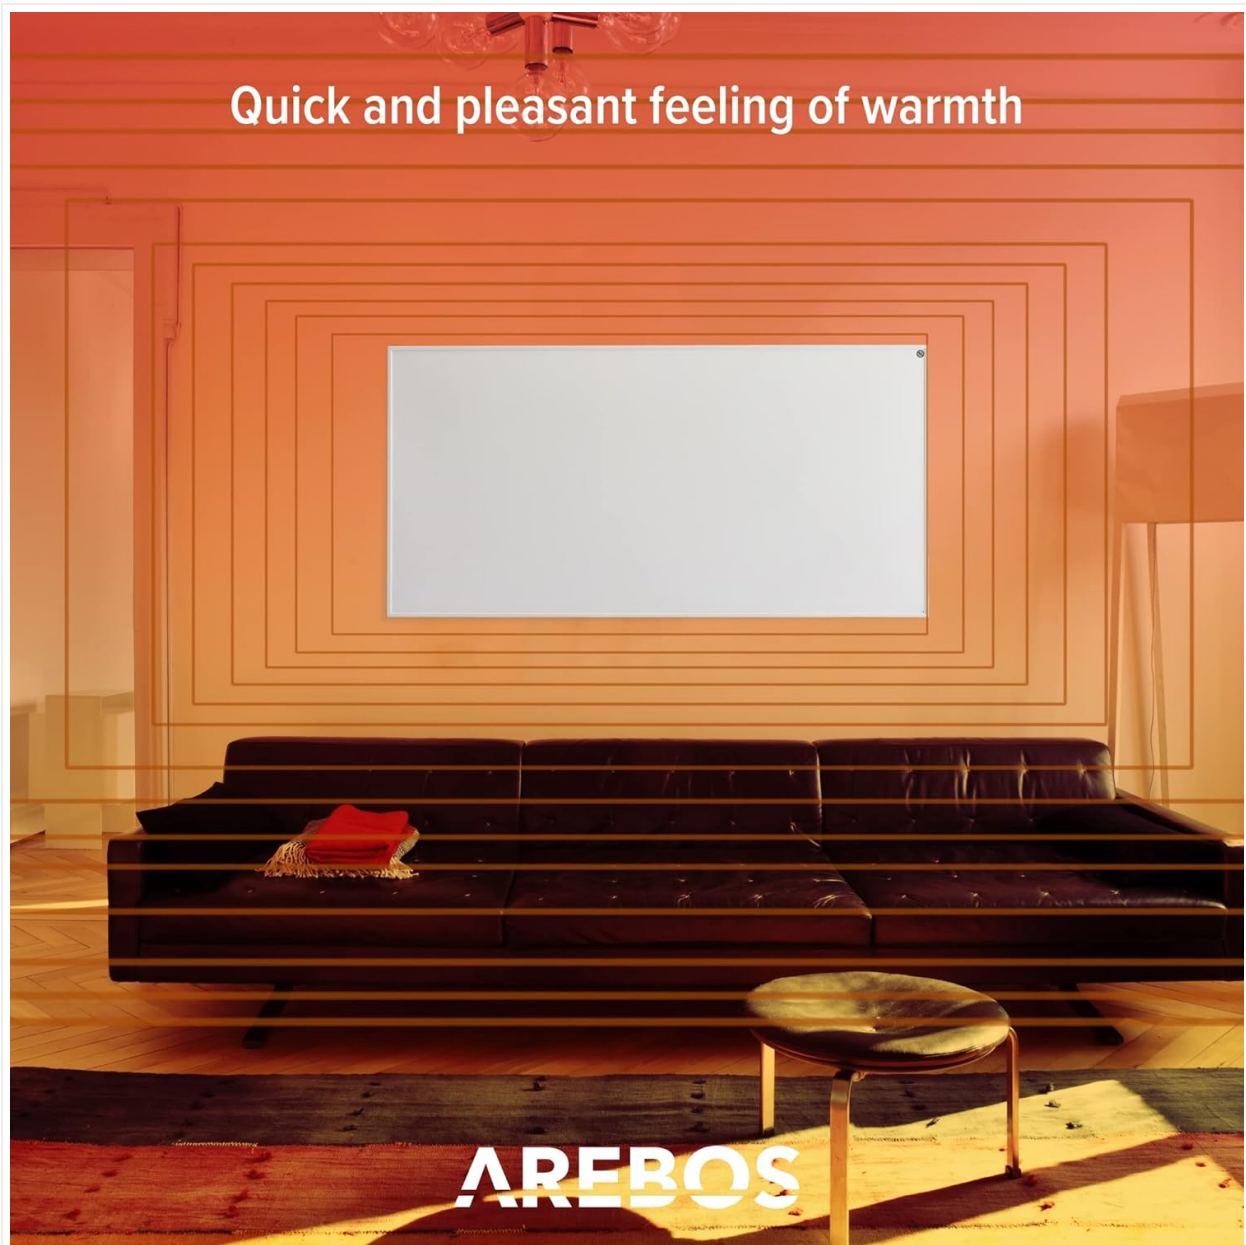 


Image: The Arebos infrared heater installed in a living room, demonstrating its ability to provide a quick and pleasant feeling of warmth.

3. Setup and Installation

The Arebos infrared heater is designed for wall mounting. Optional feet can be purchased separately for free-standing use.

3.1 Wall Mounting

1. Unpack the heater and all accessories, including the mounting material.
2. Choose a suitable location on a wall, ensuring sufficient clearance from flammable materials and a power outlet.
3. Mark the drilling points on the wall using the provided template or by measuring the mounting brackets on the back of the heater.
4. Drill holes and insert wall plugs.
5. Secure the mounting brackets to the wall using the screws.

6. Carefully hang the infrared heater onto the mounted brackets, ensuring it is securely seated.
7. Plug the heater into a standard 220V household socket.

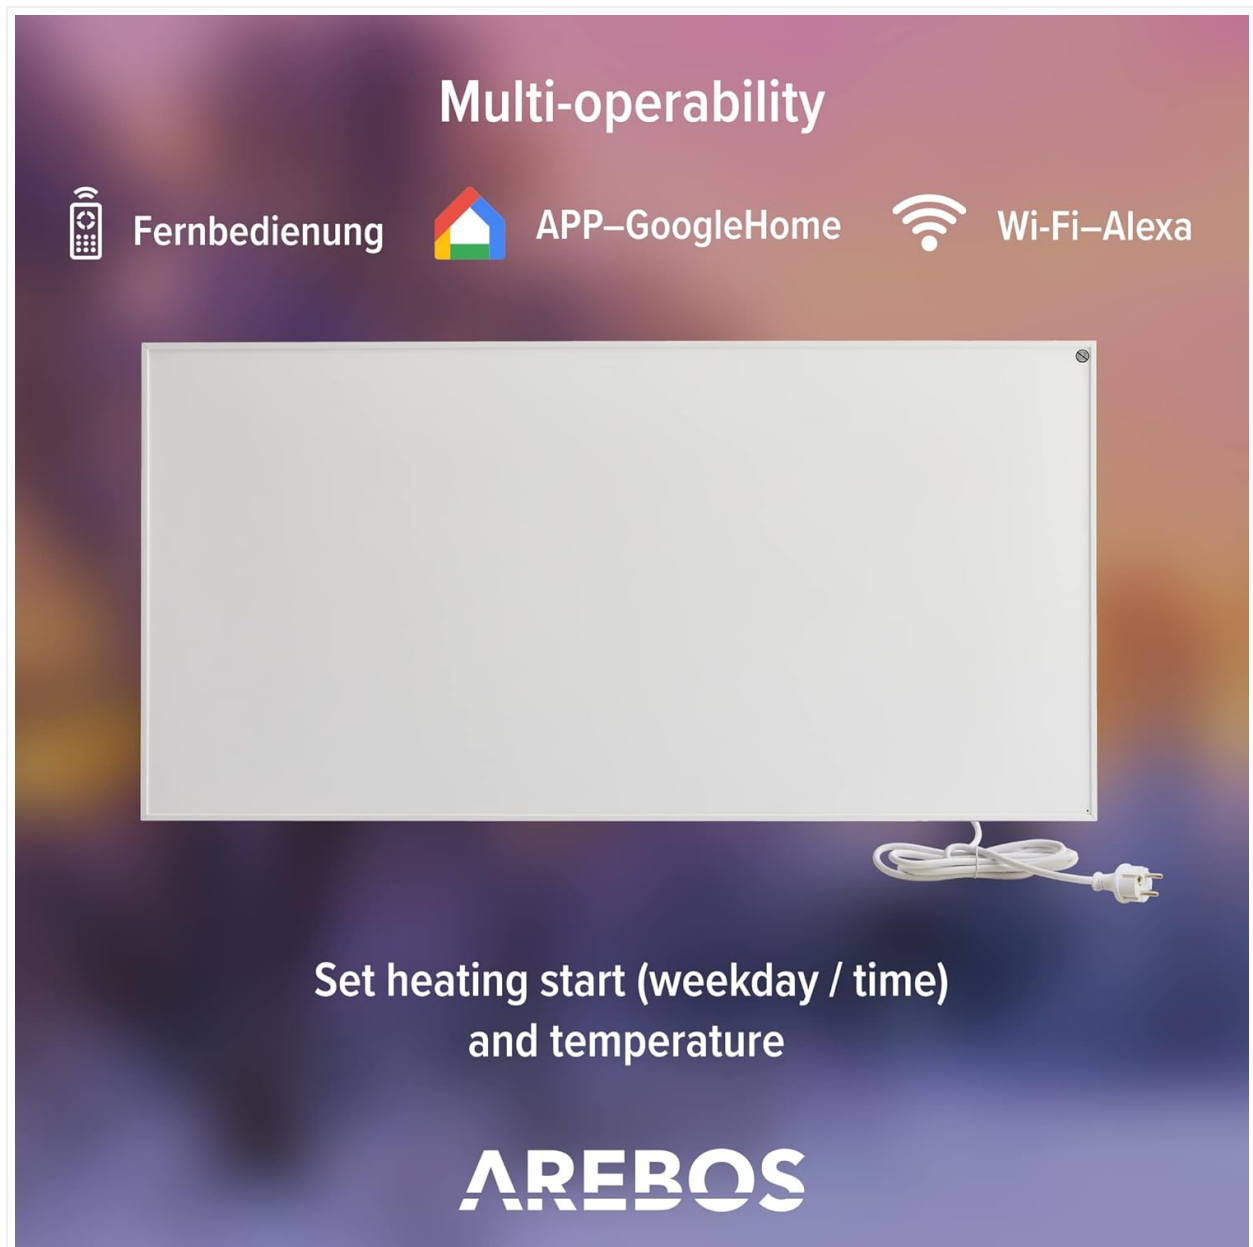 


Image: The back of the Arebos infrared heater, displaying the mounting brackets and the included wall plugs and screws for installation.

3.2 Free-Standing Option (Optional)

If you wish to use the heater as a free-standing unit, separate feet must be purchased. Follow the instructions provided with the optional feet for attachment.

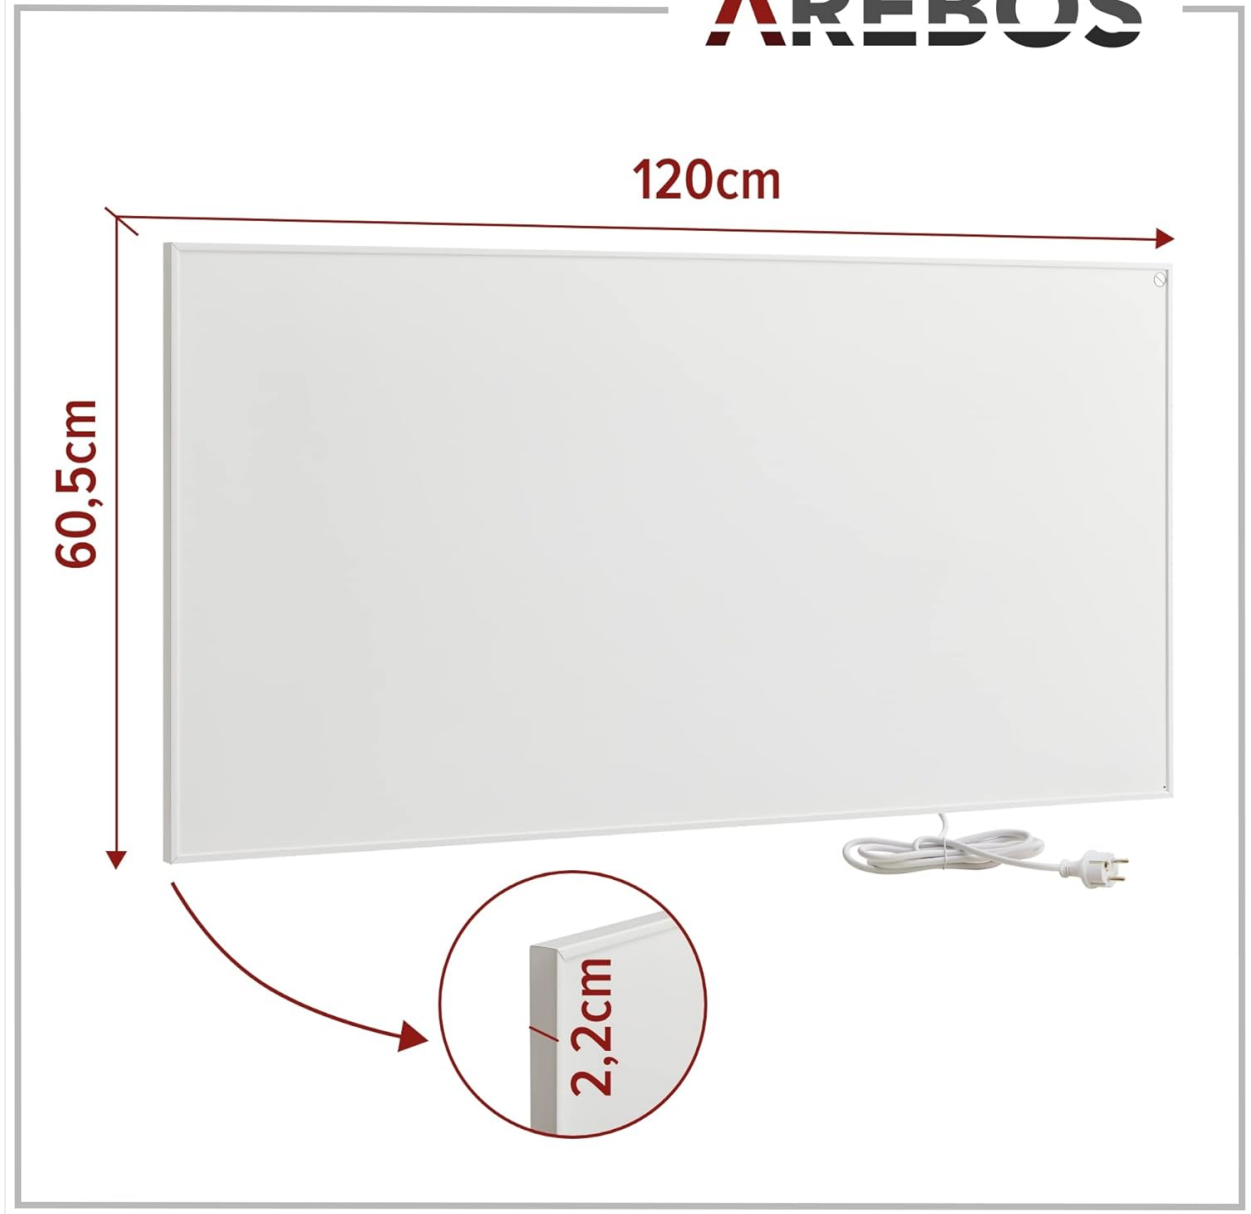 


Image: A visual comparison of the Arebos infrared heater in both wall-mounted and free-standing configurations, highlighting the optional feet for flexible use.

4. Operating Instructions

The Arebos infrared heater can be operated via its integrated controls, the included remote control, or a dedicated mobile application.

4.1 Initial Power On

After plugging in the heater, it will enter standby mode. Use the power button on the heater, remote, or app to turn it on.

4.2 Using the Remote Control

The remote control allows you to:

- Turn the heater on/off.
- Adjust the target temperature.
- Set the timer for scheduled operation.
- Switch between operating modes (if applicable).

4.3 Wi-Fi and App Control

To utilize the smart features, download the official Arebos app (or compatible smart home app) to your mobile device. Follow the in-app instructions to connect your heater to your home Wi-Fi network.

Once connected, the app allows for:

- Remote power on/off.
- Precise temperature setting.
- Creating heating schedules and timers.
- Monitoring current room temperature.
- Integration with smart home systems like Google Home or Alexa.



Image: The Arebos infrared heater shown with its remote control and a smartphone demonstrating the mobile application for smart control.

Versatile use



AREBOS

Image: The Arebos infrared heater emphasizing its multi-operability through remote control, Google Home app, and Wi-Fi Alexa compatibility, allowing users to set heating schedules and temperatures.

4.4 Temperature Control

Set your desired room temperature using the remote or app. The heater's internal thermostat will automatically adjust its operation to maintain this temperature, turning off when the target is reached and resuming when the temperature drops.

5. Maintenance

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Before cleaning, always unplug the heater and allow it to cool completely. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** If storing the heater for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging.
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If damage is found, do not use the heater and contact customer support.

6. Troubleshooting

If you encounter issues with your Arebos infrared heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, power switch off, overheating protection activated.	Check power outlet, ensure plug is fully inserted. Turn on power switch. Unplug and allow to cool for 30 minutes if overheating protection is suspected.
Heater not heating effectively.	Temperature setting too low, room too large, window open.	Increase target temperature. Ensure heater is appropriately sized for the room. Close windows and doors.
Remote control not working.	Dead batteries, obstruction, out of range.	Replace batteries. Remove obstructions between remote and heater. Move closer to the heater.
Wi-Fi/App connectivity issues.	Incorrect Wi-Fi password, weak signal, router issues, app not updated.	Verify Wi-Fi password. Ensure heater is within Wi-Fi range. Restart router. Update the app to the latest version. Re-pair the device if necessary.

If the problem persists after attempting these solutions, please contact Arebos customer support.

7. Specifications

Feature	Detail
Brand	Arebos
Model Number	AR-HE-IH700WT
Power Output	700 W
Voltage	220 Volts
Product Dimensions (L x W x H)	120 cm x 60.5 cm x 2.2 cm
Weight	7.4 kg
Special Features	Wi-Fi-enabled, Thermostat, Timer, Overheating Protection
Heating Method	Radiant (Infrared)
Mounting Type	Wall Mount (Optional free-standing feet available)
Indoor/Outdoor Usage	Indoor

Flexible use



Image: A diagram illustrating the physical dimensions of the Arebos infrared heater, including its length, width, and slim profile.

8. Warranty and Support

For information regarding warranty coverage, technical support, or spare parts, please refer to the documentation included with your purchase or visit the official Arebos website. You may also contact the retailer where the product was purchased.