

[manuals.plus](#) /› [Smeg](#) /› [Smeg 50's Retro Style Drip Coffee Machine \(Model DCF02GRUS\) Instruction Manual](#)

Smeg DCF02GRUS

Smeg 50's Retro Style Drip Coffee Machine

MODEL: DCF02GRUS

Brand: Smeg

Introduction

This manual provides essential information for the safe and efficient operation of your Smeg 50's Retro Style Drip Coffee Machine. Please read these instructions thoroughly before first use and keep them for future reference.

The Smeg 50's Retro Style Drip Coffee Machine combines classic design with modern functionality, offering a delightful coffee experience. It features a 10-cup capacity, 1-4 cup function, auto-start mode, and a keep-warm plate.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not place a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- Scalding may occur if the lid is removed during the brewing cycles.

Parts Overview

Familiarize yourself with the main components of your coffee machine:

- **Water Reservoir:** Located at the back, with a visible water level indicator on the side.
- **Filter Basket:** Houses the reusable coffee filter or disposable paper filters. Accessible by lifting the top lid.
- **Glass Carafe:** 10-cup capacity carafe with a lid for easy pouring.
- **Control Panel:** Features an LED display for time and settings, along with buttons for On/Off, Delay Brew, Strength, Program, Hour, and Minute.
- **Keep Warm Plate:** Maintains coffee temperature after brewing.



Figure 1: Front view of the Smeg Drip Coffee Machine.



Figure 2: Side view showing the water level indicator.



Figure 3: Top lid open, showing the filter basket for coffee grounds.

Setup

- 1. Unpacking:** Carefully remove all packaging materials and ensure all parts are present.
- 2. Initial Cleaning:** Before first use, wash the glass carafe, carafe lid, and reusable coffee filter in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee machine with a damp cloth.
- 3. Placement:** Place the coffee machine on a flat, stable, heat-resistant surface, away from the edge of the counter.
- 4. Power Connection:** Plug the power cord into a grounded electrical outlet.
- 5. Setting the Clock:** Use the 'Hour' and 'Minute' buttons on the LED control panel to set the current time.

Operating Instructions

Brewing Coffee

- 1. Fill Water Reservoir:** Open the top lid and pour fresh, cold water into the water reservoir. Use the water level indicator on the side to fill to your desired number of cups (up to 10 cups).
- 2. Add Coffee Grounds:** Place the reusable coffee filter into the filter basket. Add your desired amount of ground coffee. For optimal flavor, use approximately one tablespoon of coffee per cup. Close the top lid securely.
- 3. Place Carafe:** Ensure the glass carafe with its lid is correctly positioned on the keep-warm plate.
- 4. Select Aroma Intensity:** Press the 'Strength' button to choose between 'Delicate' (default) or 'Intense' aroma settings.
- 5. Start Brewing:** Press the 'On/Off' button to begin the brewing cycle. The machine will beep to confirm.
- 6. Serving:** Once brewing is complete, the machine will beep again. The coffee will be kept warm on the hot plate for up to 60 minutes. Carefully remove the carafe to pour.

1-4 Cup Brewing Function

For smaller quantities of coffee (1-4 cups), press the '1-4 Cup' button before starting the brew cycle. This optimizes the brewing process for smaller volumes, ensuring full flavor.

Auto-Start Mode (Programmable Brewing)

1. Prepare the coffee machine as described in 'Brewing Coffee' (water, coffee grounds, carafe in place).
2. Press the 'Program' button. The display will show 'Program Time'.
3. Use the 'Hour' and 'Minute' buttons to set your desired start time for brewing.

4. Press the 'Program' button again to confirm. The 'Auto-Start' indicator will light up.
5. The machine will automatically start brewing at the set time.

Silent Mode

The machine offers a silent mode to turn off audible alerts. Refer to the full product manual for specific instructions on activating this feature.

Official Product Video: Smeg DCF02 Drip Coffee Maker Overview

Your browser does not support the video tag.

Video 1: An official overview of the Smeg DCF02 Drip Coffee Maker, demonstrating its features and operation.

Maintenance

Daily Cleaning

- **Carafe and Filter:** After each use, discard used coffee grounds and rinse the reusable filter and carafe. They can be hand-washed with mild detergent or placed in the dishwasher (top rack recommended for carafe).
- **Exterior:** Wipe the exterior of the coffee machine with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.

Descaling

Mineral deposits from water can build up over time, affecting performance. Descaling your coffee machine regularly (e.g., every 2-3 months, or more often with hard water) using a commercial descaling solution or a mixture of white vinegar and water (1:2 ratio). Follow the descaling solution's instructions or run several brew cycles with the vinegar solution, followed by several cycles with fresh water to rinse.

Troubleshooting

- **Coffee Not Brewing:** Ensure the machine is plugged in, the 'On/Off' button is pressed, and the water reservoir has sufficient water. Check if the carafe is correctly placed on the hot plate.
- **Weak Coffee:** Increase the amount of coffee grounds, select the 'Intense' aroma setting, or ensure the water reservoir is filled to the correct level for the desired number of cups.
- **Overflowing Filter Basket:** Do not overfill the filter basket with coffee grounds. Ensure the carafe is properly seated and the anti-drip system is not obstructed.
- **Coffee Not Hot Enough:** Ensure the machine has completed its brewing cycle and is on the keep-warm plate. The keep-warm function lasts for 60 minutes.

For more detailed troubleshooting, please refer to the complete product manual or contact Smeg customer support.

Specifications

Brand	Smeg
Model Name	SMEG Drip Coffee Maker (DCF02GRUS)
Color	Grey

Product Dimensions	10"D x 14"W x 10"H
Coffee Maker Type	Drip Coffee Machine
Capacity	10 Cups
Special Features	Auto Shut-Off, Timer, Aroma Control, 1-4 Cup Function, Keep Warm Plate (60 mins), Silent Mode
Operation Mode	Fully Automatic
Voltage	110 Volts
Coffee Input Type	Ground
Item Weight	7.5 pounds
Manufacturer	SMEG
Date First Available	November 30, 2022

Warranty and Support

For warranty information and customer support, please refer to the documentation included with your product at the time of purchase. You may also visit the official Smeg website or contact their customer service department for assistance.

© 2023 Smeg. All rights reserved.

Related Documents - DCF02GRUS

 NÁVOD Smeg DCF Retro Drip Coffee Maker User Manual	<p>Smeg DCF Retro Drip Coffee Maker User Manual</p> <p>Comprehensive user manual for the Smeg DCF drip coffee maker, featuring a 50s retro design. This guide covers setup, operation, cleaning, maintenance, safety instructions, and troubleshooting for optimal coffee preparation.</p>
 Smeg 50s Style Drip Coffee Machine User Manual	<p>Smeg 50s Style Drip Coffee Machine User Manual</p> <p>Comprehensive user manual for the Smeg 50s Style drip coffee machine, covering safety instructions, product description, operation, cleaning, maintenance, and troubleshooting. Learn how to brew perfect coffee with your Smeg appliance.</p>

	<p>Smeg TSF03 4-Slice Toaster: Instruction Manual</p> <p>User guide for the Smeg TSF03 4-slice toaster, detailing operation, safety features, cleaning instructions, and special functions for optimal toasting. Features retro '50s style design.</p>
	<p>Smeg ECF01WHUS Espresso Coffee Machine - Technical Specifications and Features</p> <p>Detailed specifications and features for the Smeg ECF01WHUS Espresso Manual Coffee Machine, including aesthetic details, technical features, controls, accessories, and electrical and logistic information.</p>
	<p>Smeg BCC02 Bean to Cup Coffee Machine User Manual</p> <p>Comprehensive user manual for the Smeg BCC02 Bean to Cup Coffee Machine. Find instructions on setup, operation, cleaning, maintenance, and troubleshooting for your Smeg coffee maker.</p>
	<p>Smeg DCF02 Drip Coffee Machine Instruction Manual</p> <p>Comprehensive instruction manual for the Smeg DCF02 Drip Coffee Machine. This guide covers safety precautions, appliance description, operation, cleaning, maintenance, descaling, and troubleshooting for optimal use.</p>