

[manuals.plus](#) /› [AGARO](#) /› [AGARO Grand Electric Goose Neck Kettle \(Model 33900\) - Instruction Manual](#)

## AGARO 33900

# AGARO Grand Electric Goose Neck Kettle (Model 33900)

## Instruction Manual

### 1. INTRODUCTION

The AGARO Grand Electric Goose Neck Kettle (Model 33900) is designed for precise water heating, ideal for pour-over coffee, tea, and other hot beverages. Featuring an 800ml capacity, adjustable temperature settings, and a keep-warm function, this kettle offers convenience and control for your daily hot drink preparation.

### 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the kettle is placed on a stable, flat, heat-resistant surface away from the edge of the countertop.
- Do not operate the kettle if the power cord or plug is damaged, or if the kettle malfunctions or has been damaged in any manner.
- Always ensure the lid is securely closed during operation to prevent scalding from hot steam or water.
- Do not overfill the kettle beyond the maximum fill line (800ml) to prevent boiling water from ejecting, which can cause burns.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- This appliance is for household use only.

### 3. PRODUCT COMPONENTS

- Kettle Body (304 Stainless Steel with black coating)
- Goose Neck Spout
- Lid with Air Vent

- Cool-Touch Grip Handle
- Power Base with LED Display and Control Buttons
- Power Cord

## 4. SETUP

1. Unpack the kettle and all its components. Remove any packaging materials.
2. Place the power base on a dry, flat, and stable surface.
3. Before first use, fill the kettle with clean water up to the maximum fill line. Boil the water, then discard it. Repeat this process 2-3 times to clean the interior.
4. Ensure the power cord is securely plugged into a suitable electrical outlet (220-240V/~50 Hz).

## 5. OPERATING INSTRUCTIONS

### 5.1. Filling the Kettle

Remove the lid and fill the kettle with fresh water. Do not fill below the minimum mark or above the maximum 800ml line. Securely replace the lid.



Image: The kettle demonstrates its 800ml capacity, ideal for pour-over coffee preparation.

### 5.2. Placing on Power Base

Place the kettle firmly onto the 360° swivel power base. Ensure it is properly seated.

### 5.3. Adjustable Temperature Settings

1. Press the **ON/OFF** button to power on the kettle.
2. Press the **FUNCTION** button.
3. Use the '+' or '-' buttons to set your desired temperature between 45°C and 95°C. The LED display will show the selected temperature.

4. To boil water, set the temperature to 95°C. Once the kettle reaches 95°C, it will auto shut off. The residual heat will then raise the water temperature to 100°C for a full boil.



Image: The kettle's adjustable temperature control feature, showing the LED display and control buttons for setting temperatures between 45°C and 95°C.

#### 5.4. Keep Warm Function

After reaching the set temperature and auto-shut off, the kettle will automatically activate a reheating cycle to maintain the set temperature for 1 hour. After 1 hour, the product will switch off.

#### 5.5. Pouring

The gooseneck spout is designed for precise and even pouring, allowing for controlled water flow, especially beneficial for pour-over coffee methods.



Image: The kettle's goose neck spout provides precise and even pouring, demonstrated by pouring hot water into a cup.

## 6. MAINTENANCE AND CLEANING

---

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle and power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the kettle or power base in water.
- To clean the interior, rinse with water. For stubborn stains or mineral deposits (limescale), use a descaling solution suitable for electric kettles or a mixture of vinegar and water. Follow the descaling product instructions or boil the vinegar solution, let it sit, then rinse thoroughly.
- Ensure the kettle is completely dry before storing or next use.

## 7. TROUBLESHOOTING

---

- **Kettle does not turn on:** Ensure the power cord is securely plugged into a working outlet and the kettle is properly seated on the power base. Check if the ON/OFF button has been pressed.
- **Water not heating:** Verify that a temperature has been set and the kettle is powered on. Ensure the lid is closed.
- **Temperature display seems inaccurate:** The kettle heats water to the set temperature and then auto-shuts off. For a full boil (100°C), set the temperature to 95°C; the internal heat will complete the boiling process.
- **Water overflowing during boiling:** Do not overfill the kettle beyond the 800ml maximum fill line.

## 8. SPECIFICATIONS

---

Feature	Specification
Brand	AGARO
Model Number	33900
Capacity	0.8 litres (800ml)
Material	304 Stainless Steel, Plastic
Colour	Black
Wattage	1500 Watts
Voltage	220-240V/~50 Hz
Special Features	Automatic Shut-Off, Cordless, Portable, Adjustable Temperature, Keep Warm Function
Product Dimensions	20.6L x 19.5W x 15.7H Centimeters
Item Weight	850 Grams

## How to use

**Step 1: Pour water in the kettle.**

**Step 2: Place the kettle on oven or induction.**

**Step 3: Press ON/OFF Button.**

**Step 4: Press FUNCTION Button.**

**Step 5: Pour the hot water on ground coffee.**



Image: The kettle features a durable stainless steel body with a black coating and an easy-grip handle.

## 9. WARRANTY AND SUPPORT

The AGARO Grand Electric Goose Neck Kettle comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For any product-related inquiries, technical support, or warranty claims, please contact AGARO customer service through their official channels. Refer to the product packaging or AGARO's official website for contact information.