

Smoby 740416

Smoby Be Fun Comfort Tricycle User Manual

Model: 740416

INTRODUCTION

Thank you for choosing the Smoby Be Fun Comfort Tricycle. This manual provides essential information for the safe assembly, operation, and maintenance of your tricycle. Please read it thoroughly before use and retain it for future reference.

The Smoby Be Fun Comfort Tricycle is designed to evolve with your child, offering 3-in-1 functionality from 10 months to over 3 years, supporting their motor skill development and confidence.

SAFETY INFORMATION

WARNING: Minimum age for use is 15 months. Adult supervision is required at all times.

- Ensure all parts are securely fastened before each use.
- Always use the safety belt and safety bar when the child is young and unable to ride independently.
- Do not use near stairs, hills, roadways, or swimming pools.
- The tricycle is designed for one child only.
- Regularly inspect the tricycle for wear and tear, especially wheels, pedals, and safety mechanisms.
- Keep small parts away from children under 3 years of age to prevent choking hazards.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly.

- Tricycle Frame
- Parental Cane (handle)
- Seat with Safety Belt
- Safety Bar
- Footrests
- Wheels (Front and Rear)
- Pedals
- Removable Bag
- Bucket
- Assembly Hardware (screws, nuts, etc.)

- Instruction Manual (this document)



Image: The product packaging box, showing the Smoby Be Fun Comfort Tricycle and its key features.

SETUP AND ASSEMBLY

Assembly should be performed by an adult. Refer to the included diagrams for visual guidance.

1. **Attach Rear Wheels:** Securely fasten the rear wheels to the axle using the provided hardware. Ensure they rotate freely but

have no excessive wobble.

2. **Install Front Wheel and Fork:** Insert the front wheel into the fork, then attach the fork assembly to the main tricycle frame.
3. **Mount Handlebars:** Slide the handlebars onto the steering column and tighten the locking mechanism.
4. **Attach Seat:** Position the seat onto the frame and secure it. Ensure the safety belt is properly attached.
5. **Install Safety Bar and Footrests:** If using for younger children, attach the safety bar around the seat and deploy the foldable footrests.
6. **Attach Parental Cane:** Insert the parental cane into the designated slot at the rear of the tricycle. Adjust its height to a comfortable position (3 positions available) and secure it.
7. **Attach Bag and Bucket:** Hook the removable bag onto the parental cane and place the bucket in its designated holder at the rear.
8. **Final Check:** Before first use, double-check all screws, bolts, and connections to ensure they are tight and secure.



Image: Fully assembled Smoby Be Fun Comfort Tricycle in its initial configuration with parental handle and storage bag.



Image: Close-up of the Smoby Be Fun Comfort Tricycle showing the safety bar and seat belt for younger riders.

OPERATING INSTRUCTIONS

Evolutionary 3-in-1 Modes:

The Be Fun Comfort Tricycle adapts to your child's growth and development.

1. Mode 1: Parental Control (Approx. 10-15 months):

- Use with the parental cane, safety bar, and footrests deployed.
- The child is secured by the safety belt and safety bar.
- Engage the freewheeling device on the front wheel so pedals do not rotate with the wheel, allowing the child to rest their feet or practice pedaling without controlling speed.
- The parental cane allows the adult to steer and push the tricycle.



Image: An adult pushing a young child in the tricycle, demonstrating the parental control mode.

2. Mode 2: Assisted Riding (Approx. 15-30 months):

- Remove the safety bar. The child can now use the handlebars for steering practice.
- Keep the parental cane attached for adult assistance and control.
- The footrests can be folded up if the child starts to reach the pedals, but the freewheeling device should remain engaged until the child is ready to pedal independently.





Image: An adult pushing a child in the tricycle, with the child holding the handlebars, illustrating the assisted riding mode.

3. Mode 3: Independent Tricycle (Approx. 30+ months):

- Remove the parental cane and fold up the footrests.
- Disengage the freewheeling device to allow the child to pedal and steer independently.
- Ensure the child is confident in pedaling and steering before allowing independent use.



Image: A child riding the tricycle independently, demonstrating the full tricycle mode.

Adjustments:

- **Parental Cane Height:** The parental cane is height-adjustable with 3 positions for adult comfort. Locate the adjustment mechanism on the cane and secure it at the desired height.
- **Seat Position:** The seat is adjustable in 2 positions to accommodate your child's leg length as they grow. Adjust the seat forward or backward as needed.

- **Handlebar Locking Device:** Use the handlebar locking device to fix the handlebars in a straight position for parental control, or unlock for child steering.

MAINTENANCE

- **Cleaning:** Clean the tricycle with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Lubrication:** Periodically apply a small amount of lubricant to moving parts such as wheel axles and pedal mechanisms to ensure smooth operation.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prevent material degradation. The parental rod can be removed for compact storage.
- **Inspection:** Regularly check all nuts, bolts, and fasteners to ensure they are tight. Inspect wheels, tires, and pedals for wear or damage. Replace any worn or damaged parts immediately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tricycle difficult to steer or push.	Loose handlebars; dirty or unlubricated wheels/axles.	Tighten handlebar connection. Clean and lubricate wheel axles.
Pedals not turning or turning with difficulty.	Freewheeling device engaged incorrectly; debris in pedal mechanism.	Check freewheeling device setting. Clean any debris from pedal area. Lubricate pedal mechanism.
Unstable or wobbly ride.	Loose wheel connections; loose frame components.	Check and tighten all wheel nuts and frame screws.
Loud noise from wheels (as reported in reviews).	Wheels are made of plastic, which can be noisy on hard surfaces.	This is a characteristic of the product's design. Consider using on smoother surfaces or indoors if noise is a concern.

SPECIFICATIONS

- **Model Number:** 740416
- **Brand:** Smoby
- **Manufacturer:** Smoby Toys
- **Product Dimensions (L x W x H):** 26.77 x 20.47 x 39.76 inches (68 x 52 x 101 cm)
- **Item Weight:** 8.8 pounds (4 kg)
- **Recommended Age:** 15 months - 4 years
- **Material:** Metal frame, plastic components
- **Country of Manufacture:** Spain

WARRANTY AND SUPPORT

The Smoby Be Fun Comfort Tricycle comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or replacement parts, please contact Smoby customer service. Refer to the contact information provided on the product packaging or the official Smoby website.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question