

Smoby 710131

Smoby Farmer XL Black Pedal Tractor with Trailer - Instruction Manual

Model: 710131

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your Smoby Farmer XL Black Pedal Tractor with Trailer. Please read this manual thoroughly before assembly and use to ensure safe and correct operation. Keep this manual for future reference.

SAFETY INFORMATION

WARNING: Not suitable for children under 3 years. Minimum age 36 months. Choking hazard due to small parts.

- Adult assembly required.
- Always supervise children during use.
- Do not use on public roads, near motor vehicles, or on steep inclines.
- Ensure all parts are securely fastened before each use.
- The trailer is designed for transporting toys only. Do not allow children to ride in the trailer to prevent tipping or injury.
- Wear appropriate protective gear, such as a helmet, when operating the tractor.

WHAT'S IN THE BOX

Carefully unpack all components and verify that all items are present:

- 1 x Smoby Farmer XL Pedal Tractor
- 1 x Detachable Trailer
- Assembly Hardware (screws, nuts, washers)
- Instruction Manual

If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

ASSEMBLY INSTRUCTIONS

Adult assembly is required. Please follow these steps carefully. You will need a screwdriver and possibly a wrench (not included).

1. **Attach the Front Axle:** Secure the front axle to the tractor body using the provided hardware. Ensure wheels are properly aligned.
2. **Install the Steering Wheel:** Insert the steering column into the designated opening and attach the steering wheel. Ensure the horn mechanism is functional.
3. **Assemble the Pedals and Chain Drive:** Connect the pedals to the crank mechanism. Route the chain around the sprockets and adjust tension as needed. The chain is adjustable for different leg lengths.
4. **Attach the Seat:** Secure the adjustable seat to the tractor frame. Adjust the seat position to suit the child's height for comfortable pedaling.
5. **Assemble the Trailer:** Attach the wheels to the trailer body. Connect the trailer hitch to the rear of the tractor. The trailer is designed to be detachable.
6. **Final Check:** Before first use, inspect all connections to ensure they are tight and secure. Verify that the steering, pedals, and horn function correctly.



Image: Fully assembled Smoby Farmer XL Black Pedal Tractor with its detachable trailer.

OPERATING INSTRUCTIONS

The Smoby Farmer XL Pedal Tractor is designed for children aged 36 months to 6 years.

1. **Getting Started:** Ensure the child is seated comfortably with their feet reaching the pedals. Adjust the seat if necessary.
2. **Pedaling:** Instruct the child to push the pedals in a circular motion to move the tractor forward.
3. **Steering:** The steering wheel controls the direction of the front wheels. Teach the child to turn the wheel left to go left and right to go right.
4. **Horn:** The steering wheel includes a functional horn. Press the center of the steering wheel to activate the horn.

5. **Opening Hood:** A small panel on the front of the tractor can be opened, simulating engine access for imaginative play.
6. **Using the Trailer:** The detachable trailer can be used to transport lightweight items such as toys. Ensure the trailer is securely attached before use.



Image: A child happily operating the Smoby Farmer XL pedal tractor outdoors.



Image: A child interacting with the openable hood feature of the Smoby Farmer XL tractor.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your tractor.

- **Cleaning:** Wipe down the tractor and trailer with a damp cloth and mild soap. Avoid harsh chemicals.
- **Lubrication:** Periodically check the chain and pedal mechanisms. Apply a small amount of bicycle chain lubricant if movement becomes stiff.
- **Inspection:** Regularly check all screws, nuts, and bolts for tightness. Tighten any loose fasteners. Inspect wheels and tires for wear or damage.
- **Storage:** Store the tractor in a dry, sheltered area when not in use to protect it from weather elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tractor does not move when pedaling.	Loose or dislodged chain; pedals not properly connected.	Check chain tension and re-seat if necessary. Ensure pedals are securely attached to the crank.
Steering is stiff or unresponsive.	Steering column obstruction; loose connection.	Inspect for debris. Check and tighten steering wheel and column connections.
Horn is not working.	Horn mechanism dislodged or damaged.	Inspect the horn mechanism within the steering wheel. If damaged, contact customer support.
Trailer detaches easily.	Improper hitch connection.	Ensure the trailer hitch is fully engaged and secured to the tractor's rear attachment point.

SPECIFICATIONS

- **Model Number:** 710131
- **Product Dimensions:** 55.91 x 17.32 x 21.46 inches (142 x 44 x 54.5 cm)
- **Item Weight:** 19.36 pounds (8.78 kg)
- **Recommended Age:** 36 months - 6 years
- **Material:** Durable plastic
- **Features:** Adjustable seat, steering wheel with horn, openable hood, detachable trailer.
- **Origin:** Made in France

WARRANTY AND SUPPORT

Smoby products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Smoby website.

For technical support, replacement parts, or any inquiries regarding your Smoby Farmer XL Pedal Tractor, please contact Smoby customer service through their official channels.