

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Be Fun Comfort Tricycle - Model 740417 Instruction Manual

Smoby 740417

Smoby Be Fun Comfort Tricycle - Model 740417 Instruction Manual

Your guide to assembly, operation, and maintenance.

1. INTRODUCTION

The Smoby Be Fun Comfort Tricycle, Model 740417, is an evolutionary 3-in-1 children's bike designed to adapt to your child's growth from approximately 10 months to over 3 years. This tricycle offers a safe, practical, and comfortable riding experience, transitioning through different stages of development.



Image 1.1: The Smoby Be Fun Comfort Tricycle in its initial configuration with parental handle and storage bag.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury.

- **Adult Supervision Required:** Always supervise children when they are using the tricycle.
- **Age Range:** Suitable for children from 10 months to over 3 years.
- **Weight Capacity:** Do not exceed a maximum weight of 22 kilograms (approximately 48.5 lbs).
- **Secure Fastenings:** Regularly check that all screws, bolts, and other fasteners are securely tightened.
- **Safety Features:** Ensure the safety belt and safety bar are correctly used and fastened for younger children.

- **Freewheeling Device:** Utilize the freewheeling device to prevent the child's feet from being caught by the pedals when pushed by an adult.
- **Hazard-Free Environment:** Use the tricycle in a safe environment, away from traffic, stairs, steep inclines, and swimming pools.
- **Protective Gear:** Encourage children to wear appropriate protective gear, such as a helmet, especially as they learn to pedal independently.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all components are present and undamaged. The package should contain the following:

- Tricycle frame and components
- Wheels (front and rear)
- Seat with safety belt
- Parental cane (adjustable)
- Removable storage bag
- Safety bar
- Footrests (foldable)
- Assembly hardware (screws, nuts, etc.)
- Instruction manual (this document)



Image 3.1: The product packaging, illustrating the tricycle's features and components.

4. SETUP AND ASSEMBLY

Assembly is required for the Smoby Be Fun Comfort Tricycle. Please follow these general steps. Refer to the detailed diagrams and specific instructions provided in the physical manual included with your product for precise assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all components listed in Section 3 are present.

2. **Assemble Frame:** Connect the main frame components as per the diagrams. Ensure all connections are firm and secure.
3. **Attach Wheels:** Securely attach the front and rear wheels to the frame. Ensure they rotate freely.
4. **Install Seat and Safety Bar:** Mount the seat onto the frame. For younger children, attach the safety bar and ensure the safety belt is functional. The seat is adjustable to 2 positions for comfort.
5. **Attach Parental Cane:** Insert the parental cane into its designated slot at the rear of the tricycle. Ensure it is securely locked into place. The cane is height-adjustable (3 positions). Attach the removable storage bag to the parental cane.
6. **Install Footrests:** For initial stages, attach the foldable footrests. These can be folded up or removed as the child grows.
7. **Final Check:** Before first use, thoroughly inspect the entire tricycle to ensure all parts are correctly assembled and securely fastened. Pay close attention to wheel attachment, handlebar stability, seat security, and safety belt functionality.



Image 4.1: The removable storage bag, which attaches to the parental cane.

5. OPERATING INSTRUCTIONS (EVOLUTIONARY STAGES)

The Smoby Be Fun Comfort Tricycle is designed to evolve with your child through three main stages:

Stage 1: Parental Control (Approx. 10+ Months)

In this initial stage, the tricycle is fully controlled by the parent. The child is secured in the seat with the safety belt and safety bar. The footrests are deployed for the child's comfort. The parental cane allows the adult to steer and push the tricycle.

- Ensure the safety belt and safety bar are securely fastened around the child.
- Engage the freewheeling device on the front wheel to prevent the pedals from rotating with the wheel, protecting the child's feet.
- Use the parental cane to steer and push the tricycle.





Image 5.1: Tricycle in parental control mode with a young child, safety bar, and parental handle.

Stage 2: Assisted Pedaling (Approx. 15+ Months)

As your child grows and develops motor skills, they can begin to learn pedaling. The safety bar can be removed, but parental control via the cane remains. The footrests can be folded up or removed.

- Remove the safety bar when the child is ready and can sit securely without it.
- Disengage the freewheeling device to allow the child to practice pedaling.
- Continue to use the parental cane for steering and assistance, guiding the child's pedaling efforts.



Image 5.2: Tricycle in assisted pedaling mode, with parental handle still in use.

Stage 3: Independent Riding (Approx. 30+ Months)

Once your child has mastered pedaling and steering, the parental cane can be removed, allowing for independent tricycle use.

- Remove the parental cane by following the instructions in the assembly manual.
- Ensure the child can confidently pedal, steer, and maintain balance independently.
- Always ensure the child is supervised, even during independent riding.



6. MAINTENANCE

Regular maintenance will ensure the longevity and safe operation of your Smoby Be Fun Comfort Tricycle.

- **Cleaning:** Wipe down the tricycle regularly with a damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically inspect all parts for wear, damage, or loose connections. Pay particular attention to the wheels, pedals, steering mechanism, and safety belt.
- **Tighten Fasteners:** Re-tighten any loose screws or bolts as needed. Do not overtighten.
- **Storage:** Store the tricycle in a dry, sheltered area when not in use to protect it from weather elements.

7. TROUBLESHOOTING

If you encounter any issues with your tricycle, consider the following common solutions:

- **Tricycle not steering correctly:** Check if the handlebar is securely attached and if the parental cane is properly engaged/disengaged. Ensure no debris is obstructing the steering mechanism.
- **Pedals not moving or difficult to turn:** Verify that the freewheeling device is in the correct position for the desired mode of operation (engaged for parental push, disengaged for child pedaling). Check for any obstructions around the pedals or chain (if applicable).
- **Unstable ride:** Ensure all wheels are securely attached and that the frame components are tightly fastened. Do not use the tricycle if it feels unstable.
- **Missing parts or damaged components:** Refer to the package contents list. If parts are missing or damaged upon receipt, contact Smoby customer support immediately.

If problems persist after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Smoby
Model Number	740417
Set Name	Be Fun Comfort
Age Range	From 10 months to 3+ years (Manufacturer Minimum Age: 15 months for some features)
Maximum Weight Capacity	22 Kilograms (48.5 lbs)
Item Dimensions (L x W x H)	26.77 x 20.47 x 39.76 inches (68 x 52 x 101 cm)
Item Weight	4785 Grams (10.55 lbs)
Material Type	Plastic, Metal frame

Assembly Required	Yes
Included Components	Tricycle components, parental cane, removable bag

9. WARRANTY AND SUPPORT

Warranty Information

The Smoby Be Fun Comfort Tricycle comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims.

Customer Support

For technical assistance, missing parts, or warranty inquiries, please contact Smoby customer service. Refer to the contact information provided on the product packaging or the official Smoby website.

© 2026 Smoby. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question