

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Gigaset](#) /

> [Gigaset A605A Cordless Phone with Answering Machine User Manual](#)

## Gigaset A605A

# Gigaset A605A Cordless Phone with Answering Machine User Manual

Model: A605A

## INTRODUCTION

This manual provides essential information for the safe and efficient use of your Gigaset A605A cordless phone with an integrated answering machine. Please read these instructions carefully before initial use to ensure proper setup and operation.

## SAFETY INSTRUCTIONS

- Use only the power adapter and batteries supplied with the device.
- Do not expose the phone to extreme temperatures, direct sunlight, or high humidity.
- Avoid using the phone near water or other liquids.
- Do not open the handset or base station. Repairs should only be performed by authorized service personnel.
- Keep the phone out of reach of children.

## PACKAGE CONTENTS

Verify that your package contains the following items:

- 1 Gigaset A605A Handset
- 1 Gigaset A605A Base Station
- 1 Power Adapter for Base Station
- 1 Phone Cord
- 2 AAA Rechargeable Batteries
- 1 Battery Cover
- This User Manual

## SETUP

### 1. Installing the Batteries

Open the battery compartment cover on the back of the handset. Insert the two supplied AAA rechargeable batteries, observing the correct polarity (+/-). Close the battery compartment cover securely.



Image: Rear view of the Gigaset A605A handset, showing the battery compartment. Ensure correct battery polarity when inserting.

## 2. Connecting the Base Station

Place the base station on a flat, non-slip surface. Connect the power adapter to the base station and plug it into a wall outlet. Connect the phone cord to the base station and then to your telephone wall socket.



Image: Gigaset A605A base station with power and telephone line cables connected. The handset is docked in the base.

### 3. Initial Charging

Place the handset in the base station. The handset will begin charging. For optimal battery performance, allow the handset to charge continuously for at least 6-8 hours before its first use, even if the display indicates a full charge earlier.

## OPERATING INSTRUCTIONS

### Making and Receiving Calls

- **To Make a Call:** Press the green call button **(C)**, then dial the number. Alternatively, dial the number first and then press the green call button.
- **To Receive a Call:** When the phone rings, press the green call button **(C)**.
- **To End a Call:** Press the red end call button **(O)**.

## Answering Machine

The Gigaset A605A features an integrated answering machine with up to 20 minutes of recording time.

- **Activating/Deactivating:** Refer to the handset menu for answering machine settings.
- **Playing Messages:** Press the play button on the base station or access through the handset menu.
- **Recording Personal Greeting:** Follow the instructions in the handset menu to record your custom greeting.

## Phonebook

Store up to 100 contacts in the phonebook. Each entry can include a name and number.

- **Adding a Contact:** Navigate to the phonebook menu, select "New Entry," and enter the name and number.
- **Calling from Phonebook:** Open the phonebook, scroll to the desired contact, and press the green call button.

## Hands-free Function

During a call, press the hands-free button (speaker icon) on the handset to activate speakerphone mode. Press it again to switch back to normal handset mode.

## Caller ID

If subscribed to Caller ID service, the caller's number will be displayed on the handset screen before you answer.



Image: The Gigaset A605A handset screen displaying an incoming call number, demonstrating the Caller ID feature.

### **Alarm, Date, and Time**

Set the date and time via the handset menu. An alarm function is also available for reminders.

### **Keypad Lock**

To prevent accidental dialing, you can activate the keypad lock through the handset menu or by pressing and holding the '#' key.

### **MAINTENANCE**

- **Cleaning:** Wipe the handset and base station with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** Use only approved rechargeable batteries. If the phone will not be used for an extended period, remove the batteries.

## TROUBLESHOOTING

Problem	Solution
No display on handset.	Ensure batteries are correctly inserted and charged. Place handset in base station.
Cannot make or receive calls.	Check if the base station is connected to power and the phone line. Ensure the handset is registered to the base.
Poor sound quality.	Move closer to the base station. Check for interference from other electronic devices.
Answering machine not recording.	Check if the answering machine is activated and if there is sufficient recording time available.

## SPECIFICATIONS

**Model:** Gigaset A605A

**Color:** White

**Technology:** DECT

**Answering Machine:** Up to 20 minutes recording time

**Phonebook Capacity:** 100 contacts

**Maximum Handsets:** 4 (per base station)

**Outdoor Range:** Up to 300 meters

**Indoor Range:** Up to 50 meters

**Talk Time:** Up to 14 hours

**Standby Time:** Up to 180 hours

**Batteries:** 2 x AAA rechargeable (included)

**Features:** Caller ID, Backlit Keypad, Hands-free function, Alarm, Date & Time, Keypad Lock, Hearing Aid Compatible

**Base Station Dimensions (H x W x D):** 4.4 x 12.6 x 10.5 cm

**Handset Dimensions (H x W x D):** 15.5 x 4.9 x 2.8 cm

**Handset Weight:** 119 g

**Material:** Plastic

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Gigaset website. Information regarding spare parts and software updates is not available through this manual. You can also visit the [Gigaset Brand Store](#) for additional product information and resources.

