

OXO 11345800

OXO Good Grips Everyday Glass Food Scale 11lbs/5kg - Instruction Manual

Model: 11345800

INTRODUCTION

Achieving precise measurements whether cooking, baking or portioning out meals, just got easier with the OXO Good Grips 11 lb/5kg Everyday Glass Food Scale. This digital glass scale features a slim design to take up less workspace, while providing accurate results. The tare function allows for easy zeroing out of ingredients, ensuring confidence in your recipes. It includes easy universal unit conversion (oz/lb/g/kg/ml) and a large, backlit display for clear reading. Four AAA batteries are included for immediate use.



Image: Top-down view of the OXO Good Grips Everyday Glass Food Scale, showing its sleek black glass surface, digital display, and "ZERO" and "UNIT" buttons.

WHAT'S INCLUDED

- 1 OXO Good Grips Everyday Glass Food Scale
- 4 AAA Batteries

KEY FEATURES

- **Zero Function:** Allows for taring the scale before weighing additional ingredients, ensuring accurate measurements for each component.
- **Digital Screen:** Features large, easy-to-read numbers for clear visibility of measurements.
- **Unit Conversion:** A dedicated button enables quick conversion between ounces, pounds, grams, and kilograms.
- **Glass Platform:** Designed to resist stains and can be easily wiped clean after use.
- **Batteries Included:** Comes with four AAA batteries, ready for immediate operation.

SETUP

1. **Unpack:** Carefully remove the scale and all components from the packaging.
2. **Install Batteries:** Locate the battery compartment on the underside of the scale. Insert the four included AAA batteries, ensuring correct polarity (+/-).
3. **Placement:** Place the scale on a flat, stable, and level surface to ensure accurate readings.
4. **Initial Zeroing:** Press the "ZERO" button to clear the display and set the scale to zero before placing any items on it. This ensures that the weight of any container is not included in your measurement.



Slim shape fits compactly into drawers and cabinets

Image: The slim OXO Food Scale fits compactly into a kitchen drawer, demonstrating its space-saving design.

OPERATING INSTRUCTIONS

1. **Power On:** Press the "ZERO" button (which also functions as the power button) to turn on the scale. The display will light up.
2. **Select Unit:** Press the "UNIT" button repeatedly to cycle through the available measurement units: ounces (oz), pounds (lb), grams (g), and kilograms (kg). Select your desired unit before weighing.
3. **Tare Function (Zeroing a Container):**
 - o Place an empty container on the scale. The display will show its weight.
 - o Press the "ZERO" button. The display will reset to 0.0, effectively "taring" the container's weight.
 - o You can now add ingredients to the container, and the scale will only display the weight of the added

ingredients.

4. **Weighing Ingredients:** Place the item(s) directly onto the glass platform or into a tared container. The weight will be displayed on the backlit screen.
5. **Power Off:** To conserve battery life, the scale will automatically shut off after a period of inactivity. You can also press and hold the "ZERO" button to manually turn it off.



Backlit display features large numbers

Image: A close-up view of the OXO Food Scale's digital display, highlighting the large, backlit numbers for easy reading of measurements.



Universal measurement settings for easy weight conversion

Image: The OXO Food Scale displaying a weight while a bowl of butter cubes sits on its platform, illustrating its universal measurement settings for easy weight conversion.

MAINTENANCE AND CARE

- **Cleaning:** The glass platform is stain-resistant and easy to clean. Wipe the surface with a damp cloth and mild detergent if necessary. Do not immerse the scale in water or use abrasive cleaners.
- **Storage:** Store the scale in a dry place. Its slim design allows it to fit compactly into drawers or cabinets.
- **Battery Replacement:** If the display becomes dim or shows a low battery indicator, replace all four AAA batteries with new ones.



Glass platform is stain-resistant and easy to clean

Image: A hand wiping the glass platform of the OXO Food Scale with a paper towel, demonstrating its easy-to-clean, stain-resistant surface.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace batteries with new AAA batteries.
Inaccurate readings.	Scale not on a flat, stable surface; overloaded; or needs re-zeroing.	Ensure scale is on a level surface. Do not exceed maximum weight capacity (11 lbs/5 kg). Press "ZERO" before weighing.
Display shows "Err".	Scale is overloaded.	Remove items from the scale immediately. Do not exceed 11 lbs/5 kg.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8.5 x 6.25 x 0.75 inches
Item Weight	1.34 Pounds
Model Number	11345800
Manufacturer	OXO
Color	Black
Display Type	LED
Weight Limit	11 lbs / 5 Kilograms
Form Factor	Mini

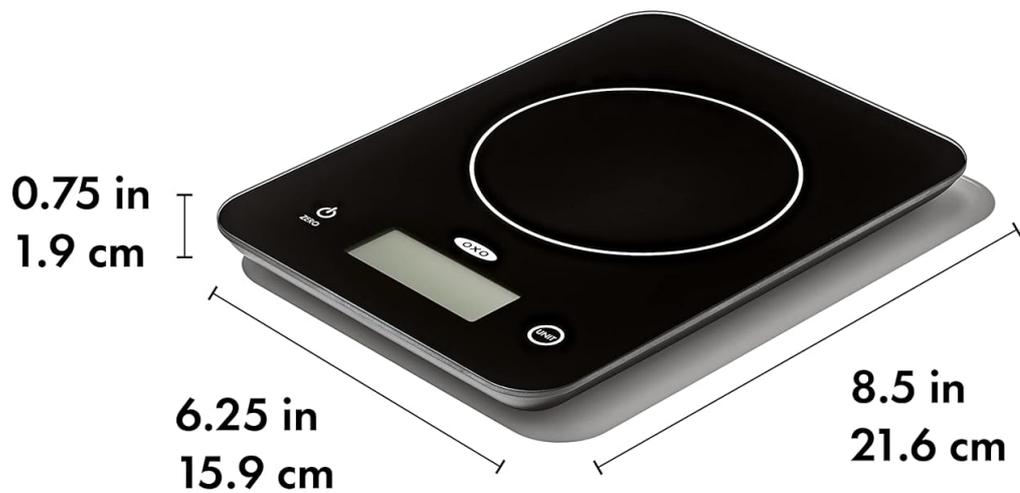


Image: The OXO Food Scale shown with its dimensions labeled: 8.5 inches length, 6.25 inches width, and 0.75 inches height.

For warranty information or product support, please visit the official OXO website or contact their customer service.
Keep your purchase receipt for any warranty claims.
You can find more information and contact details on the [OXO Store on Amazon](#).