

AGSHOME F-Sirène extérieure

AGSHOME Mini Wireless Home Alarm Siren User Manual

Model: F-Sirène extérieure

Brand: AGSHOME

1. INTRODUCTION

The AGSHOME Mini Wireless Home Alarm Siren is designed to enhance the security of your premises. This siren produces a loud 126dB alarm sound when triggered by a compatible AGSHOME wireless alarm system. It is suitable for use in various environments including homes, offices, shops, and garages.

2. PRODUCT COMPONENTS

The package includes the following items:

- AGSHOME Mini Wireless Home Alarm Siren Unit
- Power Adapter (Charger)
- Mounting Screws
- Wall Plugs
- Reset Pin (SIM ejector tool)



Image displaying the contents of the AGSHOME Mini Wireless Home Alarm Siren package, including the siren unit, power adapter, mounting screws, wall plugs, and a reset pin.

3. SPECIFICATIONS

Manufacturer	AGSHOME
Product Dimensions	10.3 x 10.3 x 10.6 cm
Weight	170 g
Model Number	F-Sirène extérieure
Color	H-outdoor
Power Source Type	Battery-powered (rechargeable via charger)
Voltage	3 Volt (DC)
Sound Level	126 Decibel

Batteries Included?	No (internal rechargeable battery)
Batteries Required?	No (uses internal rechargeable battery)



Image showing the dimensions of the AGSHOME Mini Wireless Home Alarm Siren: 5.4cm width and 4.8cm height.

4. SETUP

4.1 Powering the Siren

Connect the included power adapter to the siren's power input port and plug it into a standard electrical outlet. Ensure the siren is fully charged before initial use. The siren operates on an internal rechargeable battery.



Close-up of the power input port on the AGSHOME Mini Wireless Home Alarm Siren and the corresponding power adapter plug.

4.2 Pairing with AGSHOME System

The AGSHOME Mini Wireless Home Alarm Siren is designed to work with AGSHOME wireless alarm systems. Refer to your specific AGSHOME alarm system's manual for detailed instructions on how to pair new wireless devices. Generally, this involves putting the main alarm panel into pairing mode and then activating the siren's pairing function (often a button press or a reset sequence).

4.3 Mounting the Siren

Choose a suitable location for the siren, ideally in a central area or near potential entry points, ensuring it is within range of your AGSHOME alarm system. Use the provided screws and wall plugs to securely mount the siren to a wall or ceiling. Ensure the siren is mounted at a height where its sound can propagate effectively.



Diagram illustrating the wireless coverage and effective placement of the AGSHOME Mini Wireless Home Alarm Siren within a multi-room dwelling.



Front view of the AGSHOME Mini Wireless Home Alarm Siren, ready for mounting.

5. OPERATING INSTRUCTIONS

Once successfully paired with your AGSHOME wireless alarm system, the siren will activate automatically when the alarm system is triggered. This typically occurs when a connected sensor (e.g., door/window sensor, motion sensor) detects an intrusion while the system is armed. The siren will emit a loud 126dB sound to alert occupants and deter intruders.



An illustration depicting the AGSHOME Mini Wireless Home Alarm Siren sounding at 126dB, deterring an intruder attempting to break in through a window.

To disarm the siren, disarm your AGSHOME alarm system using its control panel, remote, or mobile application.

6. MAINTENANCE

6.1 Cleaning

Wipe the siren's exterior with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish. Ensure no liquids enter the device.

6.2 Battery Care

The siren contains an internal rechargeable battery. Keep the siren connected to its power adapter to ensure it remains charged and ready for operation. If the siren is to be stored for an extended period, ensure it is fully charged before storage and recharge it periodically (e.g., every 3-6 months) to maintain battery health.

6.3 Regular Checks

Periodically test your AGSHOME alarm system, including the siren, to ensure all components are functioning correctly. Refer to your main alarm system's manual for testing procedures.

7. TROUBLESHOOTING

7.1 Siren Not Sounding

- **Check Power:** Ensure the siren is properly connected to its power adapter and receiving power.
- **Battery Level:** Confirm the internal battery is charged.
- **Pairing:** Verify that the siren is correctly paired with your AGSHOME alarm system. If unsure, attempt to re-pair the device according to your alarm system's instructions.
- **System Armed:** Ensure your AGSHOME alarm system is armed when testing.
- **Range:** Confirm the siren is within the wireless range of your AGSHOME alarm system. Obstacles like thick walls can reduce signal strength.

7.2 Siren Not Pairing

- **Reset Siren:** Use the provided reset pin to press the reset button on the siren (location typically a small hole). This will restore factory settings and allow for a fresh pairing attempt.
- **Alarm System Pairing Mode:** Ensure your AGSHOME alarm system is actively in pairing mode before attempting to pair the siren.
- **Proximity:** Try pairing the siren closer to the main AGSHOME alarm panel.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your original purchase or visit the official AGSHOME website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question