

[manuals.plus](#) /› [Sandberg](#) /› [Sandberg Powerbank USB-C PD 130W 50000 User Manual](#)

Sandberg Powerbank USB-C PD 130W 50000

Sandberg Powerbank USB-C PD 130W 50000 User Manual

Model: Powerbank USB-C PD 130W 50000

INTRODUCTION

Thank you for choosing the Sandberg Powerbank USB-C PD 130W 50000. This high-capacity mobile charger is designed to provide reliable power for your phone, tablet, and laptop, keeping you connected for weeks. It features a powerful 50,000 mAh capacity, multiple charging ports, and an integrated flashlight. This manual will guide you through the setup, operation, and maintenance of your power bank.

PRODUCT OVERVIEW

The Sandberg Powerbank USB-C PD 130W 50000 is a versatile charging solution. Below are key visual components and their descriptions.



Front View: This image shows the Sandberg Powerbank from a slightly elevated front angle, highlighting its digital display showing "100%" charge, and the various USB-C and USB-A output ports. A braided strap is visible on the right side.



Top View of Ports: This image provides a clear view of the power bank's top surface, detailing the layout of the USB-C (OUT 1, IN 2, IN/OUT 3) and USB-A (OUT 4, OUT 5, OUT 6) ports with their respective power ratings (30W, 18W, 100W). Also visible are the power button and flashlight button.




**Eliminate the limits
of mobile tech!**

Unlock the power to do more.

Outdoor Usage Scenario: This image depicts the power bank in an outdoor setting, emphasizing its portability and utility for users on the go. A person with a backpack is shown in the background, suggesting adventure and freedom from power outlets.



Multi-Device Charging Icon: An illustrative icon showing the power bank connected to a laptop, tablet, and smartphone, signifying its capability to charge multiple device types simultaneously.

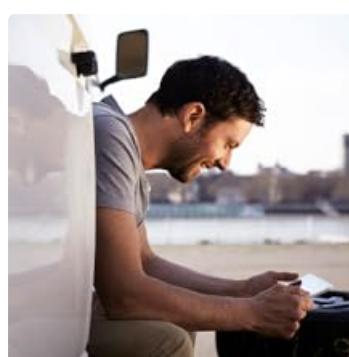

Flashlight Feature Icon: A simple icon depicting a flashlight beam, indicating the power bank's built-in powerful flashlight function.



Always-On Mode Icon: An icon featuring a power button encircled by arrows, symbolizing the "Always-On" mode for continuous power supply to low-power devices.



USB-C Power Delivery Icon: This icon highlights the power bank's two USB-C ports with Power Delivery (PD) capabilities, specifying 100W and 30W outputs for fast charging of compatible devices, including laptops.

SETUP

Initial Charging

Before first use, fully charge your Sandberg Powerbank. Use a compatible USB-C power adapter (not included) and the provided USB-C to USB-C cable (max 100W) or USB-A to USB-C cable (2A) to connect the power bank to a power source. The digital display will show the charging progress.

- Connect the USB-C cable to either the "IN 2" or "IN/OUT 3" port on the power bank.
- Connect the other end of the cable to a suitable USB wall charger or computer USB port.
- The display will show the charging percentage. Charge until it reaches 100%.

Package Contents

- 1 x Sandberg Powerbank USB-C PD 130W 50000
- 1 x Quick Guide
- 1 x USB-C to USB-C cable (max 100W, 50 cm length)
- 1 x USB-A to USB-C cable (2A, 50 cm length)

OPERATING INSTRUCTIONS

Charging Devices

The power bank can charge up to 5 devices simultaneously using its various ports.

1. **Connect your device:** Use a compatible charging cable to connect your device to one of the power bank's output ports:

- **USB-C PD Ports (OUT 1, IN/OUT 3):** Ideal for fast charging laptops, tablets, and smartphones that support USB Power Delivery. OUT 1 provides up to 30W, and IN/OUT 3 provides up to 100W.
- **USB-A Ports (OUT 4, OUT 5, OUT 6):** Suitable for charging smartphones, headphones, and other USB-powered devices. These ports provide up to 18W.

2. **Initiate Charging:** The power bank should automatically begin charging your device. If not, press the power button once to activate the output.

3. **Monitor Charge:** The digital display on the power bank shows the remaining battery percentage.

Using the Flashlight

The power bank features a powerful integrated flashlight.

- **Turn On/Off:** Press the flashlight button (sun icon) once to turn the flashlight on. Press it again to turn it off.

Always-On Mode

For low-power devices that might stop charging due to low current draw, the power bank supports an "Always-On" mode.

- **Activate Always-On:** Double-press the power button to activate Always-On mode. The display may indicate this mode.
- **Deactivate Always-On:** Double-press the power button again to exit Always-On mode, or it will automatically deactivate after a period of inactivity or when the power bank is fully discharged.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your power bank.

- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Use a soft, dry cloth to clean the exterior of the power bank. Do not use liquid cleaners or abrasive materials.
- **Battery Health:** For optimal battery life, avoid fully discharging the power bank regularly. Recharge it when the charge level is low. If storing for extended periods, charge it to about 50-70% every few months.
- **Avoid Drops:** While robust, avoid dropping the power bank, as this can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging	Cable not connected properly; Faulty cable/adapter; Power source issue.	Ensure cables are securely connected. Try a different cable or power adapter. Test the power source with another device.
Device not charging from power bank	Power bank is off; Low power bank battery; Incompatible cable; Device not drawing enough current (for low-power devices).	Press the power button to turn on. Recharge the power bank. Use the correct cable for your device. Activate "Always-On" mode for low-power devices.
Flashlight not working	Flashlight button not pressed correctly; Power bank battery too low.	Ensure a firm press on the flashlight button. Recharge the power bank.

Problem	Possible Cause	Solution
Power bank shuts off unexpectedly	Overload protection; Low battery; Automatic shutdown (if not in Always-On mode for low-power devices).	Reduce the number of connected devices. Recharge the power bank. Activate "Always-On" mode if charging a low-power device.

SPECIFICATIONS

Feature	Detail
Model Name	Powerbank USB-C PD 130W 50000
Brand	Sandberg
Capacity	50,000 mAh / 185 Wh
Battery Type	Lithium-Ion
Input Ports	2 x USB-C
Output Ports	2 x USB-C, 3 x USB-A
USB-C PD Output (OUT 1)	Up to 30W
USB-C PD Output (IN/OUT 3)	Up to 100W
USB-A Output (OUT 4, 5, 6)	Up to 18W (shared)
Flashlight Power	2 (modes/intensity)
Display	Charge status display
Special Features	Supports Always-On mode, Integrated flashlight
Dimensions	15 x 5 x 7 cm
Weight	1052 g

WARRANTY AND SUPPORT

Sandberg products are known for their quality and durability. This power bank comes with a **5-year warranty**, ensuring peace of mind.

For technical support, warranty claims, or further inquiries, please visit the official Sandberg website or contact their customer service directly. Refer to the quick guide included in your package for specific contact details or regional support information.

Online Resources: [Sandberg Official Website](#)