

[manuals.plus](#) /

› [TPOB](#) /

› [TPOB Ghost X Beard Trimmer Hair Clippers User Manual](#)

TPOB Ghost X

TPOB Ghost X Beard Trimmer Hair Clippers User Manual

Model: Ghost X

1. SAFETY INFORMATION

Please read all safety instructions carefully before using the TPOB Ghost X Trimmer.

- Always keep the blade guard on when not in use.
- Avoid contact with skin and eyes.
- Do not submerge the trimmer in water.
- Clean and dry the trimmer after each use.
- Store in a dry place.
- Keep out of reach of children.

2. SETUP

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the trimmer and accessories for any signs of damage. Ensure all listed items are present.



Image: TPOB Ghost X Trimmer and its accessories neatly packaged in the retail box.

2.2 Charging the Trimmer

The TPOB Ghost X Trimmer is powered by a Lithium Ion battery. For optimal performance, fully charge the trimmer before its first use.

1. Connect the charging cable to the charging base.
2. Place the trimmer onto the charging base.
3. Plug the charging cable into a suitable power outlet.
4. The indicator light on the trimmer will illuminate (typically red) to show it is charging. It will turn green when fully charged.
5. A full charge takes approximately 1.5 hours.





Image: The TPOB Ghost X Trimmer resting on its dedicated charging base, indicating its cordless and rechargeable design.

2.3 Attaching Guide Combs

The trimmer includes color-coded guide combs for various hair lengths. Select the appropriate comb for your desired style.

1. Ensure the trimmer is turned off.
2. Align the chosen guide comb with the trimmer blade.
3. Gently push the comb onto the blade until it clicks securely into place.
4. To remove, gently lift the comb from the back and slide it off.



Image: A collection of TPOB Ghost X Trimmer accessories, featuring various color-coded guide combs, a cleaning brush, and blade oil.

3. OPERATING THE TRIMMER

3.1 Basic Trimming Instructions

The TPOB Ghost X is designed for precise trimming of beards, hair, and edges. Its X Soft Skin Safe Blade and DLC blades ensure a smooth and sharp cut.

1. Ensure the trimmer is fully charged.
2. Attach the desired guide comb for the intended hair length. For close trimming or edging, the trimmer can be used without a comb.
3. Turn on the trimmer using the power switch. The motor operates at 7000 RPM for efficient cutting.
4. Gently run the trimmer against the direction of hair growth for an even cut. Use light pressure.
5. For detailing and edging, use the T-blade carefully to create sharp lines.
6. After use, turn off the trimmer.





Image: A clear front view of the TPOB Ghost X Trimmer, highlighting its ergonomic design and T-blade.

3.2 Instructional Videos

Video: TPOB Ghost X Beard & Hair Trimmer: Quiet, Cordless, Powerful. This video demonstrates the quiet operation and powerful performance of the trimmer.

Video: TPOB Ghost X Trimmer Review: Sharp, Powerful, Pro Results. Watch this video for a demonstration of the trimmer's sharp cutting capabilities and professional results.

Video: TPOB Ghost X Review - Precise and Powerful. This video highlights the precision and power of the TPOB Ghost X Trimmer for various grooming needs.

Video: The pissed off barber Trimmer. A barber demonstrates the effective use of the TPOB Ghost X Trimmer for professional grooming.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your TPOB Ghost X Trimmer.

4.1 Cleaning the Blades

1. After each use, turn off the trimmer and remove any attached guide combs.
2. Use the provided cleaning brush to remove loose hair from the blades and the trimmer head.

3. For a more thorough clean, you may carefully detach the blade assembly if your model allows, and brush away debris.
4. Wipe the exterior of the trimmer with a clean, dry cloth.
5. Ensure the trimmer and blades are completely dry before storage.

4.2 Oiling the Blades

To maintain the sharpness and smooth operation of the DLC blades, apply a small amount of blade oil regularly.

1. With the trimmer turned off, apply 1-2 drops of the provided blade oil across the top of the blades.
2. Turn the trimmer on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a clean cloth.

5. TROUBLESHOOTING

If you encounter issues with your TPOB Ghost X Trimmer, refer to the following common solutions:

- **Trimmer not turning on:** Ensure the battery is fully charged. Connect the trimmer to its charging base and allow it to charge for the recommended time.
- **Poor cutting performance:** Clean the blades thoroughly to remove any accumulated hair or debris. Apply blade oil as per maintenance instructions. If the issue persists, the blades may need replacement.
- **Excessive noise or vibration:** This could indicate a need for blade cleaning and oiling. Ensure the blade assembly is correctly seated.
- **Battery not holding charge:** Ensure the charging cable and base are properly connected and functioning. If the battery life has significantly diminished over time, it may be reaching the end of its lifespan.

For further assistance, please contact TPOB customer support.

6. SPECIFICATIONS

Feature	Detail
Model	Ghost X
Brand	TPOB
Power Source	Battery Powered (Cordless)
Battery Type	1 Lithium Ion battery required
Motor Speed	7000 RPM
Blade Type	X Soft Skin Safe Blade, DLC Blades
Charge Time	Approx. 1.5 hours
Product Dimensions	10 x 3 x 3 inches
Item Weight	1.1 Pounds (0.5 Kilograms)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

For detailed warranty information regarding your TPOB Ghost X Trimmer, please refer to the documentation included in your product packaging or visit the official TPOB website. Warranty terms and conditions may vary.

7.2 Customer Support

If you require assistance, have questions about your product, or need to report an issue, please contact TPOB customer support through their official channels. Contact information can typically be found on the product packaging or the manufacturer's website.