

B0BP1BPHSX

Car MP3 Player RGB Ambient Lighting User Manual

Model: B0BP1BPHSX | Brand: Generic

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Car MP3 Player with RGB Ambient Lighting. This device features Bluetooth 5.0, noise reduction, hands-free calling, dual USB ports, and PD Type C charging, along with support for USB disk music playback.

PRODUCT OVERVIEW

Product parameters



Positive pole



Name	Model
Car Wireless player	C13
Frequency response	FM transmit frequency
20Hz~15Khz	87.5~108.0Mhz
Wireless version	Transmission distance
Wireless 5.0	10~15m
Working voltage	USB output
10V-24V	QC3.0+ PD18W

Figure 1: Product Diagram with Labeled Components. This image illustrates the various parts of the Car MP3 Player, including the display, control knob, USB ports, and buttons.

The Car MP3 Player is designed for in-car entertainment and convenience. Key components include:

- **Display:** Shows FM frequency and other status indicators.
- **Multi-function Knob:** Used for adjusting volume, changing FM frequency, and answering/ending calls.
- **USB Ports (QC3.0 & PD18W Type-C):** For charging devices and reading USB disks.
- **Light Button:** Controls the RGB ambient lighting modes.
- **CH Button:** Used for FM frequency adjustment.
- **Previous/Next Song Buttons:** For music navigation.



Figure 2: Car MP3 Player. This image shows the overall design of the Car MP3 Player, highlighting its compact form factor and RGB lighting.

SETUP

- 1. Insert into Car Cigarette Lighter:** Plug the device firmly into your car's 12V/24V cigarette lighter socket. The device will power on automatically.
- 2. Set FM Frequency:**
 - Press the "CH" button. The display will show the current FM frequency.
 - Rotate the multi-function knob left or right to adjust the frequency.
 - Tune your car's FM radio to the same frequency as the device to establish a connection. Choose a frequency that is not occupied by a local radio station for best audio quality.
- 3. Pair with Bluetooth:**
 - On your mobile device, enable Bluetooth and search for available devices.
 - Select the device named "C13" (or similar, refer to device display if different) from the list to pair.
 - Once paired, a voice prompt will confirm the connection.

OPERATING INSTRUCTIONS

Music Playback

- **Bluetooth Music:** After successful Bluetooth pairing, open your music player app on your phone. Audio will be transmitted through the car's speakers.
- **USB Disk Music:** Insert a USB flash drive (U disk) containing MP3 files into the designated USB port.

The device will automatically detect and play music from the drive.

- **Volume Control:** Rotate the multi-function knob to adjust the volume.
- **Track Navigation:** Use the previous/next song buttons to skip tracks.

Hands-Free Calling

- **Answer Call:** Press the multi-function knob once to answer an incoming call.
- **End Call:** Press the multi-function knob once during a call to hang up.
- **Reject Call:** Press and hold the multi-function knob to reject an incoming call.
- **Redial Last Number:** Double-press the multi-function knob to redial the last dialed number.

Charging Devices

- Connect your device (e.g., smartphone, tablet) to the QC3.0 USB port or the PD18W Type-C port using a compatible charging cable.
- The device supports fast charging for compatible devices.

Ambient Lighting Control

- Press the "Light" button to cycle through the 7 available color modes and 1 lighting cycle mode.
- Press again to select your desired color or lighting effect.

MAINTENANCE

- Keep the device dry and clean. Avoid exposure to moisture or extreme temperatures.
- Do not disassemble the device. Repairs should only be performed by qualified personnel.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure the cigarette lighter socket is clean and free of debris for optimal connection.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Device not turning on.	Loose connection; Car cigarette lighter socket fault; Car battery low.	Ensure the device is firmly plugged in. Check car's cigarette lighter fuse. Check car battery.
Static/Noise during playback.	FM frequency interference; Volume too low on device or car radio.	Change to an unoccupied FM frequency. Increase volume on both the device and car radio.
Bluetooth not connecting.	Device not in pairing mode; Bluetooth disabled on phone; Interference.	Ensure device is powered on. Restart Bluetooth on your phone. Try pairing again.
USB disk not playing.	Unsupported file format; USB disk corrupted; USB disk not inserted correctly.	Ensure music files are in MP3 format. Try a different USB disk. Reinsert the USB disk.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model	C13 (B0BP1BPHSX)
Bluetooth Version	5.0
Frequency Response	20Hz~15KHz
FM Transmit Frequency	87.5~108.0MHz
Transmission Distance	10~15m
Working Voltage	10V-24V
USB Output	QC3.0 + PD18W
Supported Audio Formats	MP3
Ambient Lighting	7 colors + 1 cycle mode
Package Dimensions	2.8 x 2 x 1.6 inches
Item Weight	3.52 ounces

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact the seller/manufacturer directly. Keep your proof of purchase for warranty claims. This device is manufactured in China.