

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [GEEZER](#) /

> [GEEZER Wireless Keyboard and Mouse Combo \(Model G100\) Instruction Manual](#)

GEEZER G100

GEEZER Wireless Keyboard and Mouse Combo (Model G100) Instruction Manual

INTRODUCTION

Thank you for choosing the GEEZER Wireless Keyboard and Mouse Combo, Model G100. This combo provides a full-sized keyboard with 104 round keycaps and a responsive optical mouse, both connecting wirelessly via a single 2.4G USB receiver. Designed for comfort and efficiency, this manual will guide you through the setup, operation, and maintenance of your new peripheral set.



Image: The GEEZER Wireless Keyboard and Mouse Combo in Sky Blue, featuring the keyboard, mouse, and a small USB receiver.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x Nano USB Receiver (stored inside the mouse)
- 1 x Instruction Manual

SETUP INSTRUCTIONS

1. Battery Installation

1. **For the Mouse:** Open the battery compartment cover on the underside of the mouse. Insert one (1) AA battery, ensuring correct polarity. Close the cover.
2. **For the Keyboard:** Open the battery compartment cover on the underside of the keyboard. Insert one (1) AA battery, ensuring correct polarity. Close the cover.

2. Connect the USB Receiver

1. Locate the Nano USB receiver, which is typically stored in a slot within the mouse's battery compartment for safekeeping.
2. Plug the Nano USB receiver into an available USB port on your computer (PC, Laptop, Desktop, etc.).



Image: A close-up view of the Nano USB receiver connected to a laptop, demonstrating the 2.4G wireless connection with an effective range of up to 35 feet.

3. Power On

- Locate the ON/OFF switch on the underside of both the keyboard and the mouse.
- Slide the switches to the 'ON' position.

4. Automatic Connection (Plug & Play)

The keyboard and mouse should automatically connect to your computer once the USB receiver is plugged in and the devices are powered on. No additional drivers are typically required for most operating systems.

OPERATING INSTRUCTIONS

Keyboard Functions

- **Standard Typing:** The keyboard features a full-size 104-key QWERTY layout with comfortable round keycaps for a unique typing experience.
- **Multimedia Hotkeys:** Utilize the function keys (F1-F12) in conjunction with the 'Fn' key for quick access to multimedia controls and system shortcuts. These include volume control, media playback, and more.



Image: A visual representation of the keyboard's 13 hotkey functions, accessible via the 'Fn' key, for enhanced productivity and media control.

Mouse Functions

- **Clicking and Scrolling:** The mouse provides standard left-click, right-click, and a scroll wheel for navigation. Its optical design ensures precise and smooth cursor control.

Ergonomic Design

- The keyboard is designed with adjustable foldable stands on the underside, allowing you to set a comfortable typing angle to reduce wrist fatigue during extended use.

Ergonomic Design

Release wrist pressure and work effectively



Image: A side profile of the GEEZER keyboard, highlighting its ergonomic design with integrated foldable stands and non-slip silicone pads for stability.

Intelligent Auto-Sleep Function

- To conserve battery life, both the keyboard and mouse will enter an automatic sleep mode after a period of inactivity (approximately one minute for the keyboard, 5-10 minutes for the mouse).
- To wake the devices, simply click the mouse or press any key on the keyboard.



Intelligent Auto-Sleep

Enter sleeping automatically while not using,
save battery life and reduce battery replacement

Image: The GEEZER keyboard and mouse resting on a desk in a low-light setting, illustrating the intelligent auto-sleep feature that conserves battery power.

MAINTENANCE

Cleaning

- The keyboard features detachable keycaps, allowing for easy cleaning of dust and debris that may accumulate underneath.
- Use the provided cleaning brush (if included) or a soft, dry cloth to gently clean the keycaps and the keyboard base. Avoid using harsh chemicals or excessive moisture.



Detachable Keycaps

Include a brush to deep clean for the keyboard

Image: A close-up view of the keyboard with several round keycaps removed, showcasing the included cleaning brush for thorough maintenance.

Battery Replacement

- When the keyboard or mouse performance degrades, it is likely time to replace the batteries. Follow the battery installation steps outlined in the 'Setup Instructions' section.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

- **No Connection or Intermittent Connection:**
 - Ensure both the keyboard and mouse are switched 'ON'.
 - Check that the Nano USB receiver is securely plugged into a working USB port on your computer. Try a different USB port if necessary.
 - Verify that the batteries in both devices are fresh and correctly installed.
 - Move the keyboard and mouse closer to the USB receiver to ensure they are within the 10m/33ft operating range.
 - Avoid placing the receiver near other wireless devices or large metal objects that might cause interference.

- **Keys Not Responding or Delayed Input:**

- Check battery levels and replace if low.
- Clean under the keycaps to remove any debris that might be obstructing key presses.
- Ensure the keyboard is not in sleep mode; press any key to wake it.

- **Mouse Not Responding or Glitchy Movement:**

- Check battery levels and replace if low.
- Ensure the mouse power switch is 'ON'.
- Clean the optical sensor on the underside of the mouse.
- Ensure the mouse is not in sleep mode; click to wake it.

SPECIFICATIONS

Product Model	G100
Keyboard Size	436 x 182 x 24(h) ±2mm
Keyboard Weight	545g ±5g
Keyboard Button Quantity	106 keys
Mouse Size	103 x 69 x 35(h) ±2mm
Mouse Weight	75g ±5g
Mouse Button Quantity	3 keys
System Compatibility	Windows XP/X/Win 7/8/10/2000/ME Vista iOS OS, etc.
Connectivity Technology	2.4G Wireless
Batteries Required	2 x AA batteries (one for keyboard, one for mouse)
Operating Range	Up to 10m / 33ft

Full-Size Keyboard Combo

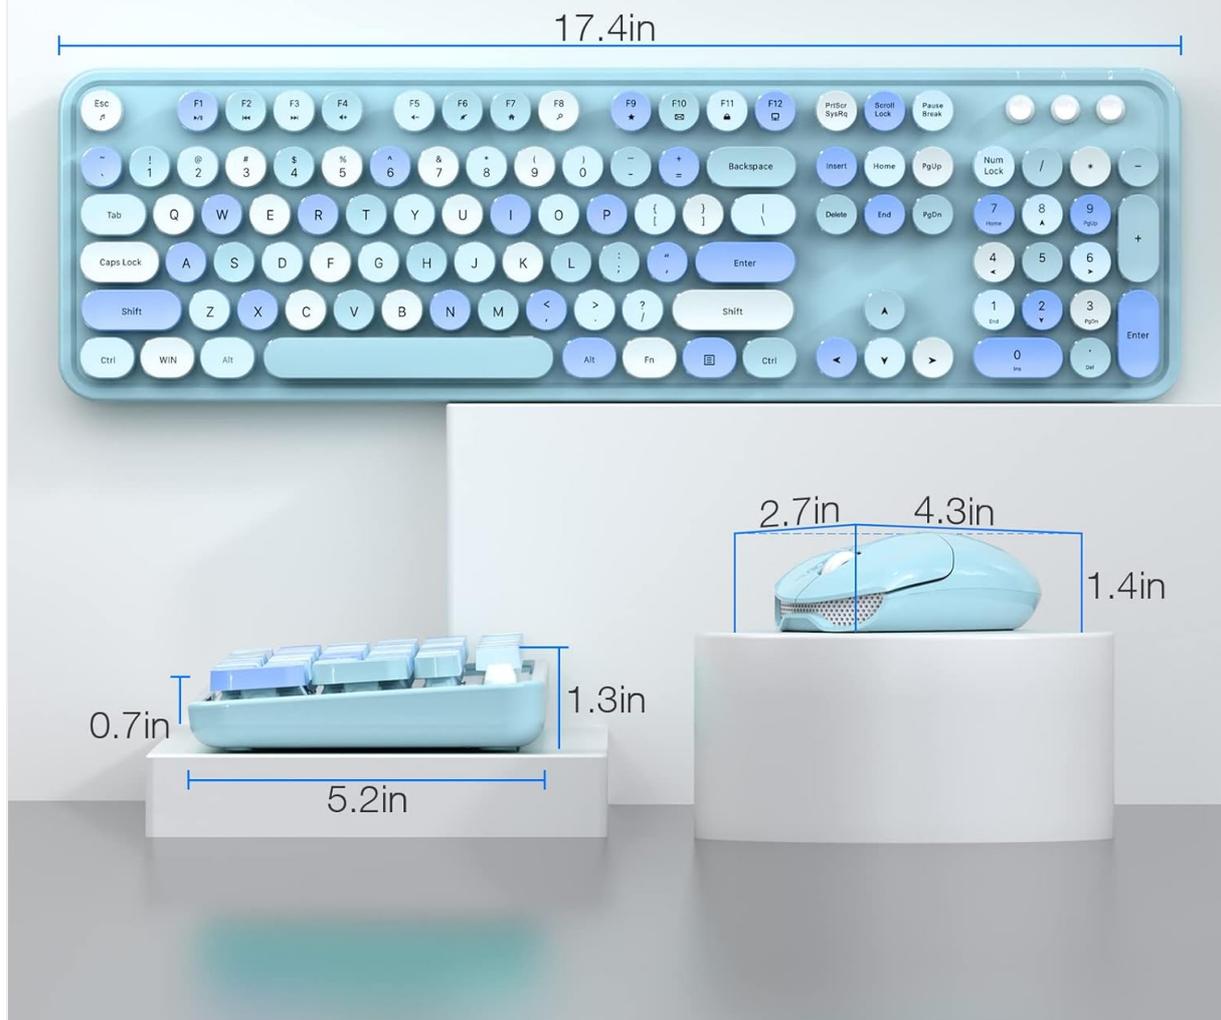


Image: A detailed diagram illustrating the physical dimensions of the full-size GEEZER Wireless Keyboard and Mouse.



Image: An illustration demonstrating the broad compatibility of the GEEZER Wireless Keyboard and Mouse Combo with operating systems such as Windows XP/Vista, Windows 7/8, Windows 10, and various computer types.

WARRANTY AND SUPPORT

For any issues encountered during the use of your GEEZER Wireless Keyboard and Mouse Combo,

please contact us directly via Amazon email. Our support team aims to respond within 12 hours and provide satisfactory solutions.