



Manuals.plus /

› VINABTY /

› VINABTY AKB75875302 Replacement Remote Control for LG Smart TVs User Manual

VINABTY AKB75875302

VINABTY AKB75875302 Replacement Remote Control User Manual

For LG Smart TVs

INTRODUCTION

This manual provides instructions for the VINABTY AKB75875302 replacement remote control, designed for various LG Smart TV models. This remote control requires no programming and operates using infrared technology.

SETUP

Battery Installation

The remote control requires two AAA batteries (not included).



Image: Front view of the VINABTY AKB75875302 remote control.





Image: Back view of the remote control, highlighting the battery compartment.

To install batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

OPERATING INSTRUCTIONS

Compatibility

This remote control is compatible with various LG Smart TV models, including but not limited to:

- **UN73 Series:** 49UN7340PVC, 49UN7300PTC, 49UN7350PTD, 50UN7340PVC, 50UN7300PTC, 50UN7350PTD, 50UN731C0GC, 55UN7340PVC, 55UN7300PTC, 55UN7350PTD, 55UN731C0GC, 65UN7340PVC, 65UN731C0GC, 65UN7300PTC, 65UN7350PTD, 70UN7380PVC, 70UN7300PTC, 70UN7350PTD.
- **UN72 Series:** 49UN7290PTF, 49UN7240PVG, 50UN7200PTF, 50UN7240PVG, 55UN7200PTF, 55UN7290PTF, 55UN7240PVG, 65UN7200PTF, 65UN7290PTF, 65UN7240PVG, 49UN7200PTF.
- **UM71 Series:** 60UM7100PTA, 49UM7100PTA, 55UM7100PTA, 55UM7100PVB, 60UM7100PTA.ATS, 55UM7100PTA.ATC.

Basic Operation

No programming is required. Once batteries are installed, point the remote control directly at your LG Smart TV and press the desired function buttons.

Ensure there are no obstructions between the remote control and the TV's infrared receiver.



Image: User operating the remote control with a television.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and potential damage to the remote control.

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Remote Control Not Responding

If the remote control is not responding to your TV:

1. **Check Batteries:** Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old or depleted batteries with new AAA batteries.
2. **Line of Sight:** Verify that there are no obstructions between the remote control and the TV's infrared receiver. The remote control operates via infrared, requiring a clear path.
3. **Distance:** Ensure you are within the effective operating range (up to 33 feet) of the TV.
4. **TV Power:** Confirm that your TV is powered on and functioning correctly.

SPECIFICATIONS

Feature	Detail
Brand	VINABTY
Model Number	AKB75875302
Connectivity Technology	Infrared
Compatible Devices	Television (LG Smart TV)
Battery Type	2 x AAA (not included)
Maximum Range	33 Feet
Controller Type	Button Control
Button Quantity	30
Color	BLACK
Item Weight	2.6 Ounces
Item Dimensions (L x W x H)	5"L x 1.9"W x 0.5"H

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.